

[Manuals.plus](#) /

› [Tekswamp](#) /

› Tekswamp Replacement Remote Control for Toshiba SD-V394 User Manual

Tekswamp SD-V394

Tekswamp Replacement Remote Control for Toshiba SD-V394 User Manual

INTRODUCTION

This manual provides instructions for the Tekswamp Replacement Remote Control, designed for use with the Toshiba SD-V394 device. This remote control is ready to use without additional programming for most functions. It is engineered to provide essential controls such as power on/off, menu navigation, and input signal selection. Please note that some advanced or device-specific functions, like page flip, keystone correction, or video adjustments, may not be fully supported or may operate differently than an original remote. This remote does not include a laser pointer function.

PRODUCT FEATURES

- **Ergonomic Design:** Features comfortable, easy-to-reach buttons within a compact, rectangular body, suitable for daily use and portability.
- **Low Power Consumption:** The electrical circuit is designed for minimal power usage, ensuring operation even when batteries are nearing depletion.
- **ON Indicator:** An indicator light illuminates when any active button is pressed, confirming proper remote function and infrared signal transmission.
- **Durable Construction:** Manufactured from strong, durable plastic to resist breakage. Buttons are designed to be comfortable yet not overly sensitive, preventing accidental presses and wear.
- **Security Screw:** Includes a childproofing security screw to prevent unauthorized access to internal components, addressing potential choking hazards.

SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. If present, loosen the security screw on the battery compartment cover using a small Phillips head screwdriver.

3. Slide the battery compartment cover downwards or outwards to remove it.
4. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
5. Replace the battery compartment cover by sliding it back into place until it clicks securely.
6. If applicable, tighten the security screw to secure the cover.



Image: Bottom view of the remote control, highlighting the battery compartment cover.



Image: The remote control with the battery compartment open, illustrating the correct orientation for inserting AAA batteries.

OPERATING INSTRUCTIONS

This remote control is designed for immediate use with your Toshiba SD-V394 device without requiring any complex programming. Ensure there is a clear line of sight between the remote's infrared emitter and your device's receiver.

Basic Functions

- **Power On/Off:** Press the **POWER** button (usually red) to turn your device on or off.
- **Menu Navigation:** Use the directional arrow buttons (**UP**, **DOWN**, **LEFT**, **RIGHT**) and the **OK** button (or **ENTER**) to navigate through your device's on-screen menus.
- **Input Signal Selection:** The **SRC** or **INPUT** button allows you to cycle through available input sources on your device.
- **Volume Control:** Use the **V+** and **V-** buttons to adjust the volume.
- **Channel/Track Selection:** Use the **CH+** and **CH-** buttons or number pad for channel/track selection.



Image: Top-down view of the remote control, illustrating the layout of all buttons for various functions.

Advanced Functions

While the remote provides most common functions, some advanced features specific to your Toshiba SD-V394 may not be fully supported or may require different button combinations. These can include:

- Page flip functions
- Keystone correction
- Detailed video adjustment settings

Refer to your Toshiba SD-V394's original manual for specific instructions on these advanced features if they are not responsive with this replacement remote.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the ON indicator light does not illuminate consistently. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to device.	Dead or weak batteries. No clear line of sight to the device. Infrared receiver on device is obstructed.	Replace both AAA batteries with new ones. Ensure nothing is blocking the path between the remote and the device. Check if the device's IR receiver is clean and unobstructed.
Some specific functions do not work.	Function not supported by this replacement remote. Device-specific function requiring original remote.	This remote provides most common functions, but not all advanced or highly specific features may be replicated. Consult your Toshiba SD-V394's original manual for these functions.
ON Indicator light does not illuminate.	Batteries are completely dead or incorrectly inserted. Remote control malfunction.	Check battery orientation and replace with new batteries. If problem persists after battery replacement, contact customer support.

SPECIFICATIONS

- **Brand:** Tekswamp
- **Model Number (Remote):** TeK-311407
- **Compatible Device:** Toshiba SD-V394 (DVD/Blu-ray Player)
- **Connectivity Technology:** Infrared
- **Maximum Range:** 7 Meters (approximately 23 feet)
- **Power Source:** 2 x AAA Batteries (not included)
- **Button Quantity:** 31
- **Color:** Black
- **Item Weight:** 2 Ounces
- **UPC:** 790913719211

WARRANTY AND SUPPORT

For any issues or inquiries regarding your Tekswamp Replacement Remote Control, please contact the seller or manufacturer directly. While specific warranty details are not provided in this manual, most products come with a standard return or replacement policy. Refer to your purchase documentation for details on returns and customer service.

Seller: Tekswamp

For further assistance, you may visit the [Tekswamp Store on Amazon](#).

