

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLS](#) /
- › [BLS T01L LED Closet Light User Manual](#)

BLS T01L

BLS T01L LED Closet Light User Manual

Model: T01L

1. INTRODUCTION

The BLS T01L LED Closet Light is a versatile, motion-sensing lighting solution designed for various indoor applications. It features 20 super bright LEDs, offering 180 lumens of soft white light. This light can be powered by 3 AA batteries for wireless operation or via a 5V USB DC input for constant lighting. Its adjustable light beam and motion sensor provide customizable illumination and detection.

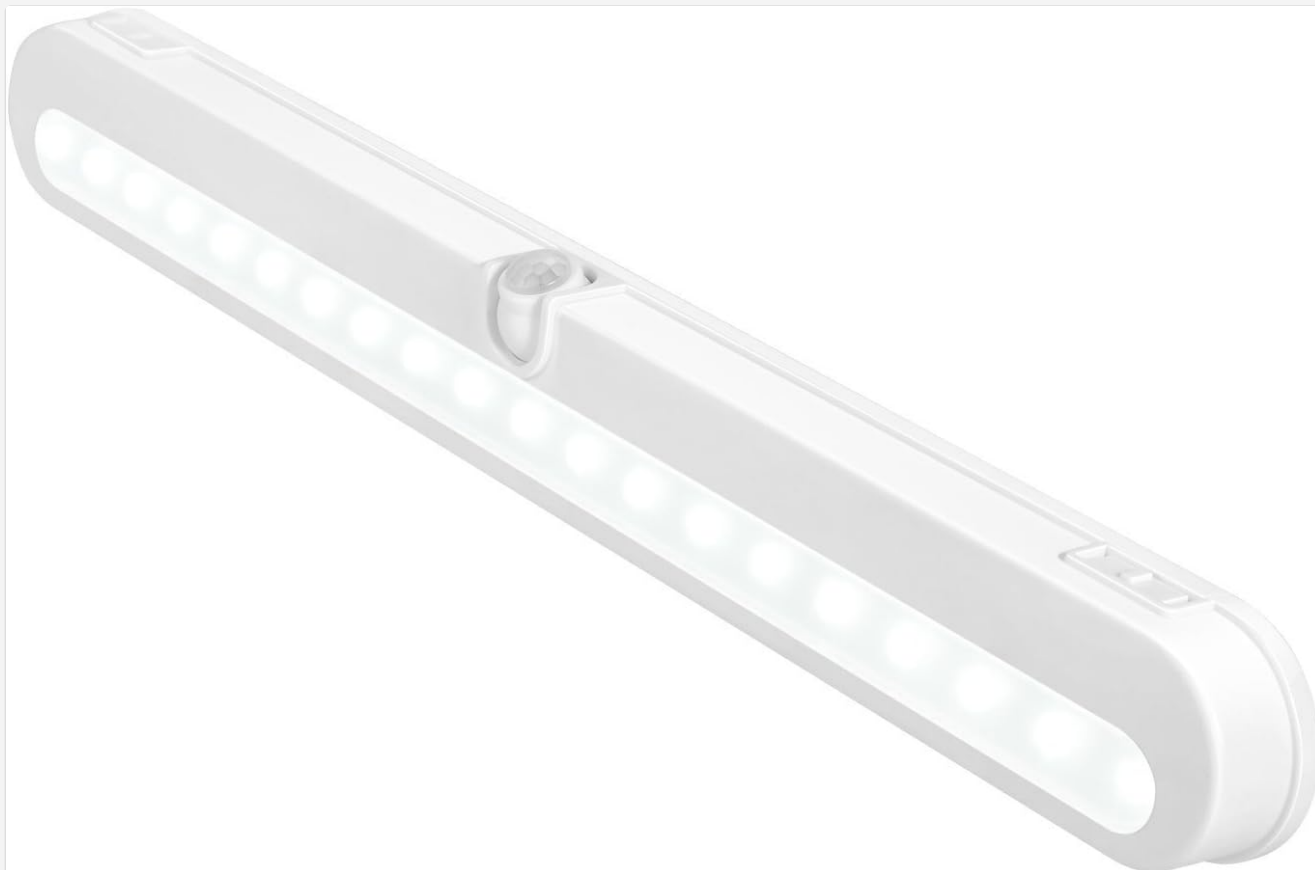


Image 1.1: The BLS T01L LED Closet Light, a 14-inch white light bar with a central motion sensor.

2. WHAT'S IN THE BOX

Please verify that all components are present upon opening the package:

- 1 x BLS Under Cabinet Light (Model T01L)
- 1 x DC Cable
- 2 x 3M Adhesive Tapes
- 1 x Instruction Manual (this document)



**Powered by 3 AA Batteries (Batteries Not Included)
or Powered by 5 Volts USB DC Cable for Constant Lighting**

Image 2.1: The BLS T01L LED Closet Light shown with its packaging, DC cable, and mounting accessories.

3. SPECIFICATIONS

Model Name	T01L
Brand	BLS
Light Source Type	LED (20 LEDs)
Brightness	180 Lumens

Color Temperature	6000 Kelvin (Cool White)
Wattage	2 Watts
Power Source	3 x AA Batteries (not included) or 5V USB DC Input
Product Dimensions	14.7"L x 2.6"W x 1.1"H
Item Weight	7.8 ounces (220 Grams)
Special Features	Cordless, Motion Activated, Adjustable Angle, Adjustable Motion Sensor Sensitivity
Control Method	Slide Switch (Auto/On/Off)
Installation Type	Screws or 3M Adhesive Tape
Indoor/Outdoor Usage	Indoor

4. SETUP AND INSTALLATION

Follow these steps to set up your BLS T01L LED Closet Light:

4.1. Powering the Device

The light can be powered by 3 AA batteries or a 5V USB DC input.

1. Battery Installation:

- Locate the battery compartment on the back of the light.
- Gently push to open the center part of the battery compartment cover.
- Insert three AA batteries (not included). One battery slides into the hole on the left, the second into the hole on the right, and the third goes into the open center between the first two. Ensure correct polarity (+/-).
- Close the battery compartment cover securely.

2. USB DC Power:

- Connect the provided DC cable to the light's DC input port.
- Plug the other end of the DC cable into a 5V USB power source (e.g., USB wall adapter, power bank).
- *Note:* If using USB DC power, it is recommended to remove the AA batteries to prevent potential issues or unnecessary battery drain.

Abundant Soft Light from 20 Super Bright LED



**Powered by 3 AA batteries(Not Included)
or
USB Cable (Included) 37"**



Image 4.1: Diagram illustrating the 14-inch length of the light and its power options: 3 AA batteries or USB cable.

4.2. Mounting the Light

The BLS T01L offers multiple installation options:

- **Adhesive Mounting:** Peel the backing from the 3M adhesive tapes and firmly press the light onto a clean, dry surface.
- **Screw Mounting:** Use the provided screws to secure the light to the desired surface. This method offers a more permanent installation.

The light can be mounted either horizontally or vertically, depending on your application needs.



► Multiple Installation Options:

* **Horizontally**

* **Vertically**

• **With Screw**

• **With new Update 3M sticker**

Image 4.2: Diagram showing horizontal and vertical installation options using screws or 3M adhesive stickers.

5. OPERATING INSTRUCTIONS

5.1. Mode Selection

The light features a slide switch with three modes:

- **AUTO Mode:** The light will automatically turn on when motion is detected within 10 feet in a dark environment. It will remain on for 20 seconds after motion ceases. The built-in light sensor ensures it only activates when ambient light is low (e.g., at night).
- **ON Mode:** The light will remain continuously on, regardless of motion or ambient light conditions.
- **OFF Mode:** The light will remain off.

5.2. Adjusting Motion Sensor Sensitivity

The motion sensor can be adjusted to modify its detection sensitivity and range:

- The motion sensor module is designed to swivel. Gently rotate the sensor to adjust its detection angle.
- This allows you to fine-tune the area where motion is detected, preventing unwanted activations.

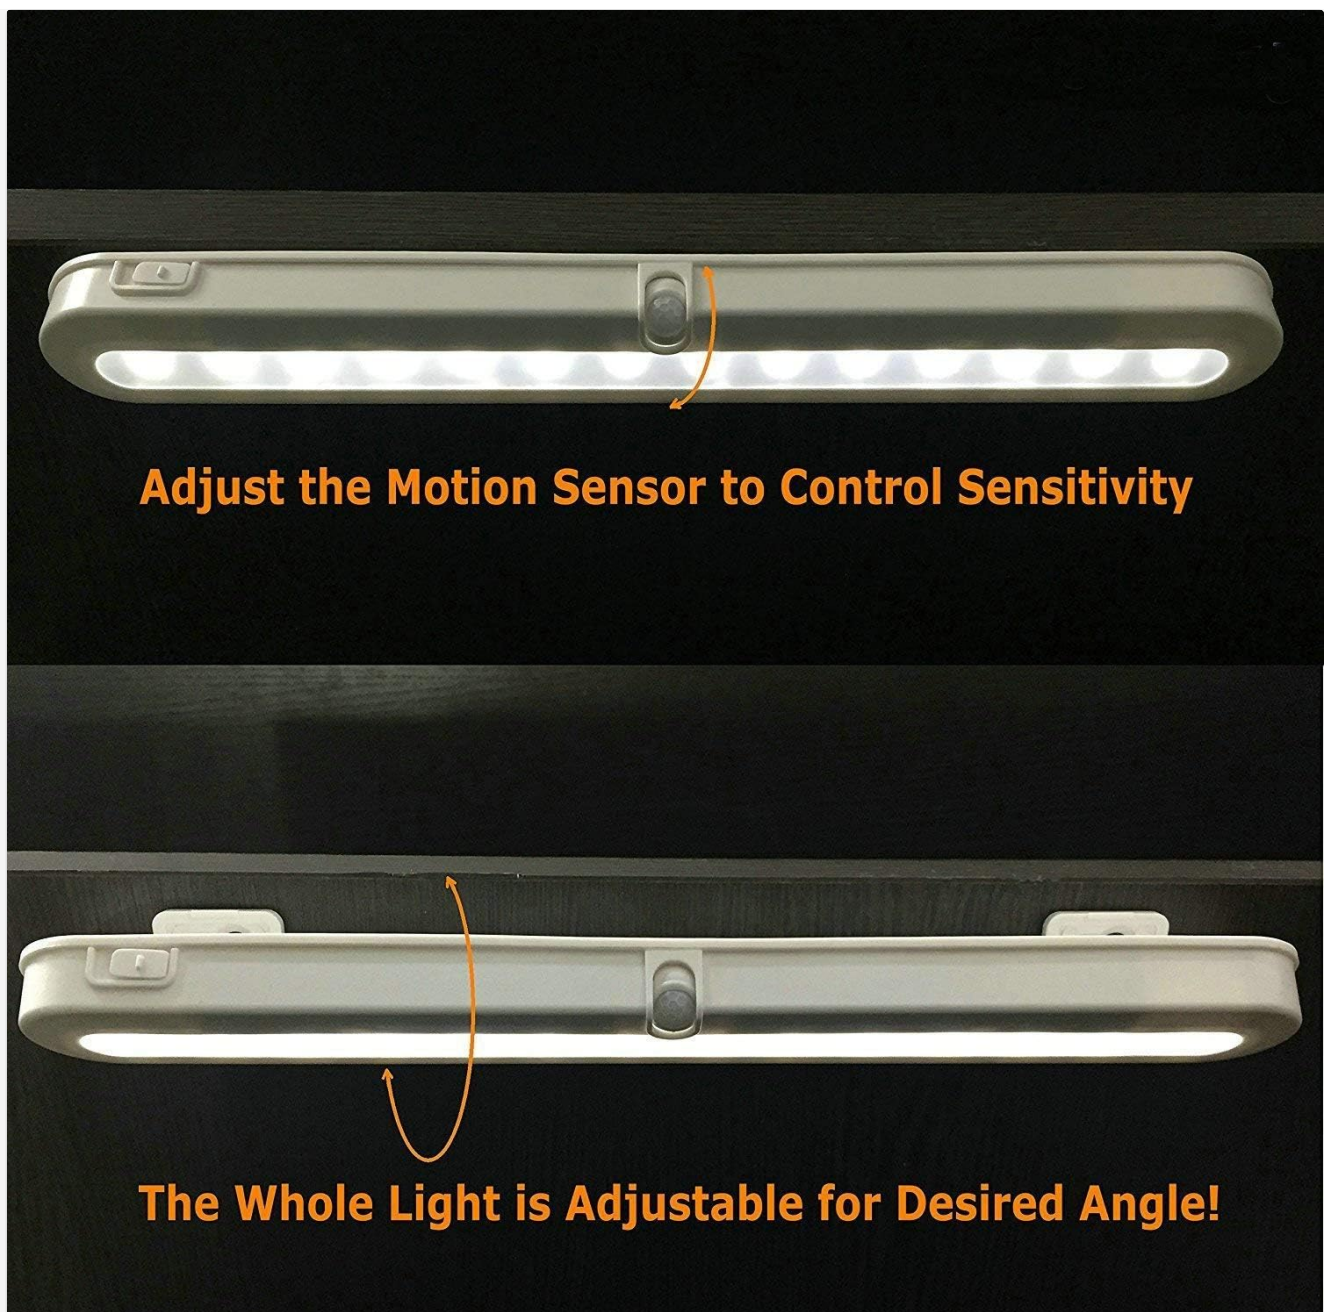


Image 5.1: Illustration of how to adjust the motion sensor to control sensitivity.

5.3. Adjusting Light Beam Angle

The entire light fixture can be adjusted to direct the light beam as desired:

- The light is mounted on a bracket that allows it to swivel.
- Gently pivot the light to achieve the desired illumination angle (e.g., 90°, 120°, 180°).



Image 5.2: Examples of adjustable light beam angles (90°, 120°, 180°) for optimal illumination.

6. MAINTENANCE

6.1. Battery Replacement

When the light output diminishes or the motion sensor becomes less responsive, it may be time to replace the batteries.

1. Open the battery compartment cover as described in Section 4.1.
2. Remove the old AA batteries.
3. Insert three new AA batteries, ensuring correct polarity.
4. Close the battery compartment cover.

Note: For optimal performance and to avoid frequent battery changes, consider using high-quality alkaline or rechargeable AA batteries. If using the USB DC power option, remove the AA batteries.

6.2. Cleaning

To maintain the appearance and functionality of your light:

- Ensure the light is in the OFF position or disconnected from power before cleaning.
- Wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or electronic components.

7. TROUBLESHOOTING

If you encounter issues with your BLS T01L LED Closet Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	- Batteries are dead or incorrectly installed. - Light is in OFF mode. - Insufficient darkness (in AUTO mode). - Motion sensor is obstructed or misaligned. - USB DC cable is not connected or power source is off.	- Replace batteries or ensure correct polarity. - Slide switch to ON or AUTO mode. - Test in a darker environment or switch to ON mode. - Clear obstructions and adjust sensor angle. - Check USB connection and power source.
Light turns on too frequently or not enough (in AUTO mode).	- Motion sensor sensitivity is too high/low. - Light sensor is detecting too much/little ambient light.	- Adjust the motion sensor angle to fine-tune detection area. - Ensure the light sensor is not covered or exposed to direct light.
Short battery life.	- Frequent activation. - Low-quality batteries. - Using both AA batteries and external USB power simultaneously.	- Adjust motion sensor sensitivity to reduce unnecessary activations. - Use high-quality alkaline or rechargeable AA batteries. - Remove AA batteries when using external USB power.
Light is dim.	Low battery power.	Replace batteries or connect to USB DC power.

8. WARRANTY INFORMATION

The BLS T01L LED Closet Light comes with an extended warranty. For specific details regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or contact BLS customer support.



9. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need further support, please contact BLS customer service through the following channels:

- Email:** Refer to your product packaging or the official BLS website for the most current contact email.
- Website:** Visit the official BLS website for FAQs and support resources.
- Amazon Store:** You can also visit the [BLS Store on Amazon](#) for product information and seller contact options.





Related Documents - T01L

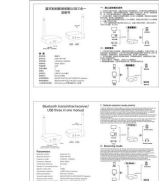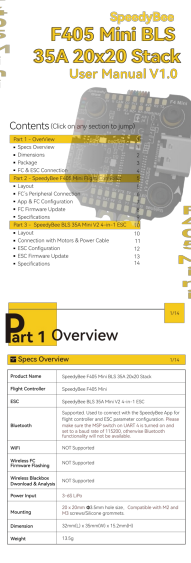	Forest Master BLS-3H Bulk Log Sawhorse Manual Comprehensive guide to the Forest Master BLS-3H Bulk Log Sawhorse, covering assembly, usage, safety, and warranty information. Learn how to safely and efficiently saw multiple logs.
	Shenzhen Bo Lian Sheng BLS-B55 Bluetooth Transmitter Receiver USB User Manual Comprehensive user manual for the Shenzhen Bo Lian Sheng BLS-B55, a versatile 3-in-1 Bluetooth transmitter, receiver, and USB audio adapter. Learn about setup, modes, specifications, and FCC compliance.
	Stageworx BLS-315 Pro Lighting Stand B Kit User Manual User manual for the Stageworx BLS-315 Pro Lighting Stand B Kit, detailing safety instructions, features, operation, setup, disassembly, technical specifications, and environmental disposal.
	SpeedyBee F405 Mini BLS 35A 20x20 Stack User Manual User manual for the SpeedyBee F405 Mini BLS 35A 20x20 Stack, detailing specifications, connections, configuration, and firmware updates for the flight controller and 4-in-1 ESC. Includes setup guides for drone builders.

	SpeedyBee F405 V3 BLS 50A 30x30 Stack User Manual V1.0 Comprehensive user manual for the SpeedyBee F405 V3 BLS 50A 30x30 Stack, detailing specifications, layout, connections, configuration, and firmware updates for both the Flight Controller and the 4-in-1 ESC.
	Team Corally Kronos XTR Quick Start User Guide Comprehensive quick start and user guide for the Team Corally Kronos XTR RC car, covering setup, operation, maintenance, safety precautions, and warranty information. Includes detailed instructions for assembly, electronics installation, and car settings.

 Documents - BLS – T01L

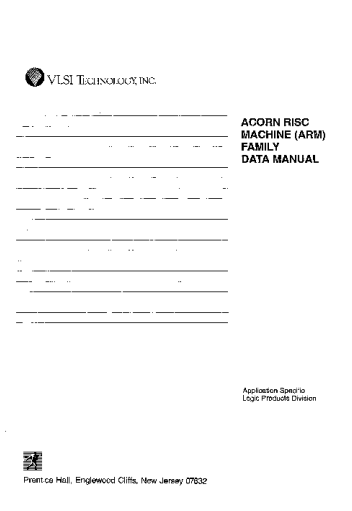	[pdf] User Manual Instructions Dimension Guide KENWOOD KFC 1653MRW 01 MANUAL Manual Hub drive google file d 1wCV9WozfOV0ZNZcpq3zRJCGU0VR8ORZm preview KENWOOD https://manual-hub.com/ MARINE SPEAKER HAUT-PARLEUR MARINE KFC-1653 MRW INSTALLATION INSTR ... i1Te http://www.kenwood-ru.s.ru /support/service/ AaHHbl ili rapaHTM Hbl TII110H At CTBMTt II t H T01IbKO B TOill CTpiiHt , fAt MJHII la1IbHO 6bln KynneH annapaT. HaCTORUiaJI rapaHTIJI 6y,IleT npe... lang:en score:17 filesize: 5.9 M page_count: 8 document date: 2023-10-09
	[pdf] User Manual Specifications Warranty Acorn ARM Family Data Manual 1990 scanned by Marcus Bennett manual maben homeip net static S100 acorn hardware _ VLSI TECHNOLOGY, INC. ACORN RISC MACHINE t ARM FAMILY DATA MANUAL Application Specific Logic Products IDivision Prentice Hall, Englewood Cliffs, New Jersey 07632 The information contained in this document has been carefully checked and is believed to be reliable. However, VLSI Technology, Inc... lang:en score:15 filesize: 13.15 M page_count: 285 document date: 2008-05-13

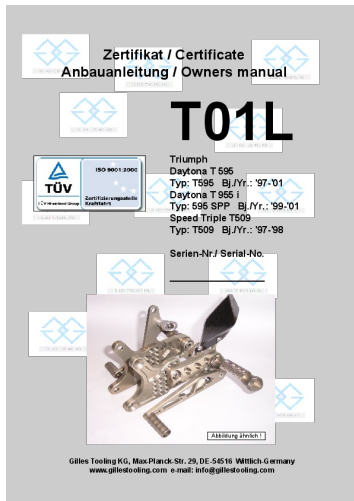 

[pdf] User Manual Owner's Manual Instructions Catalog


60012606 MONT 14 cdn3 louis de content catalogue articles zusatz anl |||

Zertifikat / Certificate Anbauanleitung / Owners manual **T01L** Triumph Daytona T 595

Typ: T595 Bj./Yr.: 97- 01 Daytona T 955 i Typ: 595 SPP Bj./Yr.: 99- 01 Speed Triple T509 Typ: T509 Bj./Yr.: 97- 98 Serien-Nr./ Serial-No. _____

Abbildung hnlich Gilles Tooling KG, Max-Planck-Str. 29,...

 lang:en score:14 filesize: 1.66 M page_count: 5 document date: 2010-09-09

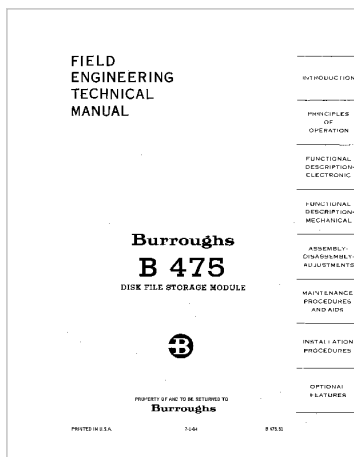

[pdf] User Manual

Manual Hub BURROUGHS B 475 01 MANUAL drive google u 0 uc id 1LoZszk6kvNeesC9 Q IXzDswX

LKhN5J export |||

FIELD ENGINE ER I NG TECHNICAL MANUAL Burroughs B 475 DISK FILE STORAGE MODULE INTRODUCTION PRINCIP ... OX1L - r FFFTH AMLO I--- - 00.09.0 MQJ1L r 00.09.0 I:RAL XRAL/ GSSL R1A - 00.09.0 AMTO - **T01L** 00.09.0 Z- 1L-01 WRSO/ R2A SW H - f-- 00.07.0 00.07.0 FIGURE 3.8-1 INFORMATION CIRCUITS...

lang:fr score:14 filesize: 11.74 M page_count: 189 document date: 2013-12-09



[pdf] User Manual Owner's Manual Installation Guide Instructions Dimension Guide

1132053MRB Kenwood KFC 2053MRB KFC2053MRB CRUTCHFIELD COM JOSH N Owner s Manual 8


2 Way Marine Speakers with Black Grilles Owners gibbyselectronicssupermarket ca 2022 05 |||

KENWOOD KENWOOD KFC-2053M RB Dimensions Dimensions Dimensiones

Dimens6es Parts included Pieces ... i1Te http://www.kenwood-ru s.ru

/support/service/ AaHHbl ili rapaHTM Hbl TII110H At CTBMTt Il t H **T01l**bKO B TOill CTpiiHt , fAt MJHII la1lbHO 6bln KynneH annapaT. HaCTORUiaJI rapaHTIJI 6y,lleT npe...

 lang:en score:12 filesize: 12.79 M page_count: 10 document date: 2015-07-02

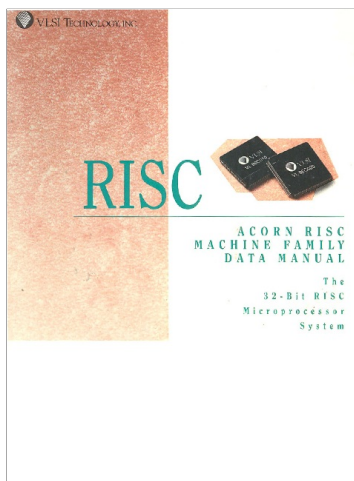

[pdf] User Manual Specifications Warranty

1990 Acorn RISC Machine Family Data Manual ftp mirrorservice org sites bitsavers components vti informatik uni stuttgart de

ACORN Rise MACHINE FAMILY DATA MANUA L T he 32-Bit Rise Microprocessor System e VLSI TECHNOLOGY, INC. ACORN RISC MACHINE t ARM FAMILY DATA MANUAL Application Specific Logic Products IDivision Prentice Hall, Englewood Cliffs, New Jersey 07632 The information contained in this document has bee...

lang:en score:12 filesize: 13.84 M page_count: 288 document date: 2020-03-03




[pdf] Instructions

IL41945 electricalpartmanuals part manuals circuitBreaker Westinghouse Trip Units
www . ElectricalPartManuals . com Westinghouse I .L. 41-945.51K INSTALLATION
OPERATION MAINTENANC ... xer-IF Amplifier Module Below 200 kHz . C I I C13 C./
1 7 C21 0 C2 14 C A A C T01I APAC I T0R CAPAC I fo t CAACI T0R CAPAC I T011
CAPA C I TOR CAJ A I I I CAPAC I T I R CAPA...
lang:en score:12 filesize: 8.89 M page_count: 240 document date: 2011-08-13




[pdf] User Manual Instructions

profroid quietor evolution sh condensing units bd notinst fr en de 29052020 CARRIER QUIETOR GQH
GQL Carrier Notre service technique reste à votre entière disposition au 33 04 42 18 05 00 pour toutes
précisions supplémentaires These operating instructions must be shareddocs hvac docs 2004 Public OA
|||
NOTICE D INSTRUCTIONS OPERATING INSTRUCTIONS HANDBUCH ZUR
MONTAGE / MISE EN SERVICE / UTILISATION / ... eitung p SOJ....I WERT-
PARAMET R - C2: Mir Mu 1 0 VertliiSSi _ l.-.k 111 rt -1.0 50 1 1 Vt t01I ig.ung.13uod
llooal- 0.0 50 U11Jt lxx bafldl llr PIPL, N.. tiU all...ool. fltlt NuT 3 I.Oi...
lang:fr score:12 filesize: 2.14 M page_count: 61 document date: 2021-05-19

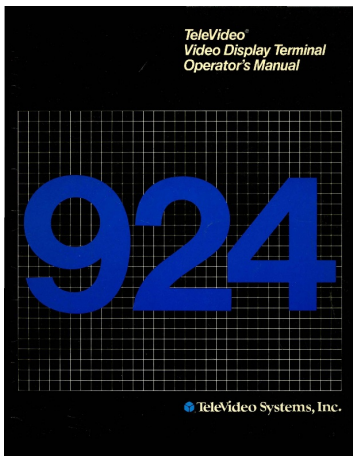 


[pdf] User Manual Specifications

3090301 TVI 924 Operators Manual Apr84 Index of televideo bitsavers trailing edge |||
TeleVideo 924 Video Display Terminal Operator s Manual TeleVideo Document
3090301 2 April 1984 Co ... 1011 1101 dhl 10 011011 1101 cllliIn 111101111 C lIolio
III 01101111 rltollc1 IIIItlllho 110 0 t01I 1101 C III C lIolio 1111011111 110 011011
1101 dill 10 011011 1101 lhho „,11 .1111 c llo...
lang:en score:11 filesize: 11.61 M page_count: 172 document date: 2017-08-07

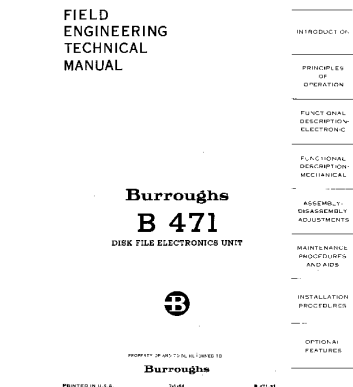 

[pdf] User Manual Specifications Declaration of Conformity

 B471 51 Disk File Electronics Unit Field Engineering Technical Manual Jul64 doc lagout org science 0
Computer Science History old hardware burroughs B5000 5500 5700 service
FIELD ENGINEERING TECHNICAL MANUAL Burroughs B 471 DISK FILE
ELECTRONICS UNIT INTRODUCTION PRINCIPL ... L / --ft--I- o 08 L / --II----I- DIG
L I --It----t Z OIL I --It--I- z 0 - L I --tI--I...-t T01LI TO-LI T04 L/ T08L/ TI0LI T2.0L/
T40L/ CS 1L /- i----- r- C S -L/ 4 - i I - - - - _ _ ...
lang:en score:11 filesize: 10.43 M page_count: 114 document date: 2013-12-09

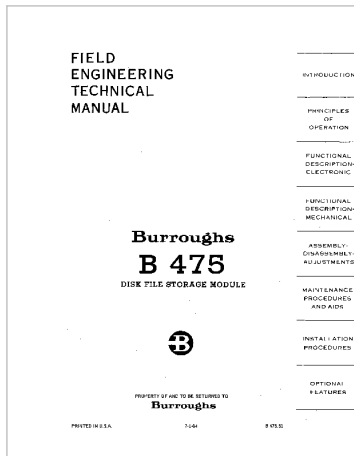


[\[pdf\]](#) User Manual

B475 51 Disk File Storage Module Field Engineering Technical Manual Jul64 bitsavers.org burroughs

B5000 5500 5700 service

FIELD ENGINEERING TECHNICAL MANUAL Burroughs B 475 DISK FILE STORAGE MODULE INTRODUCTION PRINCIP ... OX1L - r FFTH AMLO I--- - 00.09.0 MQJ1L r 00.09.0 I:RAL XRAL/ GSSL R1A - 00.09.0 AMTO - **T01L** 00.09.0 Z-1L-01 WRSO/ R2A SW H - f-- 00.07.0 00.07.0 FIGURE 3.8-1 INFORMATION CIRCUITS...

 lang:fr **score:11** filesize: 11.74 M page_count: 189 document date: 2013-12-09

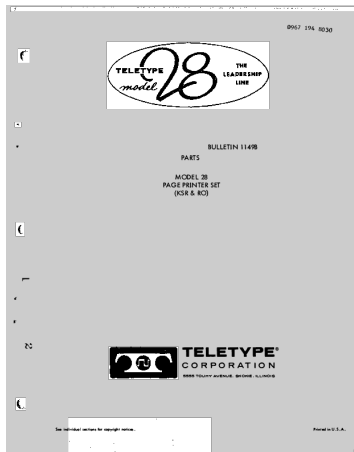

[\[pdf\]](#)

1149B Model 28 KSR and RO Teletypewriter Parts Page Printer Set Teletype Corp 6705 Index of manuals tty navy radio |||

0967 194 8030 --. BULLETIN 11498 PARTS MODEL 28 PAGE PRINTER SET KSR RO ,_ . f N ... o 5.: f-0 ., , 1. / -s:u=; ..JY ff VI - ..., ... j Eo B f.: 0 ,-/ , N-u **t01l** zc -... O - 0 - m -- y. / 0 0 V / - . m 15 1R6ef5 .79 372743 16624W6r.;151...

lang:en **score:11** filesize: 22.4 M page_count: 346 document date: 2017-08-29