

[Manuals.plus](#) /

› [Briloner Leuchten](#) /

› Briloner Retro Floor Lamp with Foot Switch (Model 1380-015) - User Manual

Briloner Leuchten 1380-015

Briloner Retro Floor Lamp with Foot Switch (Model 1380-015) - User Manual

1. INTRODUCTION

Thank you for choosing the Briloner Retro Floor Lamp, Model 1380-015. This manual provides essential information for the safe and efficient use of your new floor lamp. Please read these instructions carefully before assembly and operation, and retain them for future reference.





Image 1.1: The Briloner Retro Floor Lamp, Model 1380-015.

2. SAFETY INSTRUCTIONS

- Ensure the power supply is disconnected before installation, cleaning, or maintenance.
- This product is designed for indoor use only. Do not expose to moisture or extreme temperatures.
- Use only E27 bulbs with a maximum wattage of 60W. Exceeding this limit may cause overheating and damage.
- Do not modify the lamp or its components. Any modifications may void the warranty and pose safety risks.
- Keep the lamp away from flammable materials.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with assembly:

- 1x Lamp Shade (Black with Gold Interior)
- 1x Tripod Base
- 1x E27 Lamp Holder Assembly
- 1x Power Cable with Foot Switch and Plug
- Mounting Hardware (screws, washers, etc.)
- 1x User Manual

Note: The light bulb is not included in the package.

4. SETUP AND ASSEMBLY

Follow these steps to assemble your Briloner Retro Floor Lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging and place them on a clean, flat surface.
2. **Assemble Tripod Base:** Extend the three legs of the tripod base and secure them according to the included diagrams. Ensure the base is stable.
3. **Attach Lamp Shade:** Connect the lamp shade to the top of the tripod base using the provided screws and fasteners. Ensure it is securely fastened and can rotate freely.
4. **Install Light Bulb:** Screw an E27 light bulb (max. 60W, not included) into the lamp holder.
5. **Position Cable:** Route the power cable neatly along one of the tripod legs to the floor.



Image 4.1: The lamp head can be tilted for optimal light direction.

5. OPERATING INSTRUCTIONS

The Briloner Retro Floor Lamp is designed for simple and convenient operation:

1. **Connect to Power:** Plug the lamp's power cord into a standard electrical outlet.
2. **Turn On/Off:** Use the integrated foot switch located on the power cable to turn the lamp on or off. Press once to turn on, press again to turn off.
3. **Adjust Lamp Head:** The lamp shade is rotatable and can be tilted to direct the light as desired. Gently adjust the position of the lamp head to achieve your preferred lighting angle.



Image 5.1: The convenient foot switch for easy operation.

Official Product Video: Operation Demonstration



Video 5.1: This video demonstrates how to adjust the lamp head and operate the foot switch for the Briloner Retro Floor Lamp.

6. MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power supply before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled down before attempting to replace it. Unscrew the old E27 bulb and screw in a new one (max. 60W).
- **Inspection:** Periodically check the power cord and plug for any signs of damage. If damage is found, discontinue

use and contact a qualified electrician or the manufacturer for repair.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply.	Check if the plug is securely inserted into the outlet. Test the outlet with another device.
	Faulty light bulb.	Replace the light bulb with a new E27 bulb (max. 60W).
	Damaged power cord or switch.	Discontinue use and contact customer support or a qualified electrician.
Light is flickering.	Loose bulb or faulty bulb.	Tighten the bulb or replace it.

8. SPECIFICATIONS

- **Model Number:** 1380-015
- **Brand:** Briloner Leuchten
- **Dimensions (L x W x H):** 58D x 58B x 148H centimeters
- **Base Material:** Metal
- **Shade Material:** Metal
- **Color:** Black-Gold
- **Lamp Fitting:** E27
- **Max. Wattage:** 60 Watt
- **Voltage:** 230 Volt
- **Switch Type:** Foot Switch
- **Cable Length:** 148 Centimeters
- **Weight:** 2.2 Kilograms
- **Indoor/Outdoor Use:** Indoor only

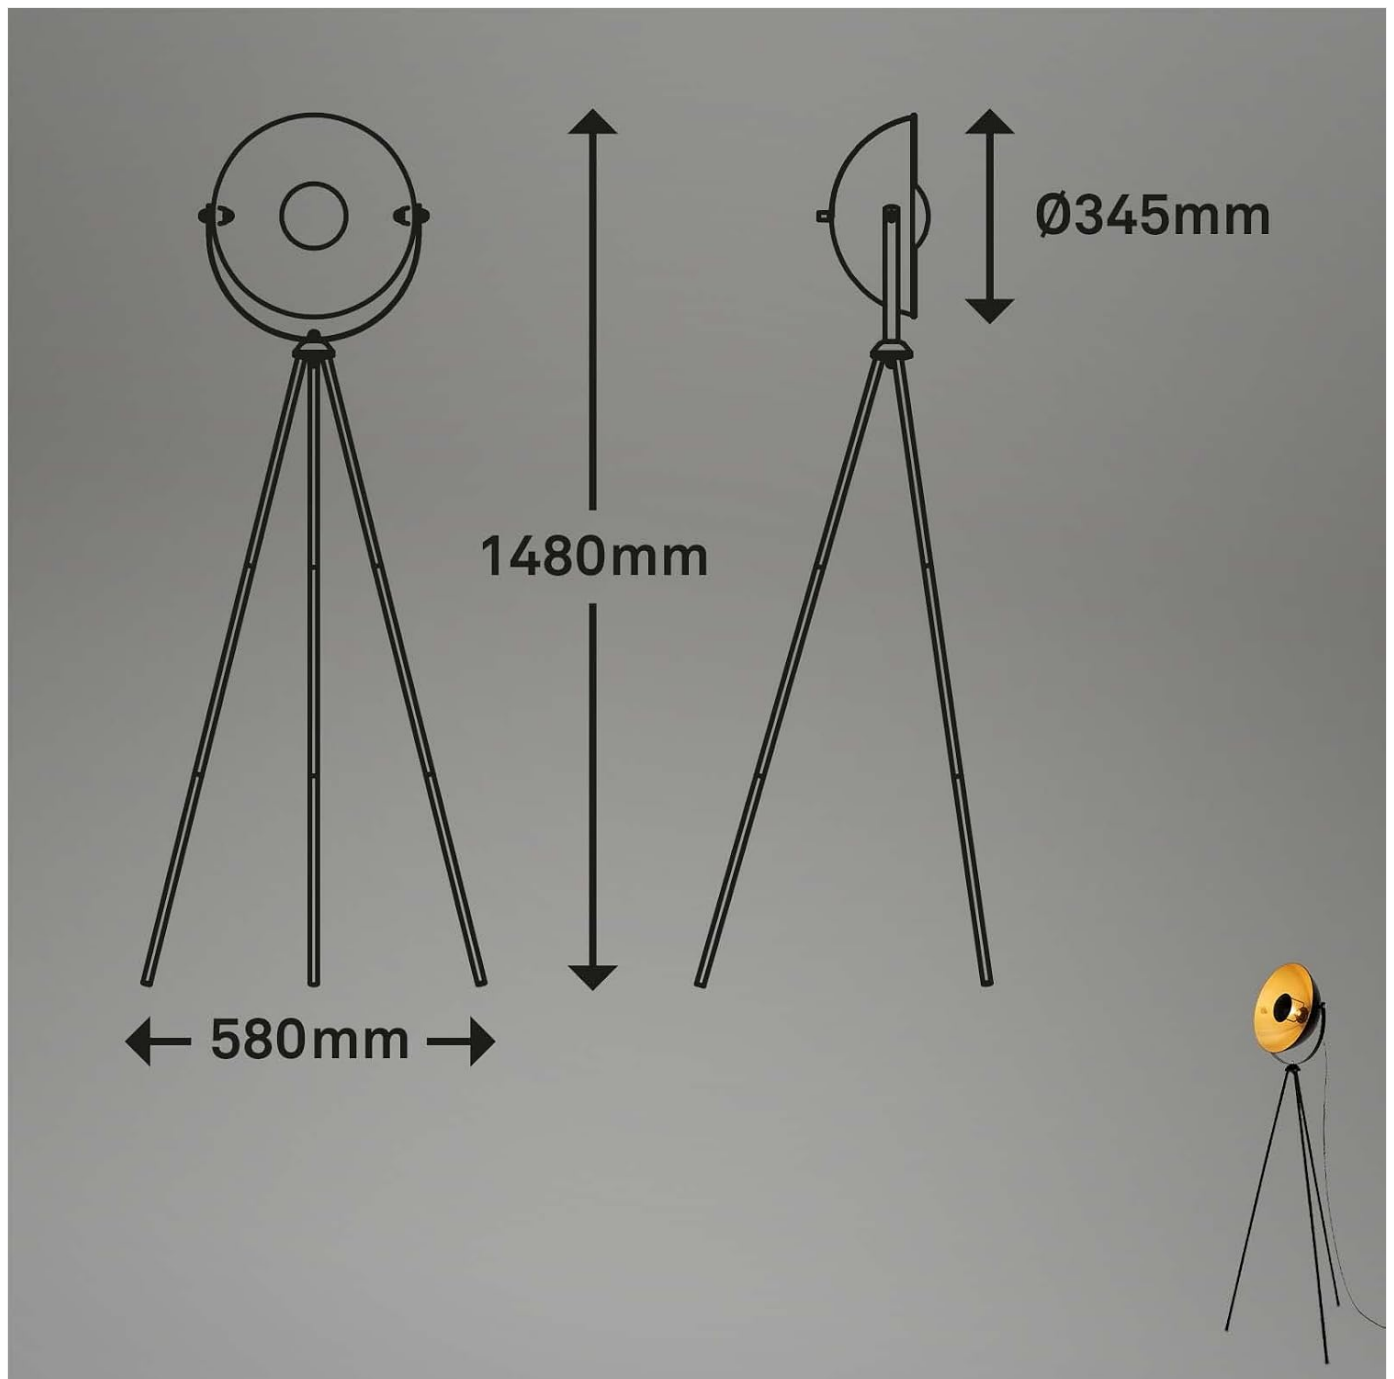


Image 8.1: Product dimensions for the Briloner Retro Floor Lamp.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please refer to the official Briloner Leuchten website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Briloner Leuchten

Website: [Briloner Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question