

LEXiBOOK RCDK100SP

Lexibook Marvel Spider-Man CD Player RCDK100SP User Manual

Model: RCDK100SP

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Lexibook Marvel Spider-Man CD Player RCDK100SP. Please read these instructions carefully before using the product and retain them for future reference.

2. SAFETY INSTRUCTIONS

Observe the following safety precautions to prevent injury or damage to the device:

- This product is not suitable for children under 3 years of age due to small parts.
- Adult supervision is recommended during use.
- Do not expose the unit to moisture, rain, or extreme temperatures.
- Avoid placing the unit on unstable surfaces where it could fall.
- When the product is operating, it is recommended to keep it on a stable surface to avoid interrupting music playback, even with its anti-shock function.

Battery Safety:

- Only use the specified type of batteries (C batteries).
- Ensure batteries are inserted with correct polarity (+/-).
- Do not mix old and new batteries, or different types of batteries.
- Remove exhausted batteries promptly.
- If the unit will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Lexibook Marvel Spider-Man CD Player
- 2 x Toy Microphones
- 1 x Instruction Manual

4. PRODUCT OVERVIEW

The Lexibook Marvel Spider-Man CD Player is designed for children, featuring a front-load CD player, two toy microphones, and a headphone jack. It includes a convenient handle for portability and an LED display for track information.



Image 4.1: Front view of the Lexibook Marvel Spider-Man CD Player with attached microphones.



Image 4.2: Detailed view of the control panel, including play/pause, stop, skip, program, and repeat buttons, along with volume controls.

Video 4.1: A brief product summary video showcasing the Lexibook Marvel Spider-Man CD Player from various angles and highlighting its features.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the back of the CD player.
2. Open the battery compartment cover.
3. Insert the required C batteries, ensuring correct polarity as indicated inside the compartment.
4. Close the battery compartment cover securely.

5.2 Powering On

To turn on the CD player, rotate the volume knob clockwise until you hear a click or the LED display illuminates.

6. OPERATING INSTRUCTIONS

6.1 Playing a CD

1. Press the "OUVRIR" (Open) button to open the CD compartment door.
2. Carefully place a CD onto the spindle with the label side facing up.
3. Close the CD compartment door until it clicks shut.
4. Press the **PLAY/PAUSE** button to start playback. The track number will appear on the LED display.
5. Adjust the **VOLUME** knob to your desired listening level.
6. To pause playback, press **PLAY/PAUSE** again. Press it once more to resume.
7. To stop playback, press the **STOP** button.

6.2 Using the Microphones

The CD player includes two toy microphones for singing along. Connect them to the designated microphone jacks on the unit.

- Adjust the **MIC VOL** knob to control the microphone volume.
- The microphone volume is designed to be low to comply with acoustic safety norms for children.

6.3 Headphones Jack

A headphones jack is provided for private listening. Plug standard 3.5mm headphones into the **HEADPHONE** jack. When headphones are connected, sound will be muted from the built-in speakers.

6.4 Skip Tracks

- Press the **F.SKIP** button to skip to the next track.
- Press the **B.SKIP** button to go back to the beginning of the current track or to the previous track.

6.5 Repeat and Program Functions

- Press the **REPEAT/ALL** button to repeat the current track or the entire CD.
- Use the **PROGRAM** function to create a customized playlist of tracks from your CD. Refer to the on-device labels for specific programming steps.

7. MAINTENANCE

7.1 Cleaning

- Wipe the unit with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Keep the CD compartment free of dust and debris.

7.2 Storage

Store the CD player in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not power on	Batteries are exhausted or incorrectly inserted.	Replace batteries with new C batteries, ensuring correct polarity.
CD does not play / Skipping	CD is dirty, scratched, or inserted incorrectly. Unit is on an unstable surface.	Clean the CD, check for scratches, reinsert correctly. Place the unit on a stable, flat surface.
Microphones not working or low volume	Microphones not fully plugged in. Microphone volume too low.	Ensure microphones are securely plugged into their jacks. Increase the MIC VOL knob. Note that microphone volume is intentionally limited for child safety.
No sound from speakers	Volume is too low. Headphones are connected.	Increase the main VOLUME knob. Disconnect headphones if not desired.

9. SPECIFICATIONS

Model Number	RCDK100SP
Product Dimensions	3.94 x 10.35 x 8.23 inches
Item Weight	1.83 pounds
Power Source	Battery Powered (C batteries required)
Special Feature	LED Display
Included Components	CD Player, 2 Microphones
Manufacturer	LEXIBOOK
Date First Available	October 18, 2017

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Lexibook customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.