

Lexibook RCD108DP

LEXIBOOK Princess Disney Princesses Portable CD Player RCD108DP Instruction Manual

1. INTRODUCTION

Thank you for purchasing the LEXIBOOK Princess Disney Princesses Portable CD Player, model RCD108DP. This manual provides essential information for the safe and efficient use of your new audio device. Please read these instructions carefully before operating the unit and retain them for future reference.

2. SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter specified for this product.
- Do not open the casing. Refer all servicing to qualified personnel.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Keep the unit away from strong magnetic fields.
- This product is designed for children, but adult supervision is recommended during use, especially when handling power connections.

3. PACKAGE CONTENTS

Please check that the following items are included in your package:

- LEXIBOOK Princess Disney Princesses Portable CD Player (RCD108DP)
- AC Power Adapter (if included, otherwise sold separately)
- Instruction Manual



Image 3.1: Product packaging showing the Lexibook Disney Princess CD Player.

4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your portable CD player.



Image 4.1: Front view of the CD player showing the display, control buttons, and auxiliary input.

Key Components:

- **CD Compartment:** Top-loading for CD/CD-R/CD-RW discs.
- **Display:** Shows track number, radio frequency, or mode.
- **Control Buttons:** Play/Pause, Stop, Skip/Search (Forward/Backward), Program, Repeat, Volume Up/Down.
- **Speakers:** Integrated 0.8 W x 2 speakers for audio output.
- **Microphone Jack:** For connecting an external microphone (microphone not included).
- **Auxiliary Input (Line-in):** For connecting external audio devices.
- **Power Input:** For connecting the AC power adapter.
- **Battery Compartment:** Located at the bottom for 6 C/LR14 batteries.

5. SETUP

5.1 Power Supply

Your CD player can be powered by either an AC adapter or batteries.

AC Power (Mains Operation):

1. Ensure the unit is switched off.
2. Connect the AC power adapter (not always included) to the DC IN jack on the back of the CD player.
3. Plug the other end of the adapter into a standard wall outlet.

Battery Power:

1. Ensure the unit is switched off.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 x C/LR14 size batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

5.2 Connecting External Devices

Auxiliary Input (Line-in):

You can connect an external audio device (e.g., smartphone, MP3 player) to play music through the CD player's speakers.

1. Connect one end of a 3.5mm audio cable (not included) to the AUX-IN jack on the CD player.
2. Connect the other end of the audio cable to the headphone jack or line-out jack of your external audio device.
3. Switch the CD player to AUX mode (if applicable, usually by pressing a 'Mode' button or selecting the input).
4. Start playback on your external device and adjust the volume on both the external device and the CD player.



Image 5.1: The CD player connected to a smartphone via the auxiliary input.

Microphone Connection:

Connect a microphone (not included) to the microphone jack to sing along with your music.

1. Plug a microphone with a 3.5mm jack into the MIC jack on the CD player.
2. The microphone audio will mix with the playing music (CD or Aux-in).

6. OPERATING INSTRUCTIONS

6.1 CD Playback

1. Open the CD compartment cover by gently lifting it.
2. Place a CD, CD-R, or CD-RW disc onto the spindle with the label side facing up.
3. Close the CD compartment cover firmly until it clicks.
4. Press the **PLAY/PAUSE** button to start playback. The track number will appear on the display.
5. To pause playback, press **PLAY/PAUSE** again. Press it once more to resume.
6. To stop playback, press the **STOP** button.
7. To skip to the next track, press the **SKIP FORWARD** button ().
8. To go back to the beginning of the current track or to the previous track, press the **SKIP BACKWARD** button ().
9. To search quickly through a track, press and hold the **SKIP FORWARD** or **SKIP BACKWARD** button during playback.

Program Function:

You can program up to 20 tracks to play in a specific order.

1. In STOP mode, press the **PROGRAM** button. "P01" will flash on the display.
2. Use the **SKIP FORWARD** or **SKIP BACKWARD** buttons to select your desired first track.

3. Press **PROGRAM** again to confirm the track. "P02" will flash.
4. Repeat steps 2 and 3 to add more tracks to your program.
5. After programming all desired tracks, press **PLAY/PAUSE** to start playing the programmed sequence.

Repeat Function:

During CD playback, press the **REPEAT** button to cycle through repeat modes:

- **Repeat One:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the CD.
- Press **REPEAT** again to cancel the repeat function.

6.2 FM Radio Operation

The unit features an integrated FM radio tuner.

1. Switch the function selector to FM mode.
2. Press the **SCAN** button (or similar, often combined with Play/Pause or Stop) to automatically scan and store available FM stations.
3. Use the **SKIP FORWARD** or **SKIP BACKWARD** buttons to navigate through the stored stations.
4. Extend the FM antenna (if present) for better reception.

6.3 Volume Control

Adjust the volume using the **VOLUME UP** and **VOLUME DOWN** buttons or knob on the unit.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the unit from the power source before cleaning.
- Use a soft, dry cloth to clean the exterior of the unit.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the CD lens, use a specialized CD lens cleaner disc or a soft, lint-free cloth designed for optical lenses.

7.2 Storage

- If storing the unit for an extended period, remove all batteries to prevent leakage.
- Store the unit in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter any issues with your CD player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	No power connection / Dead batteries.	Check AC adapter connection or replace batteries.

Problem	Possible Cause	Solution
No sound from speakers.	Volume too low / Incorrect mode selected / Headphones connected.	Increase volume / Select correct mode (CD, FM, AUX) / Disconnect headphones.
CD does not play / skips.	CD dirty or scratched / CD inserted incorrectly / CD compartment not closed / Lens dirty.	Clean or replace CD / Reinsert CD correctly / Close compartment firmly / Clean CD lens.
Poor FM radio reception.	Weak signal / Antenna not extended.	Extend and adjust the FM antenna / Try moving the unit to a different location.
Microphone not working.	Microphone not connected properly / Microphone faulty.	Ensure microphone is fully plugged in / Test with another microphone.

9. SPECIFICATIONS

Feature	Specification
Model Number	RCD108DP
Brand	Lexibook
Disc Compatibility	CD, CD-R, CD-RW
Speaker Output	0.8 W x 2
Power Source	AC power adapter or 6 x C/LR14 batteries (not included)
Connections	Auxiliary input, Microphone jack
Radio Tuner	Integrated FM Scan
Dimensions (L x W x H)	20 x 23 x 11 cm
Weight	1.16 Kilograms

10. WARRANTY AND SUPPORT

Please retain your purchase receipt as proof of purchase. For warranty information and customer support, refer to the documentation provided at the time of purchase or contact Lexibook customer service directly. Information regarding spare parts availability is not available at this time.