

## Sinjimoru SPH\_FLAP\_BK\_JP

# Sinjimoru Sinji Pouch Flap Adhesive Card Holder Instruction Manual

Model: SPH\_FLAP\_BK\_JP

## 1. INTRODUCTION

The Sinjimoru Sinji Pouch Flap is an innovative adhesive card holder designed to attach to the back of your smartphone or phone case. It provides a convenient and secure way to carry essential cards and small items, reducing the need for a separate wallet. This manual will guide you through the installation, usage, and important considerations for your new card holder.

## 2. PRODUCT FEATURES

- **Ultra-Thin Design:** Attaches discreetly to your smartphone, capable of holding up to 5 cards without adding significant bulk.
- **Enhanced Security Flap:** Features a protective flap that covers your cards, preventing accidental loss and safeguarding personal information from exposure.
- **Elastic Material:** Constructed from a verified elastic fabric, ensuring secure storage for various items such as IC cards (e.g., Suica, Pasma), ID cards, business cards, small amounts of cash, or earphones.
- **Durable Adhesive:** Equipped with strong adhesive for reliable attachment to compatible surfaces.

## 3. SETUP AND INSTALLATION

Follow these steps to properly attach your Sinji Pouch Flap to your device:

1. **Prepare the Surface:** Ensure the back surface of your smartphone or phone case is clean and dry. Wipe away any dust, oil, or fingerprints.
2. **Peel Adhesive Backing:** Carefully peel off the protective film from the adhesive side of the Sinji Pouch Flap.
3. **Attach the Pouch:** Align the pouch to your desired position on the back of your phone or case. Press firmly for at least 30 seconds to ensure a strong bond.



Image: Step-by-step installation of the Sinji Pouch Flap, showing cleaning the surface, peeling the adhesive, and attaching to a phone case.

**Important Note:** For smartphones with glass-coated backs (e.g., iPhone 12, 13, 14, 15 series), direct attachment may not be optimal. It is recommended to attach the Sinji Pouch Flap to a dedicated smartphone case for better adhesion and longevity.

## 4. OPERATING INSTRUCTIONS

Using your Sinji Pouch Flap is straightforward:

- **Inserting Cards:** Gently slide your cards into the elastic pouch. The elastic material will hold them securely.
- **Securing Cards:** Close the flap over the inserted cards to prevent them from falling out and to protect your personal information.
- **Removing Cards:** Lift the flap and gently pull out the desired card. The elastic design allows for easy access.



Image: A close-up view of the Sinji Pouch Flap attached to a smartphone, with the flap open and multiple cards partially visible, demonstrating card access.

## Flap Pocket

Less possibility of losing cards.

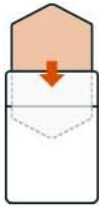


Image: A hand demonstrating the flap pocket feature, showing how the flap covers the cards to prevent them from falling out, with a small diagram illustrating the flap mechanism.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your Sinji Pouch Flap, consider the following maintenance tips:

- **Cleaning:** If the fabric becomes dirty, gently wipe it with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Adhesive Care:** If you need to re-position the pouch, do so carefully to avoid damaging the adhesive. The adhesive is designed for strong, long-lasting attachment but repeated removal and re-attachment may reduce its effectiveness.
- **Avoid Overstuffing:** While the pouch is elastic, consistently overstuffing it with too many cards or bulky items may stretch the material and reduce its ability to securely hold fewer items over time.

## 6. TROUBLESHOOTING AND IMPORTANT NOTES

- **Card Recognition Issues:** If you experience issues with card recognition (e.g., for public transport or access systems) when multiple cards are inserted, it may be due to interference. Consider using an RFID blocking card within the pouch or removing the specific card for scanning.
- **Apple Pay Compatibility:** Apple Pay functionality may be affected or unavailable when the Sinji Pouch Flap is attached to your device. For Apple Pay transactions, it is recommended to remove the pouch or use an alternative payment method.



Image: An illustration showing two common issues: multiple cards causing recognition problems (suggesting an RFID block card) and Apple Pay not functioning when the Sinji Pouch is attached.

## 7. SPECIFICATIONS

<b>Brand</b>	Sinjimoru
<b>Model Number</b>	SPH_FLAP_BK_JP
<b>Color</b>	Black
<b>Material</b>	Lycra Fabric
<b>Product Dimensions</b>	5.6 x 0.3 x 9.1 cm
<b>Product Weight</b>	10 g
<b>Compatible Devices</b>	Apple iPhone 14 / 14 Pro / 14 Max, iPhone 13 / 13 Pro / 13 Pro Max / 13 mini, iPhone 12 / 12 Pro / 12 Pro Max / 12 mini, iPhone SE (2nd Gen), iPhone 11 / 11 Pro / 11 Pro Max, iPhone Xs / Xs Max / XR / X, iPhone 8 / 8 Plus, iPhone 7 / 7 Plus, iPhone 6S / 6S Plus / 6 / 6 Plus. Samsung Galaxy S20 / S20+ / S20 Ultra, S10 / S10E / S10 Plus, S9 / S9 Plus, S8 / S8 Plus, S7 / S7 Edge, S6 / S6 Edge / S6 Edge Plus, S5 / S5 Mini, S4 / S4 Mini / S III, Galaxy Fold, Note 9 / 8 / 5 / 10 / 10 Plus. Compatible with most smartphone covers and cases.

## 8. WARRANTY AND SUPPORT

Sinjimoru provides a **90-day warranty** for this product from the date of purchase. This warranty covers manufacturing defects. For support or warranty claims, please contact Sinjimoru customer service through the retailer where the product was purchased.

The package includes:

- 1 x Sinji Pouch Flap
- 1 x Instruction Manual

