

Rfiver UT2003

Rfiver Universal Swivel Tabletop TV Stand Instruction Manual

Model: UT2003

1. INTRODUCTION

Thank you for choosing the Rfiver Universal Swivel Tabletop TV Stand. This stand is designed to provide a stable, adjustable, and aesthetically pleasing solution for mounting your flat-screen television on a tabletop or cabinet. It offers universal compatibility with various TV sizes and VESA patterns, along with convenient swivel and height adjustment features.

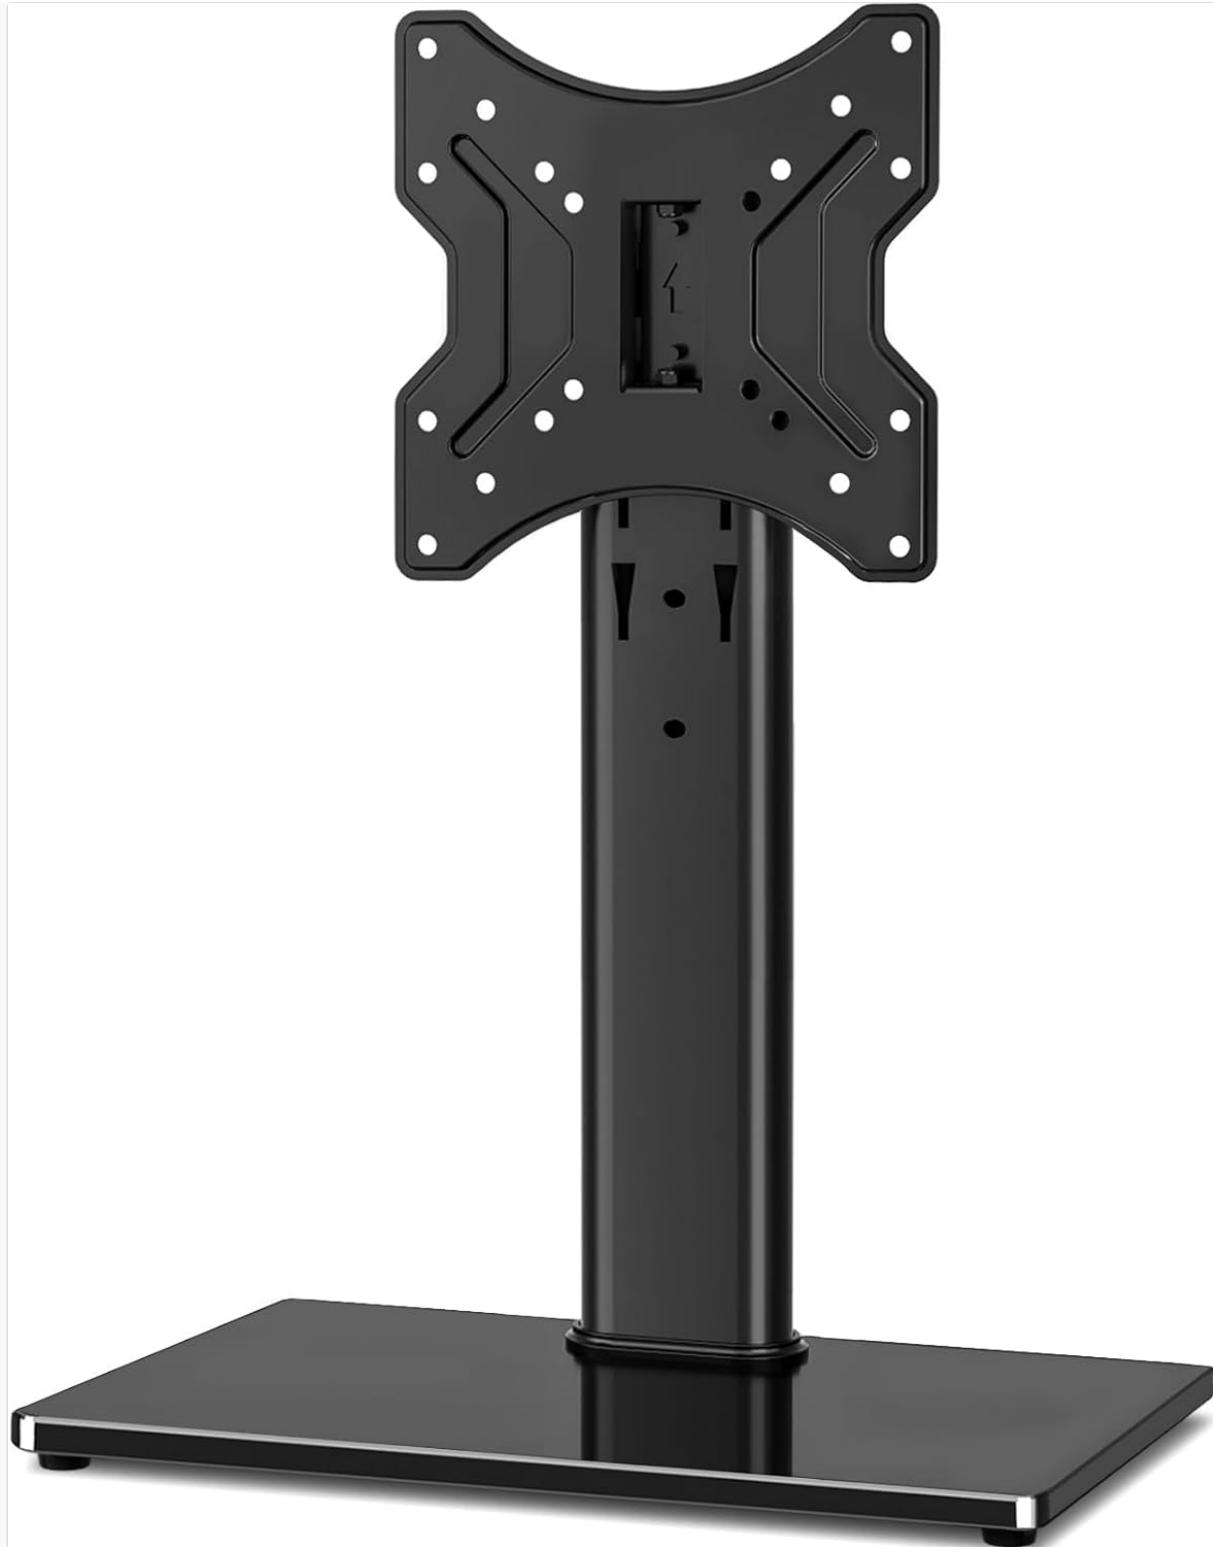


Image 1.1: The Rriver Universal Swivel Tabletop TV Stand, featuring a black tempered glass base and a sturdy metal column with a TV mounting bracket.

2. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Failure to follow these instructions may result in property damage, serious injury, or death.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 99 lbs (45 kg). This stand is designed for TVs between 19 and 43 inches.
- **VESA Compatibility:** Ensure your TV's VESA mounting pattern (horizontal x vertical) is within the supported range: 75x75mm, 100x100mm, 200x100mm, or 200x200mm.

- **Stable Surface:** Always place the TV stand on a flat, level, and stable surface that can support the combined weight of the stand and your television.
- **Secure Installation:** Verify all screws and connections are tightened securely before placing the TV on the stand. Utilize the provided locks in the mounting brackets to prevent the television from falling.
- **Children and Pets:** Keep children and pets away from the TV stand during assembly. Do not allow children to climb on or play with the TV stand or TV.
- **Non-Slip Pads:** The base includes non-slip rubber pads to enhance stability and prevent scratches on your furniture. Ensure they are properly placed.



Image 2.1: Illustration highlighting the double safety features of the stand, including thickened high-strength steel and 6mm thickened tempered glass for enhanced stability and safety.

3. PACKAGE CONTENTS

Before beginning assembly, please check that all parts are present and undamaged. If any parts are missing or damaged, do not attempt to assemble the stand. Contact customer service for assistance.

- Tempered Glass Base
- Support Column
- TV Mounting Bracket
- Hardware Kit (various screws, washers, spacers, nuts, and tools)
- Cable Clips
- Non-Slip Rubber Pads
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly is straightforward and typically takes about 10 minutes. Follow the steps below for proper installation.

1. **Attach Support Column to Base:** Secure the metal support column to the tempered glass base using the provided screws and tools. Ensure it is firmly attached.
2. **Attach TV Mounting Bracket to Column:** Connect the TV mounting bracket to the top of the support column. The bracket allows for height adjustment, so ensure it is positioned correctly for your

desired viewing height.

3. **Attach Mounting Arms to TV:** Identify the correct screws, washers, and spacers from the hardware kit that fit your TV's VESA holes. Attach the mounting arms to the back of your television.
4. **Mount TV onto Stand:** Carefully lift your TV and hook the mounting arms onto the TV mounting bracket on the stand. Ensure the TV is centered and level.
5. **Secure TV:** Use the safety locks or screws on the mounting bracket to secure the TV in place, preventing accidental dislodgement.

PRODUCT DIMENSION



Image 4.1: Visual guide demonstrating the quick and easy assembly process of the TV stand, showing the attachment of the column to the base and the TV to the mounting bracket.



Image 4.2: Diagram illustrating TV compatibility, including screen size range (19-43 inches), maximum load (99 lbs), and VESA mounting patterns (Min: 75x75mm, Max: 200x200mm).

5. OPERATING INSTRUCTIONS

5.1 Swivel Function

The TV stand features a $\pm 40^\circ$ swivel function, allowing you to adjust the viewing angle of your television without moving the entire stand. Gently rotate the TV to the desired angle. This is ideal for viewing from different positions in a room.



Image 5.1: Visual representation of the 80-degree swivel capability of the TV stand, showing how the screen can be angled left or right for optimal viewing.

5.2 Height Adjustment

The mounting brackets allow for multiple height adjustments to position your TV at the perfect level. To adjust the height, you may need to temporarily remove the TV from the stand, adjust the mounting bracket's position on the column, and then re-mount and secure the TV.



Image 5.2: Diagram illustrating the four different height adjustment levels available for the TV stand, showing the varying heights from the base to the top of the mounting bracket.

5.3 Cable Management

Utilize the integrated cable clips on the back of the support column to organize and conceal your TV and device cables. This helps maintain a neat and tidy appearance.

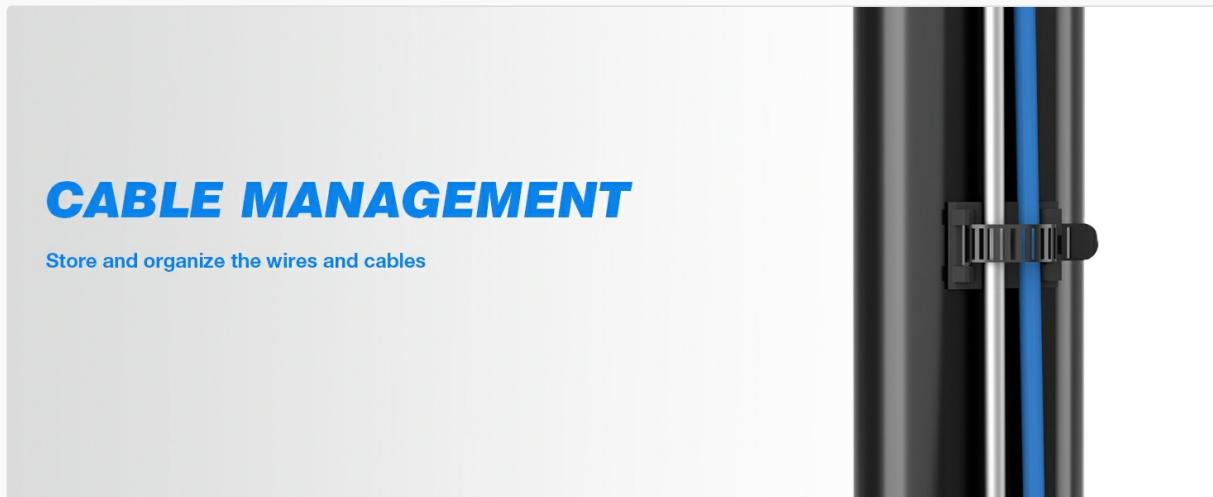


Image 5.3: Close-up view of the cable management clips on the TV stand's column, designed to store and organize wires and cables.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your TV stand.

- **Cleaning:** Use a soft, damp cloth to clean the tempered glass base and metal components. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Check Connections:** Periodically check all screws and bolts to ensure they remain tight and secure. Re-tighten if necessary.
- **Dusting:** Regularly dust the stand to prevent buildup, especially on the TV mounting bracket and column.

7. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

- **Stand is Wobbly/Unstable:**

- Ensure the stand is placed on a completely flat and level surface.
- Verify all assembly screws are tightened securely.
- Check that the non-slip pads are correctly positioned under the glass base.

- **TV Does Not Fit the Stand:**

- Confirm your TV's screen size is between 19 and 43 inches.
- Check your TV's VESA mounting pattern. It must be one of the supported patterns: 75x75mm, 100x100mm, 200x100mm, or 200x200mm.
- Ensure you are using the correct screws and spacers from the hardware kit for your specific TV model.

- **TV Cannot Swivel:**

- Ensure no cables are obstructing the swivel mechanism.
- Verify the TV is not pushed too close to a wall or other obstruction.

8. SPECIFICATIONS

| Feature | Detail |
|-------------------------|--|
| Brand | Rfiver |
| Model Number | UT2003 |
| Compatible TV Sizes | 19 - 43 inches |
| Maximum Weight Capacity | 99 lbs (45 kg) |
| VESA Compatibility | 75x75mm, 100x100mm, 200x100mm, 200x200mm |
| Swivel Angle | ±40 Degrees |
| Material | Alloy Steel, Tempered Glass |
| Product Dimensions | 14.9 x 9.4 x 16.5 inches (L x W x H) |
| Item Weight | 5.61 pounds |

QUICK & EASY ASSEMBLY

No Drilling



Image 8.1: Detailed view of the product dimensions and key features, including double safety, cable management, non-slip pads, and thick high-strength steel construction.

9. WARRANTY AND SUPPORT

Rfiver is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in this manual, please retain your proof of purchase for any warranty claims.

If you have any questions, require assistance with assembly, or encounter any issues with your Rfiver TV stand, please contact our friendly customer service team. We are dedicated to providing helpful and effective support.

For further information or support, please visit the official Rfiver store or contact the seller directly.