

USARMT EN2A27S

USARMT EN2A27S Remote Control Instruction Manual

For Sharp N7000U Series 4K Smart TVs

INTRODUCTION

This instruction manual provides essential information for the setup, operation, and maintenance of your USARMT EN2A27S replacement remote control. This remote is specifically designed to be compatible with Sharp N7000U Series 4K Smart TV models, including LC43N7000U, LC50N7000U, LC55N7000U, LC60N7000U, and LC65N7000U. Please read this manual thoroughly to ensure proper use and to maximize your viewing experience.

PRODUCT OVERVIEW

The USARMT EN2A27S is a direct replacement remote control, offering full functionality for compatible Sharp N7000U Series 4K Smart TVs. It features an ergonomic design and a comprehensive button layout for easy navigation and control of your television and its smart features.





This image displays the USARMT EN2A27S replacement remote control. It features a standard layout with power, input, number keys, navigation pad, volume, channel, playback controls, and dedicated buttons for streaming services like Netflix, Amazon, Vudu, and YouTube. The remote is black with gray and red accents.

SETUP

The USARMT EN2A27S remote control is preprogrammed and requires no additional setup or programming. Simply insert batteries, and it will be ready for use with your compatible Sharp N7000U Series 4K Smart TV.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready to operate your television.

OPERATING INSTRUCTIONS

The remote control provides intuitive access to all standard television functions. Refer to the product overview image for button placement.

- **Power Button (●):** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **Navigation Pad (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Back Button:** Returns to the previous menu or screen.
- **Exit Button:** Exits the current menu or application.
- **Volume Up/Down (VOL +/-):** Adjusts the television's volume.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute Button:** Mutes or unmutes the television audio.
- **Playback Controls (Play, Pause, Fast Forward, Rewind, Stop):** Control media playback.
- **Dedicated Streaming Buttons (Netflix, Amazon, Vudu, YouTube):** Provide quick access to these streaming applications.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh batteries are correctly installed.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Point the remote directly at the TV.
- **Specific buttons not working:**
 - Clean the remote surface, especially around the unresponsive buttons, to remove any debris.
 - Replace batteries, as low power can sometimes affect specific functions.
- **No pairing instructions:**
 - This remote is preprogrammed and does not require pairing with your Sharp N7000U Series TV. If your TV is not

responding, please follow the steps for "Remote not responding" above.

SPECIFICATIONS

Brand	USARMT
Model Number	EN2A27S (Internal SKU: 4330255002)
Compatible Devices	Sharp N7000U Series 4K Smart TVs (LC43N7000U, LC50N7000U, LC55N7000U, LC60N7000U, LC65N7000U)
Connectivity Technology	Infrared
Special Feature	Ergonomic Design
Max Number of Supported Devices	1 (Television)
Item Weight	3.03 ounces
Package Dimensions	8.11 x 1.97 x 0.79 inches

WARRANTY AND SUPPORT

This product includes a 30-day hassle-free return policy. For any issues or returns within this period, please contact your retailer or point of purchase. Specific long-term warranty details are not provided with this replacement product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question