

[Manuals.plus](#) /

› [Mist Maker](#) /

› Mist Maker Nebler 3 Ultrasonic Humidifier Instruction Manual

Mist Maker Nebler 3

Mist Maker Nebler 3 Ultrasonic Humidifier Instruction Manual

1. INTRODUCTION

The Mist Maker Nebler 3 Ultrasonic Humidifier is designed to generate mist, effectively increasing humidity and improving the surrounding climate. It utilizes ultrasonic waves and ceramic membranes to produce water vapor. This device is suitable for various indoor and outdoor applications, including garden ponds, small fountains, aquariums, greenhouses, or plant oases.

2. SAFETY INSTRUCTIONS

- Read all instructions thoroughly before operating the device.
- Keep the device out of reach of children and pets.
- Do not operate the device if any part is damaged.
- Ensure the humidifier is placed in water at the recommended depth to prevent damage.
- Use only the provided power supply with the device.
- Always disconnect the device from the power supply before performing any maintenance or cleaning.
- Do not touch the ceramic membranes while the device is operating.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1x Mist Maker Nebler 3 Ultrasonic Humidifier (with 3 membranes)
- 1x 10-meter Cable
- 1x Power Supply



Image: The complete set of the Mist Maker Nebler 3 Ultrasonic Humidifier, including the main humidifier unit with three mist outlets, the long connecting cable, and the power adapter with a European plug. All components are black except for the silver humidifier unit.

4. SETUP

1. **Placement:** Position the humidifier in a suitable water container, pond, or fountain. Ensure the device is fully submerged in water, maintaining the recommended water depth of 30-50 mm.
2. **Connection:** Connect the humidifier unit to the 10-meter cable. Ensure the connection is secure.
3. **Power Supply:** Connect the other end of the 10-meter cable to the provided power supply.
4. **Power On:** Plug the power supply into a suitable electrical outlet. The device will begin operation.

5. OPERATING INSTRUCTIONS

- Once properly set up and connected to power, the Mist Maker Nebler 3 will automatically begin generating mist.
- The device features an integrated water level sensor. If the water level drops too low, the device will automatically shut off to prevent damage to the ceramic disc. Refill water as needed to resume operation.
- The optimal operating water temperature range is +5°C to +50°C.
- For optimal mist distribution in indoor environments, consider using a recirculating air system.

6. MAINTENANCE

- **Ceramic Disc Replacement:** The ceramic membranes have an approximate lifespan of 3000 operating hours. When you observe a significant decrease in mist emission, it is essential to replace the ceramic disc. Always disconnect power before attempting replacement.
- **Cleaning:** The device's housing has a special coating designed to facilitate the easy removal of limescale deposits. Regularly clean the device to ensure optimal performance and longevity. Use a soft cloth and mild cleaning solution if necessary.
- **Power Disconnection:** Always ensure the device is disconnected from the power supply before performing any cleaning or maintenance tasks.

7. TROUBLESHOOTING

- **No Mist Production:**
 - Check if the power supply is properly connected and plugged into a working outlet.
 - Verify that the water level is within the recommended range (30-50 mm).
 - Inspect the ceramic disc for wear or damage. If worn, replace it.
- **Reduced Mist Production:**
 - The ceramic disc may be nearing the end of its lifespan (approx. 3000 hours). Consider replacing it.
 - Limescale deposits may be affecting performance. Clean the device thoroughly.
- **Device Shuts Off Automatically:**
 - This indicates that the water level is too low. Refill the water to the recommended depth.

8. SPECIFICATIONS

Feature	Specification
Dimensions (Diameter x Height)	6.8 cm x 5.5 cm
Recommended Water Depth	30 - 50 mm
Max Mist Output	1200 ml/h
Water Temperature Range	+5°C to +50°C
Material	Nickel-plated brass / Stainless steel
Cable Length	10 meters
Ceramic Disc Diameter	20 mm
Ceramic Disc Lifespan	Approx. 3000 hours
Power	72 W
Current Consumption	<2.8 A
Ultrasonic Frequency	1700 ± 40 KHz

Voltage	24 V AC
Capacity	1.2 liters

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts, please contact your retailer or the manufacturer directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B073GD6Y89>

More documents and user manuals: <https://manuals.plus/>