

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [illy](#) /

> [illy Y3.2 Espresso and Coffee Machine Instruction Manual](#)

illy y3.2

illy Y3.2 Espresso and Coffee Machine

Model: Y3.2 (60298)

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your illy Y3.2 Espresso and Coffee Machine. The Y3.2 is designed for preparing both espresso and brewed coffee using illy iperEspresso capsules. Its compact design and intuitive operation make it suitable for daily use.

Key features include one-touch operation, two programmable coffee settings, and an adjustable cup shelf to accommodate various cup sizes. The machine also features a removable water tank and automatic ejection of used capsules into a dedicated drawer.

SAFETY INFORMATION

- Read all instructions before operating the appliance.
- Do not immerse the machine, power cord, or plug in water or other liquids.
- Ensure the voltage specified on the rating label matches your mains voltage.
- Keep the appliance out of reach of children.
- Unplug the machine from the outlet when not in use and before cleaning.
- Do not operate the machine with a damaged cord or plug.
- Use only illy iperEspresso capsules with this machine.

COMPONENTS OVERVIEW



Figure 1: Front view of the illy Y3.2 machine, showing the dispenser, cup buttons, and drip tray.



Figure 2: Angled view of the illy Y3.2 machine with the top lid open, revealing the capsule insertion slot.



Figure 3: Back view of the illy Y3.2 machine, highlighting the removable water tank.

- **Water Tank:** Located at the back, removable for easy filling. Capacity: 25.4 oz.
- **Capsule Insertion Slot:** Accessed by lifting the top lid.
- **Dispenser:** Where coffee/espresso is dispensed.
- **Cup Buttons:** Two buttons for different coffee settings (e.g., espresso and lungo/coffee).
- **Adjustable Cup Shelf:** Can be moved to accommodate various cup heights.
- **Drip Tray:** Collects excess liquid.
- **Used Capsule Drawer:** Automatically collects up to 7 used capsules.

SETUP

1. **Unpacking:** Carefully remove the machine from its packaging and place it on a stable, flat surface. Remove all protective films and packaging materials.
2. **Water Tank Preparation:** Remove the water tank from the back of the machine. Rinse it with fresh water and fill it with potable water up to the MAX level indicator. Reinsert the water tank securely.
3. **Initial Rinse (Priming):**
 - Plug the machine into a grounded electrical outlet.
 - Place a large container (at least 8 oz) under the dispenser.
 - Press the power button to turn on the machine. The cup buttons will flash.
 - Once the buttons stop flashing and remain steadily lit, press either cup button to initiate a rinse cycle. Allow the machine to dispense water until the tank is nearly empty.
 - Refill the water tank with fresh water. The machine is now primed and ready for use.

OPERATING INSTRUCTIONS

1. **Power On:** Ensure the water tank is filled and the machine is plugged in. Press the power button. The cup buttons will flash during heating and become steadily lit when ready.
2. **Insert Capsule:** Lift the top lid of the machine. Insert an illy iperEspresso capsule into the designated slot. Close the lid firmly.
3. **Place Cup:** Position your cup on the adjustable cup shelf under the dispenser. Adjust the shelf height as needed.

4. Brew Coffee/Espresso:

- Press the left cup button for a smaller serving (espresso).
- Press the right cup button for a larger serving (coffee/lungo).
- The machine will automatically stop dispensing when the programmed volume is reached.

5. Programmable Settings: To customize the volume for each button:

- With the machine ready, insert a capsule and place a cup.
- Press and hold the desired cup button. Release the button when the desired volume is reached. The machine will remember this setting for future use.

6. Used Capsule Ejection: After brewing, lift the top lid. The used capsule will automatically drop into the internal collection drawer. Close the lid.

7. Power Off: Press the power button to turn off the machine.

MAINTENANCE

Cleaning

- **Drip Tray and Used Capsule Drawer:** Regularly empty and clean the drip tray and used capsule drawer. These components are removable and can be washed with warm, soapy water. Rinse thoroughly and dry before reinserting. The used capsule drawer has a capacity of 7 capsules.
- **Water Tank:** Clean the water tank periodically with warm, soapy water. Rinse well to remove any soap residue.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the machine in water.

Descaling

Mineral deposits from water can build up inside the machine, affecting performance and coffee quality. Descaling is recommended every 2-3 months, or more frequently if you have hard water.

1. Empty the water tank and fill it with a descaling solution specifically designed for coffee machines, following the manufacturer's instructions.
2. Place a large container under the dispenser.
3. Turn on the machine. Once ready, run several brewing cycles without a capsule until the water tank is empty.
4. Rinse the water tank thoroughly and fill it with fresh water.
5. Run several more brewing cycles with fresh water to rinse out any descaling solution residue.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.

Problem	Possible Cause	Solution
Cup buttons are flashing continuously.	Machine is heating up; water tank empty; priming required.	Wait for buttons to become steadily lit. Check water tank level and refill if necessary. Perform initial rinse/priming if it's the first use or after prolonged storage.
No coffee dispensed or very little coffee.	Water tank empty; machine not primed; capsule not inserted correctly; machine needs descaling.	Refill water tank. Perform priming. Ensure capsule is correctly seated. Descale the machine.
Coffee is not hot enough.	Machine not fully heated; cup not pre-warmed.	Allow machine to fully heat until buttons are steady. Pre-warm your cup with hot water.
Machine is leaking.	Drip tray full; internal seal issue; machine needs descaling.	Empty and clean the drip tray. If leaking persists, contact customer support. Descaling can sometimes resolve minor internal blockages.

SPECIFICATIONS

Feature	Detail
Brand	illy
Model Name	y3.2
Item Model Number	60298
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Human Interface Input	Touchscreen (buttons)
Special Features	Programmable, Removable Tank
Water Tank Capacity	25.4 oz (approx. 0.75 liters)
Used Capsule Drawer Capacity	7 capsules
Product Dimensions (W x D x H)	3.94 x 11.73 x 10 inches (approx. 10 x 29.8 x 25.4 cm)
Item Weight	8.83 pounds (approx. 4 kg)
Material Type	Plastic
Color	Red

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official illy website. If you encounter any issues not covered in this manual or require further assistance, please contact illy customer support.

You can typically find contact details for customer support on the illy website or within your product packaging.