



Manuals.plus /

› Infinix /

› Infinix Note 3 Pro X601 Dual SIM Smartphone User Manual

## Infinix X601

# Infinix Note 3 Pro X601 Dual SIM Smartphone User Manual

Model: X601

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)  
[Warranty & Support](#)

## 1. INTRODUCTION

---

The Infinix Note 3 Pro X601 is a high-performance smartphone designed to offer a seamless user experience. Featuring a 6-inch Full HD display, an Octa-Core processor, 3GB RAM, and a 4500mAh battery, this device is built for both productivity and entertainment. This manual provides detailed instructions to help you get the most out of your Infinix Note 3 Pro X601.

### Key Features:

- Dual SIM capability for flexible network usage.
- Powerful Octa Core processor for smooth multitasking.
- 16 GB internal storage for your apps and media.
- High-resolution 13 MP main camera and 5 MP front camera.
- Vibrant 6-inch Full HD display for immersive viewing.
- 3GB RAM for efficient performance.
- Long-lasting 4500mAh battery.
- Runs on Android 6.0 Marshmallow operating system.



Image 1.1: Front and rear view of the Infinix Note 3 Pro X601 smartphone.

## 2. SETUP GUIDE

---

### 2.1. SIM Card and Memory Card Installation

The Infinix Note 3 Pro X601 supports dual SIM cards and an external memory card for expanded storage.

1. Locate the SIM/memory card tray on the side of the device.
2. Insert the SIM ejector tool into the small hole next to the tray to open it.
3. Carefully place your Nano-SIM cards into the designated slots. Ensure the gold contacts face downwards.
4. If using, insert a microSD card into its dedicated slot.
5. Gently push the tray back into the device until it is flush with the side.

### 2.2. Charging the Battery

Before first use, it is recommended to fully charge the device battery.

1. Connect the USB cable to the charging port at the bottom of the phone.
2. Connect the other end of the USB cable to the power adapter.
3. Plug the power adapter into a wall outlet.

4. The charging indicator will appear on the screen.

## 2.3. Powering On and Off

- **To Power On:** Press and hold the Power button (located on the right side) until the Infinix logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select 'Power off' and confirm.
- **To Restart:** From the power options menu, select 'Restart'.

## 2.4. Initial Setup

Upon first power-on, the device will guide you through an initial setup wizard. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Set up your Google account.
- Configure security settings (fingerprint, PIN, pattern).

# 3. OPERATING YOUR DEVICE

---

## 3.1. Basic Navigation

The Infinix Note 3 Pro X601 features a capacitive touchscreen for intuitive interaction.

- **Tap:** Touch the screen once to open an app, select an item, or press a button.
- **Touch and Hold:** Press and hold an item for more options or to move it.
- **Swipe:** Drag your finger across the screen to scroll through lists or switch between home screens.
- **Pinch:** Use two fingers to zoom in or out on photos and web pages.

## 3.2. Making Calls and Sending Messages

- **Calls:** Open the 'Phone' app, enter the number, and tap the call icon. To answer an incoming call, swipe up.
- **Messages:** Open the 'Messages' app, tap the new message icon, enter the recipient's number or select from contacts, type your message, and tap send.

## 3.3. Connecting to the Internet

- **Wi-Fi:** Go to 'Settings' > 'Wi-Fi', turn Wi-Fi on, and select your desired network. Enter the password if required.
- **Mobile Data:** Go to 'Settings' > 'Data usage' or 'More' > 'Mobile networks' and enable 'Mobile data'.

## 3.4. Camera Usage

The device is equipped with a 13 MP rear camera and a 5 MP front camera.

1. Open the 'Camera' app.
2. Tap the shutter button to take a photo.



## 4.2. Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of your phone. Avoid using harsh chemicals or abrasive materials.

## 4.3. Software Updates

Regularly check for software updates to ensure optimal performance and security. Go to 'Settings' > 'About phone' > 'System updates'.

## 4.4. Data Backup

It is recommended to regularly back up your important data to a cloud service or a computer to prevent data loss.

# 5. TROUBLESHOOTING

---

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds.
Apps are crashing or freezing.	Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). If the issue persists, uninstall and reinstall the app.
Cannot connect to Wi-Fi.	Ensure Wi-Fi is enabled. Restart your router and phone. Forget the network and reconnect.
Poor battery life.	Reduce screen brightness, disable unused features (Bluetooth, GPS), close background apps, and check for power-intensive apps in battery settings.
Device is slow or unresponsive.	Restart the device. Clear cache and unnecessary files. Consider a factory reset if issues persist (back up data first).

# 6. PRODUCT SPECIFICATIONS

---

Feature	Detail
Brand	Infinix
Model Name	Note 3 Pro
Item Model Number	X601
Operating System	Android 6.0 Marshmallow
Installed RAM Memory Size	3 GB
Memory Storage Capacity	16 GB
CPU Model	Octa Core (Snapdragon)
Screen Size	6 Inches
Resolution	1920 x 1080 (Full HD)
Main Camera	13 MP
Front Camera	5 MP
Battery Capacity	4500mAh
Cellular Technology	4G LTE
Connectivity Technology	Bluetooth
Package Dimensions	20.4 x 9.6 x 4.6 cm
Item Weight	480 g

## 7. WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product packaging or visit the official Infinix website. Keep your proof of purchase for any warranty claims.

For technical assistance or service inquiries, please contact Infinix customer service through their official channels.