

[Manuals.plus](#) /

› [Hampton Bay](#) /

› Hampton Bay 4-Light Directional Track Lighting Kit User Manual

Hampton Bay 1001573393

Hampton Bay 4-Light Directional Track Lighting Kit User Manual

Model: 1001573393

PRODUCT OVERVIEW

This manual provides detailed instructions for the installation, operation, and maintenance of your Hampton Bay 4-Light Directional Track Lighting Kit. Please read this manual thoroughly before installation and keep it for future reference.



Image: The Hampton Bay 4-Light Directional Track Lighting Kit, featuring a straight bar with four adjustable light heads in a bronze finish. Each light head contains an LED bulb.

SAFETY INFORMATION

Always follow basic safety precautions when installing or using this product to reduce the risk of fire, electric shock, or personal injury.

- Ensure power is turned off at the circuit breaker before installation or maintenance.
- Consult a qualified electrician if you are unsure about the installation process.
- Do not install in wet locations. This product is designed for indoor use only.
- Use only the specified bulb type and wattage.
- Keep flammable materials away from the light fixture.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Track Bar with Canopy
- 4 x Directional Light Heads (pre-installed)
- 1 x Remote Control
- Mounting Hardware (screws, wire nuts)
- Instruction Manual

SPECIFICATIONS

Attribute	Detail
Brand	Hampton Bay
Model Number	1001573393
Color	Bronze
Style	Modern
Light Source Type	LED
Number of Light Sources	4
Wattage	21 watts
Voltage	21 Volts
Control Method	Remote
Special Feature	Dimmable
Dimensions	26.3 x 6 x 5.1 inches
Item Weight	3 Pounds

SETUP AND INSTALLATION

Follow these steps for proper installation. It is recommended to have two people for installation.

1. **Prepare the Installation Area:** Turn off power at the main circuit breaker. Ensure the mounting surface is clean, dry, and structurally sound.
2. **Mount the Mounting Plate:** Secure the mounting plate to the junction box using the provided screws. Ensure it is flush with the ceiling.
3. **Wire Connections:** Connect the household supply wires to the fixture wires using the provided wire nuts. Match black to black (live), white to white (neutral), and green/bare copper to green/bare copper (ground). Ensure all connections are secure.
4. **Attach the Fixture:** Carefully lift the fixture and align the mounting holes on the canopy with the screws on the mounting plate. Secure the fixture with the decorative nuts.
5. **Adjust Light Heads:** Once installed, you can adjust the direction of each light head by gently pivoting them along the track.
6. **Restore Power:** Turn the power back on at the circuit breaker.

OPERATING INSTRUCTIONS

Your Hampton Bay Track Lighting Kit is designed for ease of use.

- **Power On/Off:** Use the wall switch or the remote control to turn the lights on or off.
- **Dimming Function:** If connected to a compatible dimmer switch or using the provided remote control, you can adjust the brightness of the lights. Refer to your dimmer switch's instructions for specific operation.
- **Directional Adjustment:** Each light head can be manually rotated and tilted to direct light to your desired area.

Note: The remote control requires batteries (not included). Please refer to the remote control's specific instructions for battery installation and pairing, if necessary.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your lighting kit.

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish.
- **Bulb Replacement:** This fixture uses integrated LED lights. If a light source fails, the entire fixture may need to be replaced. Consult Hampton Bay customer support for assistance.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

TROUBLESHOOTING

If you encounter issues with your track lighting kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lights do not turn on.	No power to the fixture; loose wiring; faulty wall switch/remote.	Check circuit breaker. Ensure all wire connections are secure. Test wall switch or remote batteries.
Lights flicker.	Incompatible dimmer switch; loose connection.	Ensure dimmer is LED compatible. Check wiring connections.
Remote control not working.	Dead batteries; remote not paired.	Replace remote batteries. Refer to remote instructions for pairing.

If the problem persists, contact Hampton Bay customer support.

WARRANTY AND SUPPORT

Hampton Bay products are manufactured to high-quality standards and are backed by a limited warranty. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Hampton Bay website. For technical assistance, replacement parts, or general inquiries, please contact Hampton Bay Customer Service:

Website: [Hampton Bay Official Website](#)

Phone: Refer to your product packaging or the Hampton Bay website for the most current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B073HKF1H2>

More documents and user manuals: <https://manuals.plus/>