

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [DOMO](#) /
- › [DOMO DO700BL Power Mixer Instruction Manual](#)

DOMO DO700BL

DOMO DO700BL Power Mixer Instruction Manual

MODEL: DO700BL

Overview	Setup	Operation	Safety Instructions	Product	Specifications	Warranty & Support
			Maintenance	Troubleshooting		
			Support			

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- To protect against electrical shock, do not immerse the motor base, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always operate the blender with the lid in place.
- Blades are sharp. Handle with care.
- Do not blend hot liquids.
- Do not operate the appliance continuously for more than 1 minute. Allow the motor to cool down between cycles.

2. PRODUCT OVERVIEW AND COMPONENTS

The DOMO DO700BL Power Mixer is designed for quick and efficient blending of various ingredients directly into a portable bottle. It features a powerful 1000W motor and comes with multiple BPA-free bottles.

Components:

- **Motor Base Unit:** The main power unit with a 1000W motor.
- **Blade Attachment:** A robust knife system for blending and crushing.
- **530 ml Bottles (x2):** Reusable, BPA-free drinking containers with sealable lids.
- **710 ml Bottle (x1):** A larger, reusable, BPA-free drinking container with a sealable lid.
- **Lids with Drinking Opening:** For convenient on-the-go use.



Image: All components of the DOMO DO700BL Power Mixer, including the motor base, blade assembly, and three different sized bottles with their respective lids.





Image: The DOMO DO700BL Power Mixer base unit with an empty blending bottle securely attached, ready for use.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash all bottles, lids, and the blade attachment in warm, soapy water. Rinse thoroughly and dry. The bottles and lids are dishwasher-safe. Wipe the motor base with a damp cloth; do not immerse it in water.
3. **Placement:** Place the motor base on a clean, dry, and stable surface. Ensure the power cord is within reach of an electrical outlet.

4. OPERATING INSTRUCTIONS

Follow these steps to blend your ingredients:

1. **Prepare Ingredients:** Add your desired ingredients to one of the blending bottles. Ensure ingredients do not exceed the 'MAX' fill line indicated on the bottle. For best results, add liquids first, then soft ingredients, and finally harder ingredients like ice or frozen fruit.
2. **Attach Blade:** Screw the blade attachment firmly onto the open end of the bottle, ensuring a tight seal to prevent leaks.
3. **Mount Bottle:** Invert the bottle with the blade attachment and place it onto the motor base. Align the tabs on the bottle with the slots on the base and twist clockwise until it locks securely into place.
4. **Blend:** Plug the power mixer into a 230V electrical outlet. Press and hold the 'POWER' button to blend. For continuous blending, you may need to lock the button (refer to specific model instructions if applicable). For pulse blending, press and release the button repeatedly. Blend until desired consistency is achieved. The 1000W motor is suitable for crushing ice, nuts, and frozen fruit.
5. **Stop Blending:** Release the 'POWER' button to stop blending. Unplug the appliance from the outlet.
6. **Remove Bottle:** Twist the bottle counter-clockwise to unlock it from the motor base, then lift it off.
7. **Enjoy:** Unscrew the blade attachment from the bottle. Screw on a sealable drinking lid to take your drink on the go.



Image: The DOMO DO700BL Power Mixer with a bottle filled with fresh berries and ice, demonstrating preparation for blending.



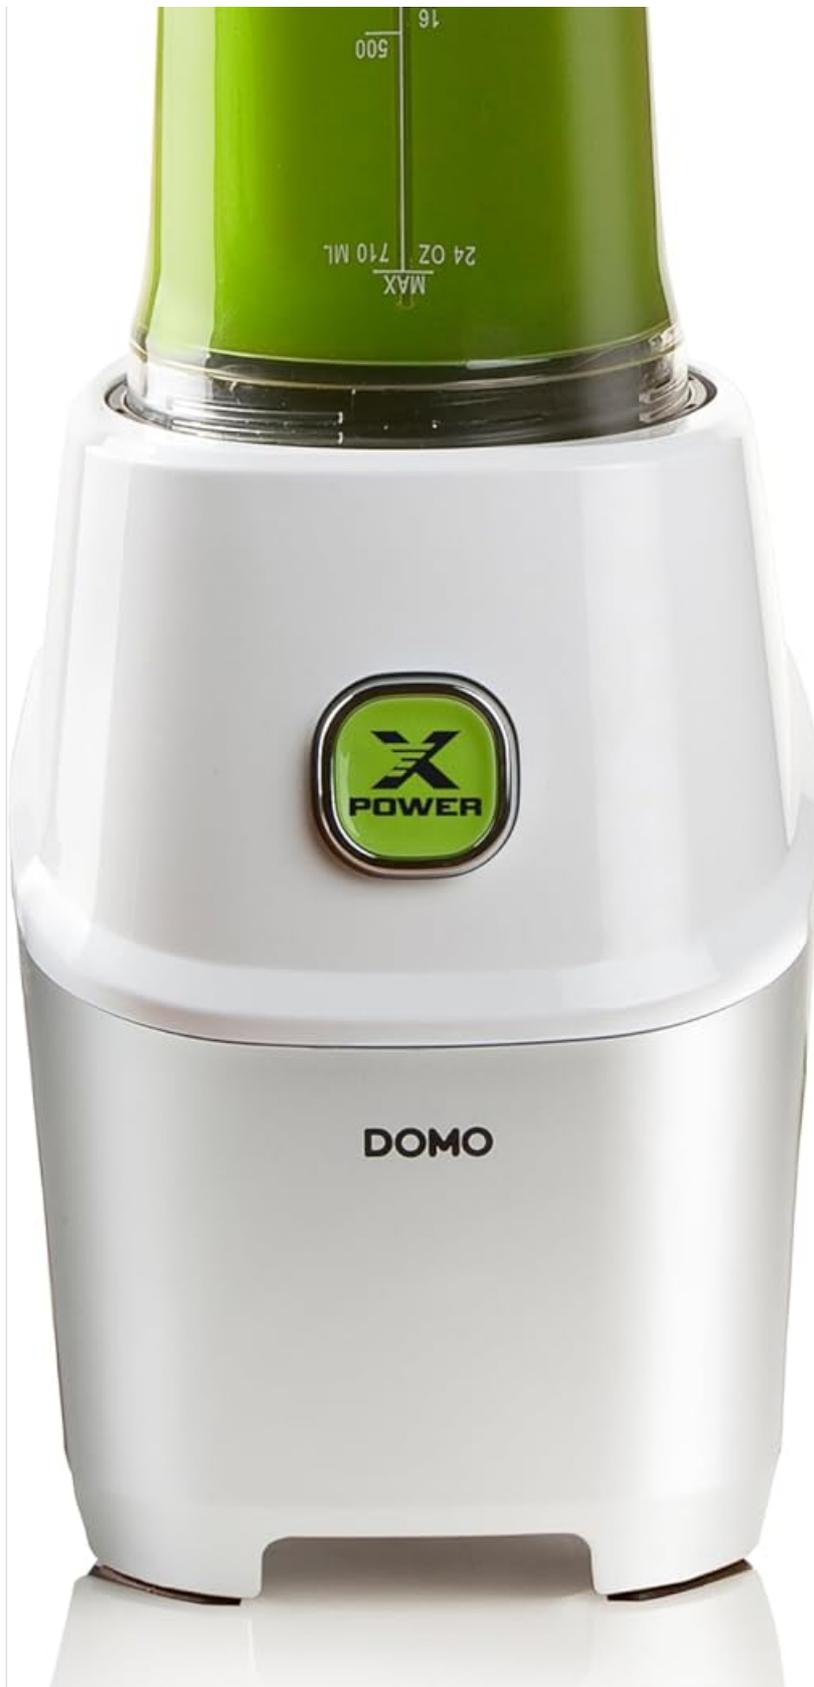


Image: The DOMO DO700BL Power Mixer with a bottle containing a freshly blended green smoothie, illustrating the end result of operation.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity of your DOMO DO700BL Power Mixer.

1. **Unplug:** Always ensure the appliance is unplugged from the power outlet before cleaning.
2. **Clean Bottles and Lids:** The blending bottles and lids are BPA-free and dishwasher-safe. They can

also be washed by hand with warm, soapy water. Rinse thoroughly.

3. **Clean Blade Attachment:** Carefully remove the blade attachment. Wash immediately after use to prevent food from drying on the blades. Use warm, soapy water and a brush to clean around the blades. Handle with extreme care as blades are sharp. Rinse thoroughly.
4. **Clean Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.
5. **Storage:** Store the cleaned and dried appliance and its accessories in a cool, dry place.





Image: A clear 710ml DOMO blending bottle, highlighting its measurement markings and design for easy cleaning.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; bottle not correctly assembled/locked; power outage.	Ensure plug is securely in outlet. Check bottle is locked onto base. Check household power.
Ingredients not blending smoothly.	Too much liquid/solid; ingredients too large; not enough liquid.	Adjust ingredient ratio. Cut large ingredients into smaller pieces. Add more liquid. Use pulse function.
Leakage from bottle.	Blade attachment not screwed on tightly; bottle overfilled.	Ensure blade attachment is securely tightened. Do not exceed 'MAX' fill line.
Motor stops during operation.	Overheating due to continuous use or overloading.	Unplug and let the unit cool down for at least 15-20 minutes. Reduce load for next use.

7. SPECIFICATIONS

- **Brand:** DOMO
- **Model:** DO700BL
- **Power:** 1000 Watts
- **Voltage:** 230V
- **Frequency:** 50 Hz
- **Material:** Plastic (BPA-free bottles)
- **Bottle Capacities:** 2 x 530 ml, 1 x 710 ml
- **Special Features:** Portable, Ice Crushing, Nut Blending, Frozen Fruit Blending

- **Product Dimensions:** Approximately 14.2D x 13.2W x 39.5H cm (base with bottle)
- **Included Components:** 1 motor base, 1 blade attachment, 3 bottles with lids (2x 530ml, 1x 710ml)

8. WARRANTY AND SUPPORT

The DOMO DO700BL Power Mixer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage.

For technical support, service, or warranty claims, please contact your retailer or the DOMO customer service department. Contact details can typically be found on the manufacturer's official website or in the product documentation.

Please have your model number (DO700BL) and proof of purchase ready when contacting support.