

[Manuals.plus](#) /

› [YEQIN](#) /

› YEQIN Adjustable Tap Bias Binder Foot (5mm to 20mm) Instruction Manual

YEQIN EW-70

YEQIN Adjustable Tap Bias Binder Foot (5mm to 20mm) Instruction Manual

Model: EW-70

1. INTRODUCTION

The YEQIN Adjustable Tap Bias Binder Foot, Model EW-70, is a versatile accessory designed to simplify the process of attaching bias tape to fabric edges. This presser foot is compatible with most low shank snap-on domestic sewing machines, including popular brands such as Singer, Brother, Babylock, Euro-Pro, Janome, Kenmore, White, Juki, New Home, Simplicity, and Elna. It allows for precise binding with bias tape ranging from 5mm to 20mm in width, providing a clean and professional finish to your sewing projects.

Constructed from durable metal and hard plastic, this foot is engineered for ease of use and long-lasting performance. Its snap-on design ensures quick and tool-free attachment and removal from your sewing machine.



Image 1.1: The YEQIN Adjustable Tap Bias Binder Foot, showing its construction.

2. SETUP INSTRUCTIONS

Follow these steps to properly install the Adjustable Tap Bias Binder Foot on your sewing machine:

1. **Power Off:** Ensure your sewing machine is turned off and unplugged for safety.
2. **Remove Current Presser Foot:** Raise the presser foot lever. Locate the small lever or button at the back of your machine's presser foot holder and press it to release the currently attached presser foot.
3. **Attach Bias Binder Foot:** Position the YEQIN Adjustable Tap Bias Binder Foot directly under the presser foot holder. Align the bar of the bias binder foot with the groove on the presser foot holder. Lower the presser foot lever until the foot snaps securely into place. No screwdriver is required for this snap-on system.
4. **Verify Attachment:** Gently try to lift the foot to ensure it is firmly attached and does not wobble.

3. OPERATING INSTRUCTIONS

Using the Adjustable Tap Bias Binder Foot for consistent and neat bias binding:

1. **Prepare Bias Tape:** Cut your bias tape to the desired length. The foot accommodates tape widths from 5mm to 20mm.
2. **Adjust Foot Width:** The foot features an adjustable guide. Use the screw or lever on the foot to set the desired width for your bias tape. Ensure the tape will feed smoothly through the guide.
3. **Insert Bias Tape:** Feed the end of your bias tape into the wide opening of the foot's guide. The foot will automatically fold the raw edges of the bias tape inwards as it passes through.
4. **Position Fabric:** Place the raw edge of the fabric you wish to bind into the slot between the folded bias tape. Ensure the fabric edge is snug against the fold of the bias tape.
5. **Begin Sewing:** Lower the presser foot and begin sewing slowly. The foot will guide both the bias tape and the fabric, ensuring a consistent seam allowance and neatly folded edges. Maintain a steady pace and gently guide the fabric and tape.
6. **Monitor Feeding:** Continuously check that the bias tape is feeding evenly into the guide and that the fabric edge remains properly positioned.



4. MAINTENANCE

To ensure the longevity and optimal performance of your YEQIN Adjustable Tap Bias Binder Foot, follow these simple maintenance guidelines:

- **Cleaning:** After each use, gently wipe the foot with a soft, dry cloth to remove any lint, dust, or fabric fibers. For stubborn debris, a small brush can be used.
- **Storage:** Store the presser foot in a clean, dry place, preferably in a dedicated sewing accessory box, to prevent damage or loss.
- **Inspection:** Periodically inspect the foot for any signs of wear or damage. Ensure all moving parts (if any) operate smoothly.

5. TROUBLESHOOTING

If you encounter issues while using your bias binder foot, consider the following:

- **Foot Does Not Fit:** This foot is designed for **low shank snap-on domestic sewing machines**. It may not be compatible with high shank machines, slant shank machines, or certain mini/toy sewing machines. Verify your machine's shank type.
- **Bias Tape Not Feeding Smoothly:**
 - Ensure the bias tape width is within the 5mm to 20mm range and that the foot's guide is adjusted correctly for your tape.
 - Check for any snags or twists in the bias tape.
 - Make sure the tape is not too thick or stiff for the foot's mechanism.
- **Fabric Not Binding Evenly:**
 - Ensure the fabric edge is consistently placed against the bias tape's fold.
 - Sew at a slow, consistent speed.
 - Practice on scrap fabric to get a feel for guiding both materials simultaneously.

6. SPECIFICATIONS

Brand	YEQIN
Model Number	EW-70
Material	Metal, Plastic
Bias Tape Width Compatibility	5mm to 20mm (adjustable)
Machine Compatibility	Most Low Shank Snap-On Domestic Sewing Machines (e.g., Singer, Brother, Janome, etc.)
GTIN / UPC	612957097394

7. WARRANTY AND SUPPORT

For specific warranty information or technical support regarding your YEQIN Adjustable Tap Bias Binder Foot, please refer to the product packaging or contact the manufacturer directly. You can typically find contact details on the official

YEQIN website or through the retailer where the product was purchased.

When contacting support, please have your product model number (EW-70) and any purchase details readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B073LD6JVK>

More documents and user manuals: <https://manuals.plus/>