

## Lavor 6.002.0329

# Lavor Plastic Spray Lance for Pressure Washer - Model 6.002.0329 Instruction Manual

## 1. PRODUCT OVERVIEW

---

This manual provides instructions for the Lavor plastic spray lance, an accessory designed for use with compatible Lavor pressure washers. This spray lance (model 6.002.0329) is constructed from durable plastic and is intended for various cleaning tasks when connected to a high-pressure washer.



**Figure 1:** Lavor Plastic Spray Lance (Model 6.002.0329). This image shows the complete spray lance assembly, including the handle and nozzle.

## 2. COMPATIBILITY

The Lavor plastic spray lance (model 6.002.0329) is compatible with the following Lavor pressure washer models:

- Lavor Express15
- Lavor Express Plus 15
- Lavor Sierra 110
- Lavor Wave 110
- Lavor Victor 125
- Lavor Wave UP 125
- Lavor X Ray Plus 140
- Lavor Wave HR 135
- Lavor Temporale
- Lavor Speed 20
- Lavor Runner 20

- Lavor Compressor
- Lavor Ruptor

Ensure your pressure washer model is listed above for proper fit and function.

### 3. SETUP INSTRUCTIONS

---

Follow these steps to properly attach the spray lance to your Lavor pressure washer:

1. **Safety First:** Before beginning, ensure your pressure washer is turned off and disconnected from the power supply and water source. Release any residual pressure in the system by squeezing the trigger gun.
2. **Identify Connection Point:** Locate the connection point on your pressure washer's trigger gun. This is typically a quick-connect fitting or a threaded connection.
3. **Attach Spray Lance:**
  - For quick-connect fittings: Push the spray lance firmly into the trigger gun's receiver until it clicks into place. Pull gently to ensure it is securely fastened.
  - For threaded connections: Align the threads of the spray lance with the trigger gun and twist clockwise until hand-tight. Do not overtighten.
4. **Check for Secure Connection:** Verify that the spray lance is firmly attached and there are no visible gaps or loose connections.
5. **Connect Water and Power:** Once the lance is attached, reconnect your pressure washer to the water supply and power source according to your pressure washer's instruction manual.

*Note:* Always refer to your specific pressure washer's manual for detailed safety precautions and connection procedures.

### 4. OPERATING INSTRUCTIONS

---

Once the spray lance is attached and the pressure washer is ready for operation, follow these general guidelines:

1. **Start Pressure Washer:** Turn on the water supply and then the pressure washer. Allow the water to flow through the system for a few seconds to purge any air.
2. **Test Spray Pattern:** Point the spray lance in a safe direction (away from people, animals, and delicate objects) and squeeze the trigger to activate the water flow. Observe the spray pattern.
3. **Adjust Nozzle (if applicable):** If your spray lance features an adjustable nozzle, rotate or slide it to achieve the desired spray pattern (e.g., wide fan for general cleaning, narrow jet for stubborn dirt).
4. **Maintain Safe Distance:** Always maintain a safe distance from the surface you are cleaning to avoid damage. Start with a wider spray pattern and move closer if more pressure is needed.
5. **Consistent Movement:** Use consistent, overlapping strokes to ensure even cleaning.
6. **Shut Down:** When finished, turn off the pressure washer, then turn off the water supply. Squeeze the trigger gun to release residual pressure before disconnecting the spray lance.

**Important:** Never point the spray lance at people, pets, or electrical equipment. Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves.

### 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your spray lance:

- **Rinse After Use:** After each use, disconnect the spray lance and rinse it thoroughly with clean water to remove any detergent residue or debris.
- **Inspect for Damage:** Regularly inspect the spray lance for cracks, wear, or damage to the plastic body or nozzle. Replace if any damage is found.
- **Clean Nozzle:** If the spray pattern becomes irregular or weak, the nozzle may be clogged. Use a small wire or nozzle cleaning tool (often supplied with pressure washers) to clear any obstructions.
- **Storage:** Store the spray lance in a clean, dry place, away from direct sunlight and extreme temperatures. Protect it from freezing temperatures, as residual water can expand and cause damage.

## 6. TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
No water flow or low pressure	Clogged nozzle Insufficient water supply to pressure washer Air in the system	Clean the nozzle with a clearing tool. Ensure water supply is fully open and hose is not kinked. Run pressure washer with trigger open until steady water flow is achieved.
Water leaks from connection	Loose connection Damaged O-ring or seal	Ensure the spray lance is securely attached to the trigger gun. Inspect and replace any worn or damaged O-rings or seals in the connection.
Irregular spray pattern	Partially clogged nozzle Damaged nozzle tip	Clean the nozzle thoroughly. If cleaning does not resolve the issue, the nozzle may need replacement.

If you encounter problems not listed here or if the suggested solutions do not resolve the issue, please contact LAVOR customer support or a qualified service technician.

## 7. SPECIFICATIONS

Feature	Detail
<b>Model:</b>	6.002.0329
<b>Brand:</b>	LAVOR
<b>Material:</b>	Plastic
<b>Exterior Finish:</b>	Plastic
<b>Number of Ports:</b>	2
<b>Specifications Met:</b>	CE, CSA

Feature	Detail
Manufacturer:	acquaverde

## 8. WARRANTY AND SUPPORT

Information regarding specific warranty terms for the Lavor plastic spray lance (model 6.002.0329) is not available in this document. Please refer to the documentation provided with your original Lavor pressure washer or contact Lavor customer service directly for warranty details.

For technical support, spare parts, or further assistance, please contact Lavor customer support through their official website or authorized service centers. When contacting support, please have your product model number (6.002.0329) and your pressure washer model information readily available.

You can typically find contact information on the Lavor official website: [www.lavor.com](http://www.lavor.com)