

[Manuals.plus](#) /

> [SAMSUNG](#) /

> Samsung BN59-01301A LED TV Remote Control User Manual

SAMSUNG BN59-01301A

Samsung LED TV Remote Control User Manual

Model: BN59-01301A, BN59-01303A

1. INTRODUCTION

This manual provides comprehensive instructions for the Samsung BN59-01301A and BN59-01303A LED TV Remote Control. This remote is designed to operate various Samsung LED TV models from 2018, including the N5300, NU6900, NU7100, and NU7300 series. Please read this manual carefully to ensure proper use and maintenance of your remote control.

2. PRODUCT OVERVIEW



Image: Front view of the Samsung BN59-01301A LED TV Remote Control, showing all buttons and the Samsung logo.

Button Functions:

- **Power (Red Circle with Line):** Turns the TV on or off.
- **SOURCE:** Changes the input source (e.g., HDMI, AV, Component).
- **Number Buttons (0-9):** Directly selects channels or inputs numerical values.
- **- (Dash):** Used for entering sub-channels (e.g., 7-1).
- **PRE-CH:** Returns to the previous channel.
- **VOL (+/-):** Adjusts the volume level up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH (Up/Down Arrows):** Changes channels up or down.
- **CH LIST:** Displays the channel list.
- **SLEEP:** Sets the sleep timer.
- **Home (House Icon):** Accesses the Smart Hub or Home screen.
- **GUIDE:** Displays the electronic program guide.
- **SETTINGS:** Opens the TV settings menu.
- **INFO (i):** Displays information about the current program or input.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **RETURN (Curved Arrow):** Returns to the previous menu or screen.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain applications or menus, as indicated on screen.
- **E-MANUAL:** Accesses the electronic user manual.
- **P.SIZE:** Adjusts the picture size/aspect ratio.
- **CC/VD:** Toggles Closed Captions or Video Description.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: No programming is required for this remote control. It is an original factory equipment replacement.

4. OPERATING INSTRUCTIONS

4.1. Basic Operation

- **Power On/Off:** Press the **Power** button to turn your Samsung TV on or off.
- **Changing Channels:** Use the **CH Up/Down** buttons to navigate through channels. Alternatively, use the **Number Buttons** to directly enter a channel number.
- **Adjusting Volume:** Press the **VOL +** button to increase volume and **VOL -** to decrease volume.
- **Muting Sound:** Press the **MUTE** button to temporarily silence the TV. Press again to restore sound.
- **Selecting Input Source:** Press the **SOURCE** button to cycle through available input sources (e.g., HDMI1, HDMI2, TV).

4.2. Advanced Functions

- **Accessing Smart Hub/Home:** Press the **Home (House Icon)** button to open the Smart Hub, where you can access apps, streaming services, and other smart features.
- **Navigating Menus:** Use the **Directional Pad** (Up, Down, Left, Right) to move through menu options. Press the **Enter** button (center of directional pad) to confirm selections.
- **Returning to Previous Screen:** Press the **RETURN** button to go back one step in a menu or application.
- **Exiting Functions:** Press the **EXIT** button to close the current menu or application and return to live TV.
- **Viewing Program Information:** Press the **INFO** button to display details about the current program or channel.
- **Accessing Settings:** Press the **SETTINGS** button to open the TV's main settings menu for picture, sound, network, and other configurations.

5. MAINTENANCE

5.1. Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps in Section 3.1. Always replace both batteries at the same time with new AAA batteries.

5.2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote works intermittently.	Low battery power or obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's IR receiver.
Specific buttons not working.	Button stuck or internal issue.	Clean around the button. If issue persists, the remote may need replacement.
Remote does not control TV.	Incompatible TV model.	Verify your TV model is listed in the compatible models section (Section 7.1). This remote is designed for specific Samsung 2018 models.

7. SPECIFICATIONS

Feature	Detail
Brand	SAMSUNG
Model Numbers	BN59-01301A, BN59-01303A
Special Feature	No Programming Required
Color	Black
Max Number of Supported Devices	1 (Television)
Power Source	2 x AAA Batteries (not included)

7.1. Compatible TV Models (2018 Models)

- **32"**: UN32N5300, UN32N5300AF, UN32N5300AFXZA
- **43"**: UN43NU6900, UN43NU6900FXZA
- **50"**: UN50NU6900, UN50NU6900FXZA, UN50NU7100, UN50NU7100F, UN50NU7100FXZA
- **55"**: UN55NU6900, UN55NU6900FXZA, UN55NU7100, UN55NU7100F, UN55NU7100FXZA, UN55NU7300, UN55NU7300FXZA
- **65"**: UN65NU7100, UN65NU7100F, UN65NU7100FXZA, UN65NU7300, UN65NU7300FXZA
- **75"**: UN75NU7100, UN75NU7100F, UN75NU7100FXZA

© 2024 Samsung. All rights reserved.

For further assistance, please refer to your TV's user manual or visit the official Samsung support website.