

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ideal Standard](#) /
- › [Ideal Standard E036601 Connect Air Soft Close Toilet Seat Instruction Manual](#)

Ideal Standard E036601

Ideal Standard E036601 Connect Air Soft Close Toilet Seat Instruction Manual

Model: E036601

INTRODUCTION

This manual provides instructions for the installation, operation, maintenance, and troubleshooting of your Ideal Standard E036601 Connect Air Soft Close Toilet Seat. This product is designed for comfort and durability, featuring a soft-closing mechanism and a removable design for easy cleaning. Please read these instructions carefully before installation and use.



Image 1: The Ideal Standard Connect Air Soft Close Toilet Seat in its closed position.

SETUP AND INSTALLATION

Before beginning installation, ensure all components are present and undamaged. You will need basic tools such as a screwdriver and possibly a wrench.

1. **Unpack Components:** Carefully remove the toilet seat and all hardware from the packaging. Verify that you have the seat, lid, stainless steel hinges, and mounting hardware.
2. **Remove Old Seat (if applicable):** If replacing an existing toilet seat, remove it by unscrewing the nuts from the bolts located underneath the toilet bowl, usually at the back. Clean the area thoroughly.
3. **Position Hinges:** Place the hinge posts into the mounting holes on the toilet bowl. Ensure the posts are aligned

correctly with the seat's attachment points.

4. **Secure Hinges:** From underneath the toilet bowl, attach the washers and nuts to the hinge bolts. Tighten them securely, but do not overtighten, as this can damage the porcelain. Adjust the hinge posts to ensure the seat is centered on the bowl.
5. **Attach Seat:** Align the attachment points on the underside of the toilet seat with the hinge posts. Press down firmly until the seat clicks into place. The removable design allows for easy attachment and detachment.
6. **Test Functionality:** Gently lower the seat and lid to confirm the soft-closing mechanism operates smoothly. Check for any wobbling and adjust hinge tightness if necessary.





Image 2: The toilet seat with the lid open, illustrating the hinge mechanism for installation.

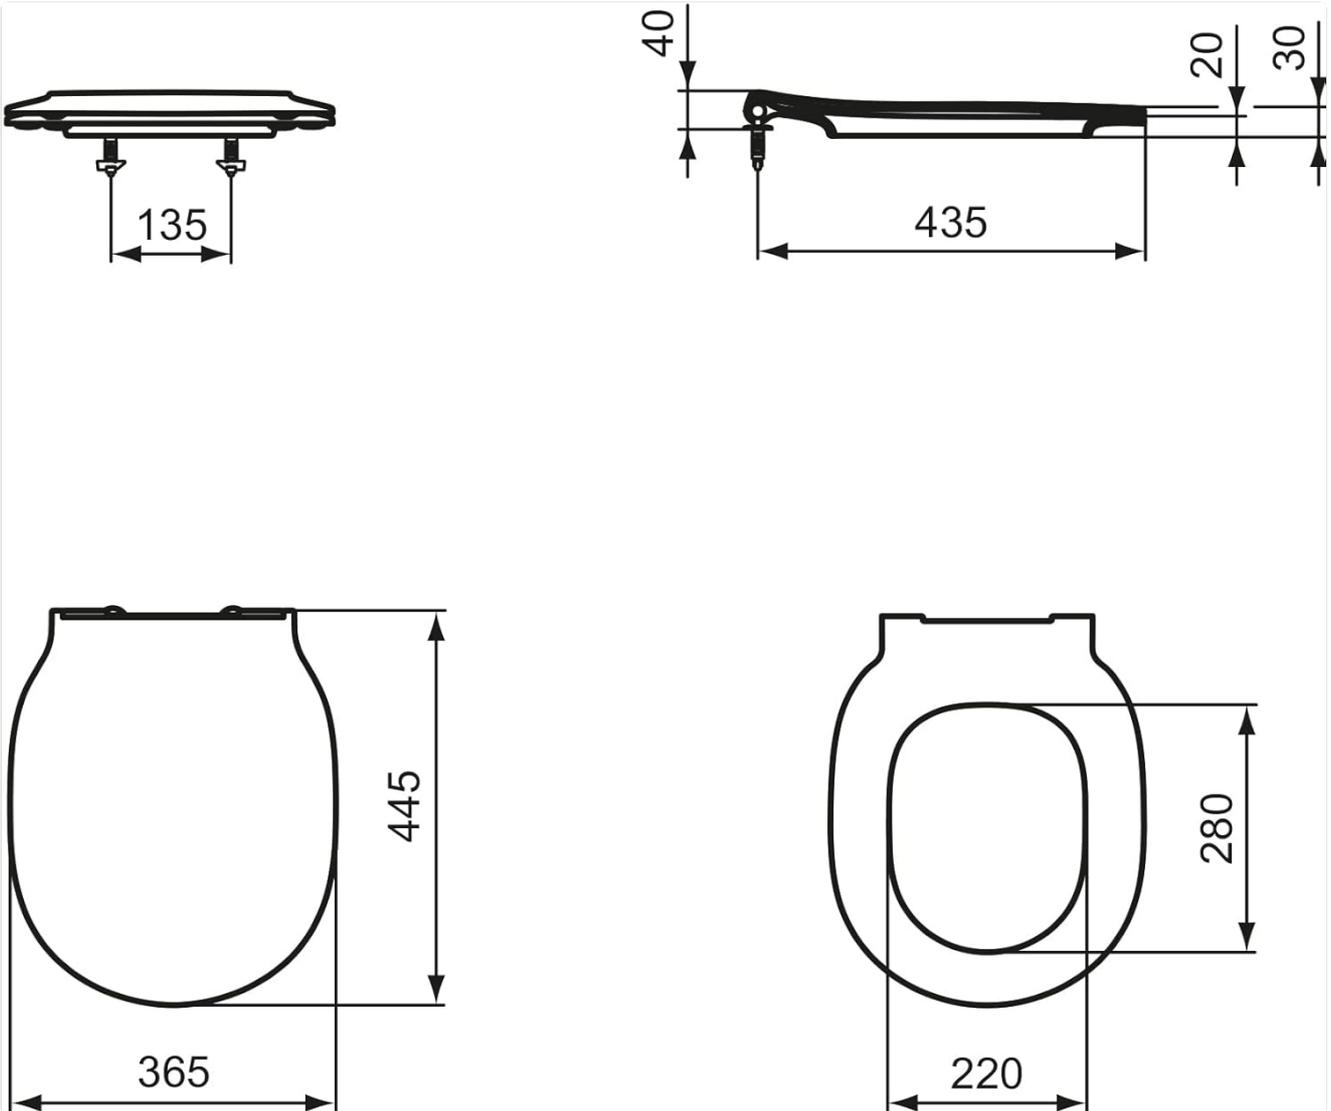


Image 3: Technical drawing showing key dimensions (in mm) for proper fit and installation.

OPERATING INSTRUCTIONS

Soft-Closing Mechanism

The Ideal Standard E036601 toilet seat is equipped with a soft-closing mechanism. This feature allows the seat and lid to close slowly and quietly with a gentle push, preventing slamming and reducing wear and tear. Simply push the seat or lid downwards, and it will close automatically at a controlled speed.

Removable for Cleaning

For thorough cleaning, the toilet seat can be easily removed from its hinges. To detach, locate the release buttons or levers near the hinges (specific design may vary slightly). Press or lift these mechanisms, and the seat will lift straight off the hinge posts. Reattach by aligning the seat with the posts and pressing down until it clicks securely into place.

CARE AND MAINTENANCE

Proper care will ensure the longevity and appearance of your toilet seat.

- **Cleaning:** Clean the seat regularly with mild soap and water. Use a soft cloth or sponge.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, strong detergents, bleach, or solvents, as these can damage the Duroplast material and the soft-closing mechanism.
- **Hinge Care:** Periodically check the stainless steel hinges for tightness. If the seat becomes loose, gently tighten the mounting nuts underneath the toilet bowl.
- **Soft-Close Mechanism:** Avoid forcing the seat or lid closed, as this can damage the soft-closing mechanism. Allow it to close naturally.

TROUBLESHOOTING

Issue: Seat is loose or wobbles.

Solution: Check the mounting nuts underneath the toilet bowl. Tighten them gently with a wrench or screwdriver until the seat is secure. Do not overtighten.

Issue: Soft-closing mechanism is not working or is too fast/slow.

Solution: Ensure the seat is correctly attached to the hinges. If the issue persists, the mechanism may be worn. Contact Ideal Standard customer support for assistance or replacement parts. Avoid forcing the seat, as this can exacerbate the problem.

Issue: Seat is difficult to remove for cleaning.

Solution: Ensure you are correctly engaging the release buttons or levers on the hinges. Refer to the "Removable for Cleaning" section under Operating Instructions. If stuck, apply gentle, even pressure while activating the release.

SPECIFICATIONS

Model Number	E036601
Brand	Ideal Standard
Material	Duroplast
Colour	White
Style	Sandwich
Pattern	With soft closing

Shape	Round
Product Dimensions (L x W x H)	44.5 x 36.5 x 5 cm
Item Weight	2.1 kg
Hinge Material	Stainless Steel

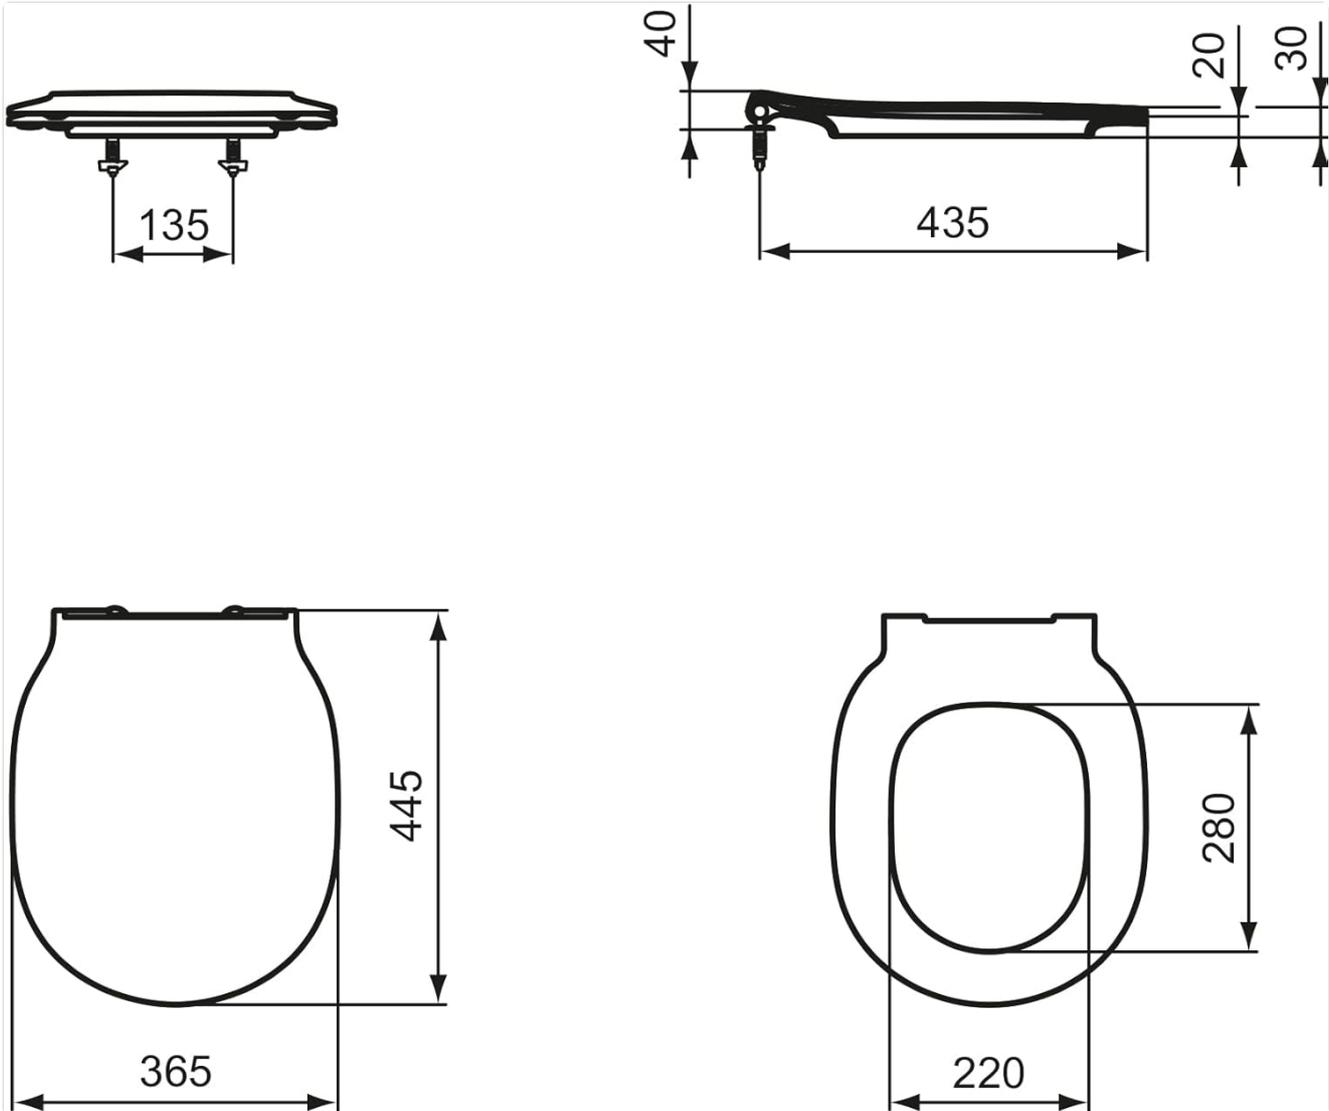


Image 4: Detailed technical drawing with all dimensions (in mm) for reference.

WARRANTY INFORMATION

This product is covered by the manufacturer's standard warranty. For specific details regarding warranty duration, coverage, and claims process, please refer to the documentation included with your purchase or visit the official Ideal Standard website. Keep your proof of purchase for warranty purposes.

CUSTOMER SUPPORT

If you require further assistance, have questions not covered in this manual, or need to order replacement parts, please contact Ideal Standard customer support. You can typically find contact information on the manufacturer's

official website or through your retailer.

Website: www.idealstandard.com (Please check for your regional website)