

Spares2go 09-DJM-643

Spares2go Control Knob for Indesit Cooker Oven

MODEL: 09-DJM-643

Introduction

This instruction manual provides essential information for the installation, operation, and maintenance of your Spares2go replacement control knob, model 09-DJM-643, designed for Indesit cooker ovens. Please read this manual thoroughly before installation and use to ensure proper function and safety.

Safety Information

- Always ensure the appliance is switched off and disconnected from the power supply before attempting any installation or maintenance.
- If you are unsure about any part of the installation process, it is recommended to consult a qualified technician.
- Keep small parts away from children to prevent choking hazards.
- Handle the control knob carefully to avoid damage.

Package Contents

Your package should contain the following item:

- 1 x Spares2go Control Knob (Silver/Inox)

Compatibility

This control knob is designed to be compatible with various Indesit cooker oven models. Please verify your appliance model number against the list below:

- 7OFIM 20 K.A IX, 7OFIM 53 K.A IX, 7OFIMS 20 K.A IX, 7OFIMS 53 K.A IX
- BIMS 31 K.A B IX GB, BIMS 31K.A B IX GB S, BIMS 53 K.A IX GB
- CIM 53 KC.A X GB, CIMS 50 1 K.A IX GB

- DIM 51 K.A IX GB, DIMS 53 KC.A IX GB
- FIM 20 K.A IX, FIM 20 K.A IX CN, FIM 20 K.A IX S, FIM 21 K.B IX GB, FIM 23 K.A IX, FIM 31 K.A IX GB, FIM 33 K.A IX GB
- FIM 51 K.A IX, FIM 51 K.A IX S, FIM 53 K.A IX, FIM 53 K.A IX GB, FIM 53 K.A IX S, FIM 53 KC.A (BL) S, FIM 53 KC.A IX, FIM 53 KC.A IX S, FIM 53 1 K.A IX
- FIM 61 K.A IX S, FIM 63 K.A IX, FIM 63 K.A IX S, FIM 73 KC.A IX GB, FIM 734 K.A IX, FIM 738 K.A IX, FIM 738 K.A IX (EE)
- FIM 831 K.A IX (EEX), FIM 88KGP.A IX, FIM 88 KGP.A IX S
- FIMB 20 K.A IX (EE), FIMB 51K.A IX (PL), FIMB 53 K.A IX (PL), FIMB 63 K.A IX (EE), FIMB 73 K.A IX (EE)
- FIMS 20 K.A AX, FIMS 20 K A AX S, FIMS 51 K.A AX, FIMS 51 K.A AX S, FIMS 51 K.A IX, FIMS 51 K.A IX S, FIMS 52 K.A IX AUS, FIMS 52 K.A IX AUS S, FIMS 53 K.A IX, FIMS 53 K.A IX S, FIMS 53 K.A IX KC.A II X
- FIMS 73 KC.A IX AUS, FIMS 73KC.A IX AUS S
- FIS 53 K C.A IX
- HIM 20 K.A IX, HIM 20 K.A IX/2, HIM 50 EK.A IX/2, HIM 50 K.A IX, HIM 50 K.A IX/2, HIM 5044 K.A IX, HIM 504 K.A IX/2, HIM 506 EK.A IX, HIM 506 EK.A IX/2, HIM 53 K.A IX, HIM 53 K.A IX/2, HIM 531 EK.A IX, HIM 531 EK.A IX/2, HIM 537 EJ K.A IX
- HIMB20K.A IX/2 (DE)

Setup and Installation

Follow these steps to replace or install your new control knob:

1. **Power Disconnection:** Before starting, ensure your cooker oven is completely switched off and unplugged from the mains power supply. This is crucial for safety.
2. **Remove Old Knob (if applicable):** Gently pull the old control knob directly off the spindle. It should slide off with moderate force. Avoid twisting or prying aggressively, as this may damage the spindle.
3. **Inspect Spindle:** Examine the metal spindle on the oven's control panel. Ensure it is clean and free from debris or damage. The new knob is designed to fit securely onto this spindle.



Image: Rear view of the control knob, illustrating the D-shaped internal fitting designed to match the oven's spindle.

4. **Install New Knob:** Align the D-shaped opening on the back of the new Spares2go control knob with the D-shaped spindle on your oven. Gently push the knob onto the spindle until it is firmly seated. Do not force it.
5. **Test Fit:** Once installed, gently pull on the knob to ensure it is securely attached. Rotate it to check for smooth movement and proper engagement with the oven's control mechanism.



Image: Front view of the silver control knob, showing its appearance when correctly installed on an appliance.

6. **Reconnect Power:** After confirming the knob is correctly installed and secure, reconnect your cooker oven to the power supply.

Operating Instructions

The Spares2go control knob functions identically to the original knob it replaces. To operate, simply push the knob in (if applicable to your oven model) and rotate it to select the desired oven function or temperature setting. Release the knob to engage the setting. Refer to your oven's primary instruction manual for specific operational details of your appliance.

Maintenance

To ensure the longevity and appearance of your control knob:

- **Cleaning:** Wipe the knob regularly with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Avoid harsh chemicals or abrasive sponges, as these can damage the finish.
- **Avoid Excessive Force:** Do not apply excessive force when turning or pulling the knob, as this can

cause premature wear or damage to the internal fitting or the oven's spindle.

Troubleshooting

Problem	Possible Cause	Solution
Knob does not fit onto the spindle.	Incorrect alignment or incompatible spindle shape.	Ensure the D-shaped opening on the knob aligns perfectly with the spindle. Verify your oven model is listed in the compatibility section.
Knob feels loose after installation.	Not pushed on completely or spindle wear.	Gently push the knob firmly onto the spindle until it clicks or feels secure. If it remains loose, the oven's spindle may be worn, requiring professional assessment.
Knob is difficult to turn.	Debris on spindle or internal mechanism issue.	Remove the knob and clean the spindle thoroughly. If the issue persists, the oven's internal control mechanism may require inspection by a qualified technician.

Specifications

Model: 09-DJM-643

Brand: Spares2go

Material: Stainless Steel

Color: Silver (Inox finish)

Handle Type: Knob

Item Shape: Round

Unit Count: 1 piece

Warranty and Support

For information regarding warranty, returns, or technical support, please refer to the retailer's policy or contact Spares2go directly through their official website or customer service channels. Ensure you have your purchase details and product model number (09-DJM-643) available when contacting support.