

Mediacom 2025B0-B1

Mediacom 2025B0-B1 Remote Control Instruction Manual

Model: 2025B0-B1

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Mediacom 2025B0-B1 Remote Control. Please read this manual thoroughly before using your remote control to ensure proper functionality and to maximize your viewing experience.

PACKAGE CONTENTS

- Mediacom 2025B0-B1 Remote Control
- Batteries (2x AAA, typically included)



Image: The Mediacom 2025B0-B1 remote control, black in color, shown alongside two AAA batteries. The remote features various control buttons for TV, cable box, and on-demand functions.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

2. Initial Programming (Pairing with Devices)

Your Mediacom remote control may require programming to operate your specific TV and cable box. Refer to the Mediacom website or your cable box manual for detailed programming codes and instructions. Generally, the process involves:

1. Turn on the device you wish to program (TV or cable box).
2. Press and hold the **SETUP** button on the remote until the indicator light illuminates.
3. Press the device button you want to program (e.g., **TV** or **CABLE**). The indicator light will blink.
4. Enter the 3, 4, or 5-digit programming code for your device brand. Codes can typically be found on the Mediacom support website or in your cable box documentation.
5. If the indicator light turns off, the code has been accepted. Test the remote's functions. If it does not work, repeat the process with a different code for your device brand.

OPERATING INSTRUCTIONS

The Mediacom 2025B0-B1 remote control is designed for intuitive operation of your television and cable box. Below is a guide to its primary functions:

Device Selection Buttons

- **WATCH CABLE:** Activates the cable box and TV for viewing cable programming.
- **TV:** Controls television functions.
- **CABLE:** Controls cable box functions.
- **DVD:** Controls DVD player functions (if programmed).
- **AUDIO:** Controls audio receiver functions (if programmed).

Power and Input

- **POWER:** Turns the selected device on or off.
- **INPUT:** Cycles through available video inputs on your TV.

Navigation and Menu Controls

- **MENU:** Accesses the main menu of the selected device.
- **SETTINGS:** Opens the settings menu.
- **GUIDE:** Displays the program guide.
- **INFO:** Displays information about the current program.
- **OK/SELECT:** Confirms selections within menus.
- **Arrow Buttons (Up, Down, Left, Right):** Navigates through menus and guide.
- **EXIT:** Exits menus or guides.
- **PAGE (Up/Down):** Scrolls through pages in the guide or menus.
- **DAY (Up/Down):** Changes the day in the program guide.

Channel and Volume Controls

- **CH (Up/Down):** Changes the channel.
- **VOL (+/-):** Adjusts the volume.

- **MUTE:** Mutes or unmutes the audio.

Playback Controls

- **PLAY/PAUSE:** Starts or pauses playback.
- **STOP:** Stops playback.
- **REWIND:** Rewinds playback.
- **FAST FORWARD:** Fast forwards playback.
- **RECORD:** Initiates recording (if supported by your cable box).
- **SKIP BACK/FORWARD:** Skips backward or forward in content.

Numeric Keypad and Special Functions

- **0-9:** Direct channel entry.
- **LAST:** Returns to the previously viewed channel.
- **FAV:** Accesses favorite channels.
- **LIVE:** Returns to live television.
- **ON DEMAND:** Accesses On Demand content.
- **LIST:** Displays recorded programs or a list of options.
- **PIP (Picture-in-Picture):** Controls Picture-in-Picture functions (if supported by your TV).
- **SWAP:** Swaps the main and PIP images.
- **Colored Buttons (A, B, C, D):** These buttons typically perform special functions within menus or specific applications, as indicated on-screen.

MAINTENANCE

Cleaning the Remote

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

- Replace batteries when the remote's performance degrades or if the indicator light does not illuminate.
- Always replace both batteries at the same time with new AAA alkaline batteries.
- Do not mix old and new batteries, or different types of batteries.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Replace batteries, ensuring correct polarity.

Problem	Possible Cause	Solution
Remote not controlling device.	Incorrect device selected or not programmed.	Press the correct device button (TV, CABLE, etc.). Reprogram the remote if necessary (see "Initial Programming" section).
Remote indicator light not illuminating.	Batteries are completely drained or remote is faulty.	Replace batteries. If the issue persists, contact Mediacom support.
Buttons are sticky or unresponsive.	Dirt or debris under buttons.	Clean the remote (see "Cleaning the Remote" section).

SPECIFICATIONS

- **Model:** 2025B0-B1
- **Brand:** Mediacom
- **Connectivity Technology:** Infrared
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Power Source:** 2x AAA Batteries (not included with all purchases)

WARRANTY INFORMATION

Warranty terms and conditions for the Mediacom 2025B0-B1 Remote Control are typically provided at the point of purchase or by Mediacom directly. Please retain your proof of purchase. For specific warranty details, contact your retailer or Mediacom customer service.

SUPPORT

If you require further assistance or encounter issues not covered in this manual, please contact Mediacom customer support. You can typically find contact information on your Mediacom bill, their official website, or by searching for "Mediacom customer service" online.

For programming codes and additional resources, visit the official Mediacom support website.

© 2025 Mediacom. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question