



Manuals.plus /

› Proctor Silex /

› Proctor Silex 25479 Breakfast Sandwich Maker Instruction Manual

Proctor Silex 25479

Proctor Silex 25479 Breakfast Sandwich Maker Instruction Manual

Model: 25479

INTRODUCTION

The Proctor Silex 25479 Breakfast Sandwich Maker allows you to prepare homemade breakfast sandwiches efficiently. This appliance is designed for ease of use, enabling customization with various ingredients to suit individual preferences. This manual provides essential information for safe operation, maintenance, and optimal performance of your sandwich maker.

IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to “off,” then remove plug from wall outlet.

- Do not use appliance for other than intended use.

SETUP

1. **Unpack:** Carefully remove the sandwich maker and all its components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wipe down all non-electrical parts with a damp cloth. Wash the removable cooking plates and rings in warm, soapy water, then rinse and dry thoroughly. Refer to the 'Maintenance and Cleaning' section for detailed instructions.
3. **Placement:** Place the sandwich maker on a stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation. Ensure the power cord is not obstructed or near hot surfaces.

OPERATING INSTRUCTIONS

The Proctor Silex Breakfast Sandwich Maker is designed to prepare a complete breakfast sandwich in approximately 5 minutes. You can use a variety of fresh ingredients including eggs, cheese, and pre-cooked meats.



An exploded view of the sandwich maker illustrating the various layers of a breakfast sandwich: English muffin, egg, ham, and cheese.

Step-by-Step Sandwich Preparation:

1. **Add Bread and Ingredients to Bottom Layer:**
Open the sandwich maker. Place the bottom half of your bread (e.g., English muffin, bagel, biscuit) into the bottom cooking plate. Add pre-cooked meat, cheese, or other desired ingredients on top of the bread.



1. Add bread and precooked meat or cheese if desired

Step 1: A hand places a slice of ham over cheese and the bottom bread slice in the sandwich maker.

2. Add Egg to Middle Layer:

Lower the middle cooking plate. Crack an egg directly into the egg ring. You can also add other ingredients like vegetables or herbs with the egg.



2. Add egg

Step 2: An egg is cracked into the middle cooking ring.

3. Top Egg with Second Bread Slice:

Place the top half of your bread (e.g., English muffin, bagel, biscuit) directly on top of the egg in the middle cooking ring. Close the lid of the sandwich maker.



3. Top egg with 2nd bread slice

Step 3: The top bread slice is placed over the egg.

4. Cook and Finish:

Allow the sandwich to cook for approximately 5 minutes. Once cooked, slide the egg plate out from under the egg ring. This action combines the egg and top bread layer with the bottom ingredients.



Your breakfast sandwich is ready in 5 minutes!

Step 4: The egg plate is slid out to complete the sandwich assembly.

5. Serve:

Carefully open the lid and remove your finished breakfast sandwich. It is ready to eat!



4. Slide egg plate out to finish sandwich

Your breakfast sandwich is ready in 5 minutes!

Recipe Ideas and Customization:

The sandwich maker allows for extensive customization. Experiment with different types of bread, cheeses, pre-cooked meats, and vegetables. Recipes are included with the product to inspire your creations.



Enjoy a delicious homemade breakfast; recipes included

Enjoy a delicious homemade breakfast; recipes included.



Use your own fresh ingredients including eggs, cheese & more

Use your own fresh ingredients including eggs, cheese & more.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and hygienic operation of your Proctor Silex Breakfast Sandwich Maker.

- **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Removable Parts:** The removable cooking plates and rings are dishwasher safe. Place them on the top rack of your dishwasher for easy cleaning.
- **Exterior Cleaning:** Wipe the exterior of the sandwich maker with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
- **Do Not Immerse:** Never immerse the main unit (with electrical components) in water or any other liquid.



All removable parts are dishwasher safe

All removable parts are dishwasher safe for convenient cleaning.

TROUBLESHOOTING

If you encounter issues with your sandwich maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not functioning.	Ensure the appliance is securely plugged into a working electrical outlet. Check circuit breaker if necessary.
Sandwich is not cooking evenly.	Uneven distribution of ingredients; appliance not preheated.	Ensure ingredients are spread evenly. Allow the appliance to fully preheat before adding ingredients.
Food sticks to cooking plates.	Plates not properly seasoned or cleaned; excessive sugar in ingredients.	Ensure cooking plates are clean. A light spray of cooking oil can be used if needed, though non-stick coating should suffice. Avoid excessive sugar in recipes.
Smoke or unusual odor during first use.	Protective coatings burning off.	This is normal during initial use. Ensure adequate ventilation. If smoke persists after first few uses, discontinue use and contact support.

SPECIFICATIONS

- **Brand:** Proctor Silex
- **Model:** 25479
- **Material:** Plastic
- **Color:** White
- **Product Dimensions:** 18.54 x 14.22 x 16 cm
- **Item Weight:** 689 g
- **Special Features:** Programmable (Note: This refers to the timer function for cooking, not user-

programmable settings.)

- **UPC:** 022333254790

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Proctor Silex website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require further assistance, please contact Proctor Silex customer service.