

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Shiatsu Dome Foot Massager User Manual

Sharper Image 205360

Sharper Image Shiatsu Dome Foot Massager User Manual

Model: 205360

INTRODUCTION

The Sharper Image Shiatsu Dome Foot Massager is designed to provide a relaxing and therapeutic foot massage experience. It features shiatsu rollers for kneading, inflating airbags for compression, and optional gentle heat for enhanced comfort. This manual provides essential information for the safe and effective use of your device.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. When using electrical appliances, basic precautions should always be followed, including the following:

- Consult with a physician before using a massaging device designed for home use, especially if you have pre-existing medical conditions.
- Do not use this massager near water or in damp environments.
- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- Do not leave the appliance unattended when plugged in.
- Keep out of reach of children.
- Do not operate if the cord or plug is damaged, if it is not working properly, or if it has been dropped or damaged.
- Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

PRODUCT COMPONENTS



The Shiatsu Dome Foot Massager in use, showing a foot inserted into the device.



Side view of the massager, highlighting its dome shape and control panel.



Front view of the massager, detailing the foot inserts and the accessible control buttons.

The massager features a compact dome design with two foot inserts. The control panel is located on the top surface, providing easy access to various settings.

SETUP

1. **Unpacking:** Carefully remove the foot massager from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the massager on a flat, stable surface. Ensure there is enough space around the unit for comfortable use and proper ventilation.
3. **Power Connection:** Plug the power cord into a standard AC electrical outlet.
4. **Seating:** Sit comfortably in a chair with your feet positioned to easily insert into the massager's foot chambers.

OPERATING INSTRUCTIONS

The Sharper Image Shiatsu Dome Foot Massager offers multiple settings to customize your massage experience.

1. **Power On:** Press the Power button (usually indicated by a power symbol) to turn on the device.
2. **Insert Feet:** Gently place both feet into the designated foot chambers.
3. **Select Massage Mode:** The massager features three distinct massage modes. Press the Mode button to cycle through the available options. Each mode combines shiatsu kneading and air compression in different patterns.
4. **Adjust Intensity:** Use the Intensity button to adjust the strength of the massage. There are typically multiple intensity levels to choose from, allowing you to find your preferred comfort level.
5. **Activate Heat Function:** For added relaxation, press the Heat button to activate the gentle warming function. The heat function can be turned on or off independently of the massage modes.
6. **Enjoy Massage:** Relax and allow the massager to work. The device is designed to provide relief for tired feet, targeting various pressure points.
7. **Power Off:** When finished, press the Power button again to turn off the massager. Unplug the unit from the power outlet.

The massager is designed to fit men up to size 12 and women up to size 14.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your foot massager.

- **Cleaning:** Before cleaning, always unplug the massager from the power outlet. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** When not in use, store the massager in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid placing heavy objects on top of the unit.
- **Cord Care:** Do not wrap the power cord around the appliance. Avoid sharp bends or kinks in the cord.

TROUBLESHOOTING

If you experience issues with your Sharper Image Shiatsu Dome Foot Massager, please refer to the following common solutions:

Problem	Possible Cause	Solution
Massager does not turn on.	Not plugged in; Power outlet issue; Damaged cord.	Ensure the power cord is securely plugged into a working outlet. Try a different outlet. Inspect the power cord for any visible damage. If damaged, discontinue use and contact customer support.
Heat function is not working.	Heat not activated; Device malfunction.	Ensure the Heat button has been pressed and the indicator light is on. Note that the heat is gentle and may take a few minutes to become noticeable. If still no heat, contact customer support.
Massage feels too intense or uncomfortable.	Intensity setting too high; Sensitive feet.	Reduce the intensity level using the Intensity button. Adjust foot position within the chambers. If discomfort persists, discontinue use.

If the problem persists after attempting these solutions, please contact Sharper Image customer support.

SPECIFICATIONS

- Product Dimensions:** 16.5 x 10.2 x 18.1 inches
- Item Weight:** 11.7 Pounds
- Model Number:** 205360
- Power Source:** Corded Electric
- Massage Type:** Shiatsu, Compression
- Special Features:** Heat function, Adjustable Intensity, Multiple Massage Modes
- Manufacturer:** Sharper Image

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Sharper Image customer service. Keep your purchase receipt as proof of purchase.

You can typically find contact information on the official Sharper Image website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B073R9Y782>

More documents and user manuals: <https://manuals.plus/>