

AEG FFB 62700 PM

AEG FFB 62700 PM Freestanding Dishwasher User Manual

Model: FFB 62700 PM (911 414 375)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your AEG FFB 62700 PM Freestanding Dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.



Image 1: Front view of the AEG FFB 62700 PM Freestanding Dishwasher, showcasing its stainless steel finish and control panel.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent accidents and ensure proper operation:

- Ensure the appliance is correctly installed and earthed by a qualified person.
- Do not allow children to play with or operate the dishwasher.
- Keep detergents and rinse aid out of reach of children.

- Never open the door during operation, especially during the hot wash cycle.
- Sharp items should be loaded with points down or horizontally to avoid injury.
- Disconnect the appliance from the power supply before any cleaning or maintenance.
- Do not use the dishwasher if the power cord or plug is damaged.

3. SETUP AND INSTALLATION

This section outlines the steps for installing your freestanding dishwasher.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage incurred during transit. Report any damage to your retailer immediately.

3.2 Positioning

The dishwasher is designed as a freestanding unit. Ensure it is placed on a stable, level surface. Adjust the feet to ensure stability and proper door alignment.

3.3 Water Connection

Connect the water inlet hose to a cold water supply tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks. The drain hose should be connected to a suitable drain pipe or sink trap, ensuring it is not kinked or obstructed.



Image 2: Rear view of the dishwasher showing the water inlet and drain hoses, and electrical cable connections.

3.4 Electrical Connection

Connect the dishwasher to a properly earthed electrical outlet (230 Volts). Ensure the power cord is not trapped or damaged. Do not use extension cords or multiple adapters.

4. OPERATING INSTRUCTIONS

Follow these steps for effective use of your dishwasher.

4.1 Loading the Dishwasher

Proper loading ensures optimal cleaning results and prevents damage to dishes. The AEG FFB 62700 PM has a capacity for 15 place settings.

- Scrape off large food particles before loading.
- Place larger items in the lower basket.
- Place glasses, cups, and smaller items in the upper basket.
- Ensure items do not block the spray arms.
- Load cutlery into the cutlery basket with handles down for forks and spoons, and handles up for knives.



Image 3: Interior view of the dishwasher showing the upper and lower baskets, designed for efficient loading of various dishware.

4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Add rinse aid to the rinse aid dispenser as needed; this helps with drying and prevents water spots.



Image 4: Interior view of the empty dishwasher, highlighting the spray arms, filter system, and the detergent/rinse aid dispenser.

4.3 Selecting a Program

Use the push-button controls on the front panel to select your desired wash program. Refer to the program chart (usually inside the door or in a separate quick guide) for details on each program's duration and temperature.

4.4 Starting a Wash Cycle

Close the dishwasher door firmly. Press the Start button to begin the selected wash cycle. The dishwasher will automatically proceed through the wash, rinse, and dry phases.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and performance of your dishwasher.

5.1 Cleaning the Filters

The filter system should be cleaned regularly to prevent blockages and ensure efficient washing. Remove the coarse and fine filters, rinse them under running water, and brush away any food debris. Reassemble and replace them correctly.

5.2 Cleaning the Spray Arms

Periodically check the spray arm nozzles for blockages. If necessary, remove the spray arms and clear any debris from the holes using a thin object like a toothpick.

5.3 Exterior and Interior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. For the interior, run a dishwasher cleaner cycle periodically to remove grease and limescale buildup.

5.4 Salt Refill

If your water is hard, the dishwasher will require dishwasher salt. Refill the salt dispenser when the indicator light illuminates. This helps prevent limescale deposits on dishes and the appliance.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your dishwasher.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press Start.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms, add more detergent, clean filters.
Water spots on dishes	Lack of rinse aid, hard water.	Refill rinse aid dispenser, check salt level if applicable.
Unusual noise during operation	Items obstructing spray arms, foreign objects in pump.	Ensure dishes do not block spray arms, check filter area for foreign objects.

If the problem persists after attempting these solutions, please contact AEG customer support.

7. SPECIFICATIONS

Key technical details for the AEG FFB 62700 PM Dishwasher:

- **Model Name:** FFB 62700 PM
- **Model Number:** 911 414 375
- **Brand:** AEG
- **Installation Type:** Freestanding, Counter Top
- **Capacity:** 15 Place Settings
- **Energy Efficiency Class:** A++
- **Drying Performance Rating:** A
- **Annual Energy Consumption:** 270 kWh
- **Energy Consumption per Cycle:** 0.95 kWh
- **Noise Level:** 44 Decibels
- **Voltage:** 230 Volts
- **Product Dimensions (W x D x H):** 59.6 x 61 x 85 cm
- **Counter Depth:** 610 Millimetres
- **Material:** Stainless Steel
- **Controls Type:** Push Button
- **Item Weight:** 100 g (Note: This weight seems unusually low for a dishwasher and might be a data entry error. Refer to product packaging for accurate weight.)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your appliance or visit the official AEG website. You can also contact AEG customer service for assistance with technical issues or spare parts.

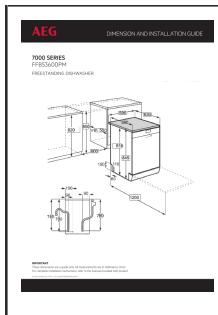
Manufacturer: AEG

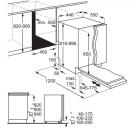
Date First Available: 8 July 2017

For further assistance, please visit the [AEG Store on Amazon](#).

© 2023 AEG. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - FFB 62700 PM

	<p>AEG 7000 Series FFB53600PM Freestanding Dishwasher Dimensions & Installation Guide</p> <p>Find essential dimension and installation information for the AEG 7000 Series FFB53600PM freestanding dishwasher. Includes diagrams and key measurements for proper setup.</p>
	<p>AEG FAVORIT 60760 Dishwasher User Manual & Operating Guide</p> <p>Comprehensive user manual for the AEG FAVORIT 60760 dishwasher. Learn about installation, operation, safety, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.</p>
	<p>AEG FSK94858P Nõudepesumasina Kasutusjuhend</p> <p>Täielik kasutusjuhend AEG FSK94858P nõudepesumasina ohutuks paigaldamiseks, kasutamiseks ja hooldamiseks, sisaldades programme, seadeid ja tõrkeotsingut.</p>
	<p>AEG FSE64610Z Vaatwasser Gebruiksaanwijzing</p> <p>Gedetailleerde gebruiksaanwijzing voor de AEG FSE64610Z vaatwasser, inclusief installatie-instructies, bedieningspaneel, programma's, onderhoud en probleemoplossing. Ontdek hoe u uw apparaat optimaal gebruikt.</p>

<p>ÖKO_FAVORIT 4270 i Dishwasher User Instructions</p> 	<p><u>AEG ÖKO_FAVORIT 4270 i Dishwasher User Instructions Manual</u></p> <p>Detailed user instructions and operating manual for the AEG ÖKO_FAVORIT 4270 i dishwasher, covering installation, usage, maintenance, troubleshooting, and technical specifications.</p>
	<p><u>AEG PSGBDW210DE00007 Integrated Dishwasher Installation Dimensions and Specifications</u></p> <p>Detailed installation dimensions, technical specifications, and clearance requirements for the AEG PSGBDW210DE00007 integrated dishwasher, ensuring proper fitting and setup.</p>