
[Manuals.plus](#) /

› [Kenmore](#) /

› Kenmore 29" Front Load Electric Dryer User Manual

Kenmore 65132

Kenmore 29" Front Load Electric Dryer User Manual

Model: 65132 | Brand: Kenmore

PRODUCT OVERVIEW

The Kenmore 29" Front Load Electric Dryer is designed for efficient and convenient laundry care. With a generous 7.0 cubic foot capacity, it handles large loads, from bulky bedding to delicate items. This dryer features SmartDry Plus technology for optimized drying and a Wrinkle Guard option to keep clothes fresh and wrinkle-free.



Image: Kenmore 29" Front Load Electric Dryer, showcasing its sleek white design and front-loading door.

KEY FEATURES

- **7.0 cu. ft. Capacity:** Accommodates large loads, reducing the number of cycles needed.

- **SmartDry Plus Technology:** Utilizes 2 moisture sensors and a temperature sensor to automatically adjust drying time and temperature, preventing over-drying and fabric damage.
- **Wrinkle Guard Option:** Tumbles clothes periodically for up to 40 minutes after the cycle ends to prevent wrinkles from setting in.
- **Air Only Cycle:** Provides a 30-minute tumble cycle without heat, ideal for delicate items or refreshing clothes.
- **Convenient Drop-Down Door:** The dryer door opens downward, providing a flat surface for sorting or resting laundry baskets.
- **Easy-to-Clean Lint Screen:** Designed for simple and quick lint removal.

SETUP AND INSTALLATION

Proper setup is crucial for optimal performance and safety. Ensure you have the necessary electrical connections and space before installation.

Choose the right electric dryer



Measure space. Ensure fit in intended space and any doorways, hallways and stairways in delivery path. Take into account appliance molding and legs when measuring space.



Check hook-ups. Verify a standard 240-volt, 3-4 prong electrical outlet is within 4ft of the new dryer and on the same floor.

Image: Important considerations for dryer installation, including space measurement and electrical hook-up verification.

Pre-Installation Checklist:

- **Measure Space:** Verify the dryer (29" W x 28" D x 43" H) fits in your intended laundry area, including doorways and hallways.

- **Electrical Requirements:** Confirm a standard 240-volt, 3-4 prong electrical outlet is within 4 feet of the dryer's location and on the same floor.
- **Ventilation:** Ensure proper venting to the outside. Power cords and exhaust vents are not included and must be purchased separately.

OPERATING INSTRUCTIONS

The Kenmore Electric Dryer features intuitive controls for various drying needs.



Image: Control panel of the Kenmore dryer, showing temperature, cycle, and option selectors.

Control Panel Overview:

- **Dry Temp:** Select temperature settings such as Low, Medium, High, or Cotton.
- **Auto Moisture Sensing / Timed Dry:** Choose between automatic drying based on moisture levels (Less, Normal, More) or a specific timed cycle (e.g., 10, 20, 30, 40, 50, 60, 70 minutes). The "Air Only" setting is also available here.
- **Wrinkle Guard:** Turn On or Off to activate the wrinkle prevention feature.
- **Cycle Signal:** Turn On or Off for an audible alert when the drying cycle is complete.
- **Push to Start:** Press to begin the selected drying cycle.

Drying Tips:

- For best results, sort laundry by fabric type and weight.
- Do not overload the dryer; allow clothes to tumble freely for even drying.
- Clean the lint screen before every load to maintain drying efficiency and prevent fire hazards.

MAINTENANCE

Regular maintenance ensures your dryer operates efficiently and extends its lifespan.

Lint Screen Cleaning:

The lint screen is located at the top of the dryer. Pull it out before each load and remove accumulated lint. This improves airflow and drying performance.

Drum Cleaning:

Occasionally, wipe the interior of the dryer drum with a damp cloth to remove any residue from fabric softeners or dryer sheets. For stubborn stains, use a mild household cleaner and then wipe thoroughly with a damp cloth.

Exterior Cleaning:

Clean the exterior surfaces with a soft, damp cloth and mild soap. Avoid abrasive cleaners that can damage the finish.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer does not start.	Power cord unplugged, circuit breaker tripped, door not fully closed.	Ensure power cord is securely plugged in. Check and reset circuit breaker. Close dryer door firmly.
Clothes are not drying completely.	Overloaded dryer, clogged lint screen, improper cycle selection, restricted exhaust vent.	Reduce load size. Clean lint screen. Select appropriate drying cycle. Check and clear exhaust vent for obstructions.
Dryer is noisy.	Loose items in drum, dryer not level, worn drum rollers or bearings.	Remove any foreign objects. Ensure dryer is level. If noise persists, professional service may be required.
Wrinkles in clothes.	Clothes left in dryer too long after cycle, dryer overloaded.	Remove clothes promptly after cycle or use Wrinkle Guard option. Do not overload.

SPECIFICATIONS

42.6"

28.3"

29"



Image: Kenmore Electric Dryer dimensions for installation planning.

Attribute	Value
Brand Name	Kenmore
Model Info	65132
Item Weight	109 pounds
Product Dimensions	28.3 x 29 x 42.6 inches
Capacity	7 Cubic Feet
Installation Type	Freestanding

Attribute	Value
Color	White
Access Location	Front Load
Voltage	240 Volts
Fuel type	Electric
Material Type	Alloy Steel

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official user manual provided with your product or visit the Kenmore support website.

The product includes a **10 Year Limited Parts Warranty**.

You can also find the full user manual in PDF format here [Kenmore Dryer User Manual \(PDF\)](#)



Image: Kenmore has received the Women's Choice Award for America's Most Recommended Washer/Dryer.