

[Manuals.plus](#) /

> [ONN](#) /

> ONN ONA17CA009 18MP Digital Camera User Manual

ONN ONA17CA009

ONN ONA17CA009 18MP Digital Camera User Manual

Model: ONA17CA009

INTRODUCTION

This manual provides essential information for the safe and effective use of your ONN ONA17CA009 18MP Digital Camera. Please read this manual thoroughly before using the camera and retain it for future reference.

SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to the camera:

- Do not expose the camera to water or excessive moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the camera yourself. Refer to qualified service personnel.
- Keep batteries out of reach of children. Dispose of batteries properly.
- Do not point the flash directly at eyes, especially those of infants or small children.

PACKAGE CONTENTS

Verify that all items are present in your camera package:

- ONN ONA17CA009 18MP Digital Camera
- USB Cable
- Photo-Editing Software CD (or download link)
- User Manual (this document)

Note: Batteries and an SD memory card are not included and must be purchased separately.

PRODUCT OVERVIEW

Familiarize yourself with the camera's components and controls.



Figure 1: Front view of the ONN ONA17CA009 Digital Camera, showing the lens, flash, and power button.



Figure 2: Side view of the ONN ONA17CA009 Digital Camera, highlighting its compact form factor and port locations.



Figure 3: The ONN ONA17CA009 Digital Camera displayed in its retail packaging, showing the camera and its 2.4-inch screen.

SETUP

Battery Installation

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert the required Lithium Ion batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

Memory Card Installation

The camera requires an SD memory card (not included) to store photos and videos.

1. Open the memory card slot cover, usually located near the battery compartment or on the side.
2. Insert the SD card with the metal contacts facing the correct direction (refer to the diagram near the slot).
3. Gently push the card until it clicks into place.
4. Close the memory card slot cover.

Initial Power On

After installing batteries and a memory card, press and hold the Power button located on the top of the camera until the 2.4-inch LCD screen illuminates. The camera may prompt you to set the date and time on first use.

OPERATING

Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.4-inch LCD screen.
3. Press the Shutter button halfway down to allow the camera to autofocus.
4. Once focus is achieved (indicated by a green frame or beep), press the Shutter button fully to capture the image.

Recording Videos

1. Switch the camera to video mode (if applicable, via a mode dial or menu setting).
2. Press the Record button (often marked with a red dot) to start recording.
3. Press the Record button again to stop recording.

Playback

To view your captured photos and videos:

1. Press the Playback button (usually marked with a triangle icon).
2. Use the navigation buttons to scroll through your images and videos.
3. Press the OK/Enter button to view a video or zoom into a photo.

Menu Navigation

Access camera settings and options via the Menu button. Use the navigation buttons to move through options and the OK/Enter button to select.

Digital Zoom

The camera features 4X digital zoom. While in shooting mode, use the zoom buttons (often marked 'W' for wide and 'T' for telephoto) to zoom in or out. Note that digital zoom can reduce image quality.

Self-Timer

To use the self-timer function (2, 5, or 10 seconds), access it through the camera's menu settings. This is useful for group photos or to avoid camera shake.

LED Flash

The built-in LED flash provides illumination in low-light conditions. Flash modes can typically be adjusted via a dedicated button or the camera menu (e.g., Auto Flash, Fill-in Flash, Red-eye Reduction, Flash Off).

MAINTENANCE

Proper care ensures the longevity of your camera:

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens and screen, use a specialized lens cleaning cloth and solution. Do not use abrasive cleaners.
- **Storage:** When not in use for extended periods, remove the batteries and store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Rechargeable batteries should be charged regularly. If using disposable batteries, replace them when the low battery indicator appears.

TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Check battery polarity or replace with fresh batteries.
Cannot take photos/videos.	No memory card, full memory card, or card error.	Insert an SD card, delete some files, or format the card (this will erase all data).
Images are blurry.	Camera shake, subject too close, or focus issue.	Hold camera steady, ensure adequate lighting, or check focus settings.
Flash not working.	Flash is off or batteries are low.	Check flash mode settings or replace batteries.

SPECIFICATIONS

Technical specifications for the ONN ONA17CA009 Digital Camera:

Feature	Detail
Model Name	ONA17CA009
Effective Still Resolution	18 MP
Screen Size	2.4 Inches
Digital Zoom	4x
Image Stabilization	Digital
Supported File Format	RAW, JPEG (Images), MP4 (Video)
Video Resolution	1080p (30 FPS)
Flash Memory Type	SD Card (not included)
Battery Type	Lithium Ion (not included)
Special Features	Live View, Self Timer, Built-in Flash, Photo-Editing Software

Feature	Detail
Color	Black

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official ONN website. Keep your purchase receipt as proof of purchase for warranty claims.

For technical assistance or service inquiries, please contact ONN customer service through their official channels.