

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Brother](#) /

> [Brother P-Touch PT-H107B Label Maker User Manual](#)

Brother PT-H107B

Brother P-Touch PT-H107B Label Maker User Manual

Model: PT-H107B

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Brother P-Touch PT-H107B Label Maker. Please read this manual thoroughly before operating the device to ensure proper functionality and to prevent damage.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Do not expose the label maker to water or moisture.
- Use only Brother TZe tapes with this device.
- Keep out of reach of children.
- Do not disassemble or attempt to repair the device yourself.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your PT-H107B Label Maker.



Figure 3.1: Front view of the Brother PT-H107B Label Maker, showing the display, keypad, and function buttons.



Figure 3.2: Angled view of the Brother PT-H107B Label Maker, highlighting its compact design and ergonomic grip.

1. **LCD Display:** Shows text, settings, and icons.
2. **QWERTY Keyboard:** For text input.
3. **Function Buttons:** Power, Menu, Print, Cursor, Enter, Clear.
4. **Tape Cassette Compartment:** Located at the back, for installing tape cassettes.
5. **Cutter Lever:** For manually cutting the label.

4. SETUP

4.1. Installing Batteries

The PT-H107B requires 6 AAA alkaline batteries (not included). Ensure correct polarity when inserting.

1. Open the battery compartment cover on the back of the unit.
2. Insert 6 AAA batteries according to the polarity indicators (+/-).
3. Close the battery compartment cover securely.

Note: The device can also be powered by an optional AC adapter (AD-24ES), sold separately.

4.2. Installing the Tape Cassette

Use only Brother TZe tape cassettes.

1. Ensure the label maker is turned off.
2. Open the tape cassette cover located on the top-right side of the unit.
3. Insert the tape cassette firmly into the compartment until it clicks into place.
4. Close the tape cassette cover.

5. OPERATING INSTRUCTIONS

5.1. Basic Label Creation

1. Press the **Power** button to turn on the label maker.
2. Type your desired text using the QWERTY keyboard. The text will appear on the LCD display.
3. To change font size, style, or add frames/symbols, press the **Menu** button and navigate through the options using the arrow keys. Press **Enter** to select.
4. To preview your label, press the **Print** button once.
5. To print the label, press the **Print** button again.
6. After printing, use the cutter lever on the top-right side to cut the label.

5.2. Margin Settings

To optimize tape usage, adjust the margins:

- Press the **Menu** button.
- Use the arrow keys to navigate to "Margin".
- Select "Narrow" for minimal margins or "Chain Print" to print multiple labels with minimal space between them, saving tape.
- Press **Enter** to confirm your selection.

5.3. Special Functions

- **Auto Format:** Automatically adjusts text size and layout for specific label types (e.g., cable wrap, flag).
- **Memory:** Save frequently used labels for quick recall.
- **Numbering:** Print labels with sequential numbers.

6. MAINTENANCE

6.1. Cleaning the Print Head

If print quality deteriorates, clean the print head.

1. Turn off the label maker and remove the tape cassette.
2. Gently wipe the print head with a dry cotton swab. Do not touch the print head with your fingers.
3. Reinsert the tape cassette and close the cover.

6.2. Cleaning the Cutter Blade

Periodically clean the cutter blade to ensure smooth operation.

- With the tape cassette removed, use a dry cotton swab to carefully remove any adhesive residue or debris from the cutter blade area.
- Be cautious as the blade is sharp.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity. Check optional AC adapter connection.

Problem	Possible Cause	Solution
Poor print quality or blank labels.	Print head is dirty or tape cassette is empty/incorrectly installed.	Clean the print head. Replace the tape cassette. Ensure tape is properly inserted.
Labels are not cutting properly.	Cutter blade is dirty or dull.	Clean the cutter blade. If the problem persists, contact Brother support.
Excessive tape waste.	Margin settings are too wide.	Adjust margin settings to "Narrow" or "Chain Print" via the Menu.

8. SPECIFICATIONS

Feature	Detail
Model	PT-H107B
Dimensions (W x D x H)	11.42 x 7.09 x 4.33 cm
Weight	479 g
Power Source	6 x AAA alkaline batteries (not included) or optional AC adapter (AD-24ES)
Compatible Tape Widths	3.5mm, 6mm, 9mm, 12mm TZe tapes
Print Resolution	Up to 180 dpi
Keyboard Layout	QWERTY
Display	LCD (12 characters x 1 line)

9. WARRANTY AND SUPPORT

The Brother P-Touch PT-H107B Label Maker comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Brother support website.

For technical support, troubleshooting assistance, or to order genuine Brother supplies, please visit the [Brother Support Website](#) or contact your local Brother customer service center.

