

roba Scarlett Doll High Chair Instruction Manual

Model: 490034984

1. SAFETY INFORMATION

WARNING: Not suitable for children under 12 months due to small parts. This product is recommended for role-play from 3 years of age.

This doll high chair complies with European safety standard EN 71-1: 2014 for toy safety. All materials are certified free from harmful substances and are regularly checked throughout the manufacturing process.



CE Mark: Conforms to European standards.



EN 71-1: 2014: Toy safety standard compliance.



Certified Textiles: Materials meet EU standards.

2. PRODUCT OVERVIEW

The roba Scarlett Doll High Chair is a charming and functional piece of toy furniture designed to enhance imaginative play. It features a classic white finish complemented by untreated natural wood elements, providing a timeless aesthetic. This high chair includes a feeding tray and a soft pink seat cushion, allowing children to mimic real-life mealtime scenarios with their dolls. It is part of the roba Scarlett series, which offers a range of matching doll furniture and accessories.



The roba Scarlett Doll High Chair, featuring a white frame, natural wood accents, a pink cushion, and a feeding tray.



Another view of the doll high chair, highlighting its sturdy construction and design.

3. PACKAGE CONTENTS

Please check that all parts are present before beginning assembly:

- Doll High Chair components (disassembled wooden parts)
- Pink seat cushion
- Assembly instructions
- Required screws and fittings

4. SETUP AND ASSEMBLY

The roba Scarlett Doll High Chair is delivered disassembled for safe transport. Assembly is designed to be straightforward with the included instructions and hardware.

1. Unpack all components and verify against the package contents list.
2. Follow the step-by-step assembly instructions provided in the box. Ensure all screws are securely tightened. *(Note: Some users have found that a firm hand may be needed to fully tighten the screws during assembly.)*
3. Once the wooden frame is assembled, place the pink seat cushion onto the seat.

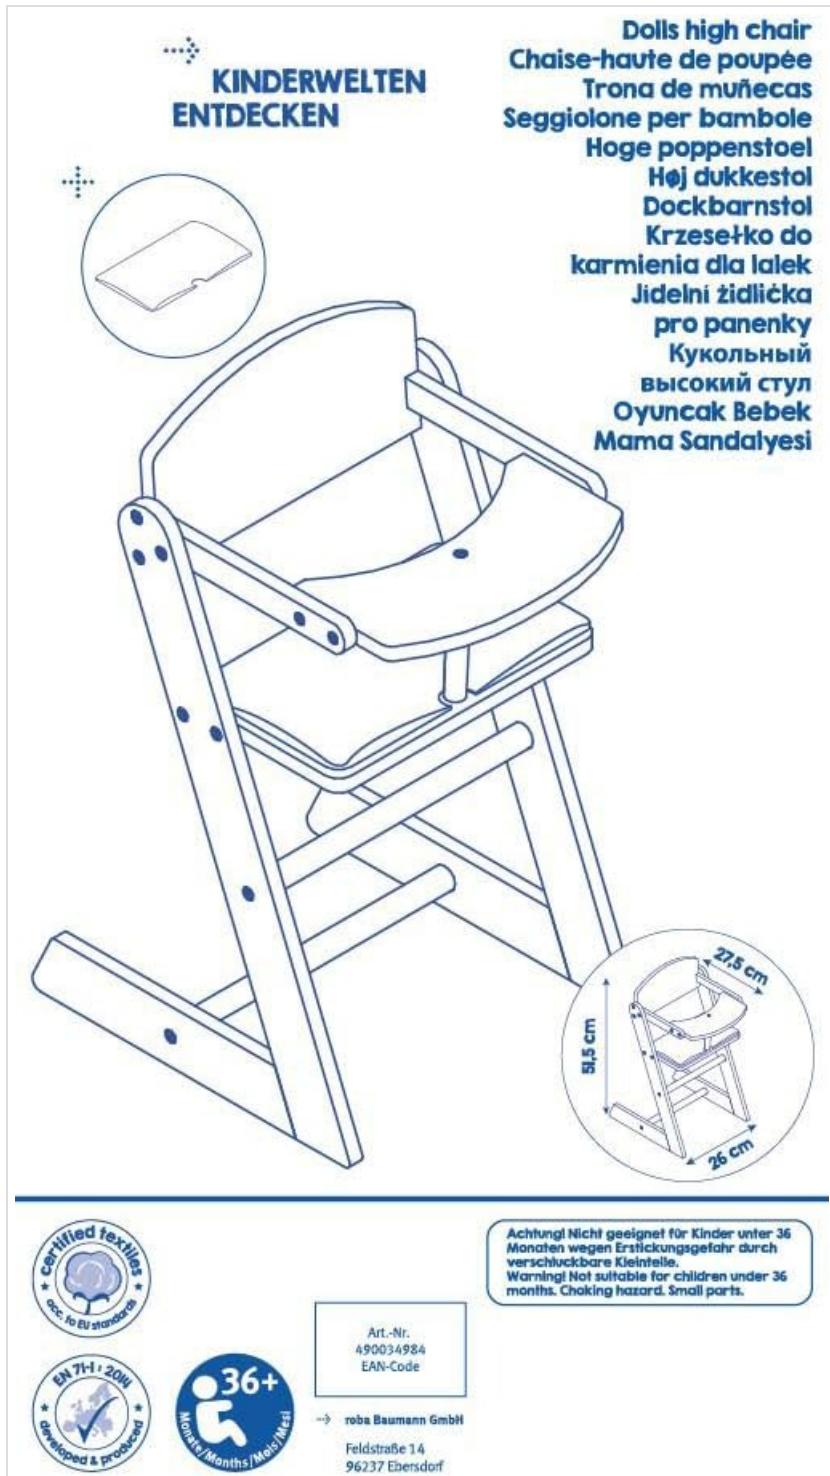


Diagram illustrating the assembly process and dimensions of the doll high chair.

5. OPERATING INSTRUCTIONS (USAGE)

This doll high chair is intended for imaginative play with dolls and plush toys. It is not designed for use by infants or small children.

- Place your doll or plush toy gently into the high chair.
- The integrated feeding tray provides a surface for play food or accessories.
- The pink cushion offers a soft and comfortable seating area for the doll, enhancing the realism of playtime.



Close-up view of the high chair's feeding tray, suitable for doll accessories.

6. MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your roba Scarlett Doll High Chair, follow these care instructions:

- **Cleaning Surfaces:** The wooden and painted surfaces can be easily wiped clean with a damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **Cushion Care:** The textile seat cushion is machine washable. Please refer to the care label on the cushion for specific washing instructions (typically 30°C gentle cycle).
- **Inspection:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary to maintain stability.

7. TROUBLESHOOTING

No specific troubleshooting information is available for this product. If you encounter any issues during assembly or use, please ensure all parts are correctly installed and screws are tightened. For further assistance, contact roba customer support.

8. SPECIFICATIONS

Model Number	490034984
Dimensions (L x W x H)	28 x 28 x 51.5 cm (11 x 11 x 20.3 inches)
Weight	1.32 kg (2.91 lbs)
Material	Solid wood, plywood, fabric (65% polyester, 35% cotton)
Color	White / Natural wood with pink cushion
Age Recommendation	From 3 years (Not suitable for children under 12 months)
Safety Standard	EN 71-1: 2014
Country of Origin	China

9. WARRANTY AND SUPPORT

Specific warranty details are not provided in the product information. For any questions regarding warranty, product support, or replacement parts, please contact roba customer service directly through their official website or the retailer where the product was purchased.