

Impex PF 01

Impex 18 Inch 3-in-1 Stand Fan User Manual

Model: PF 01

1. INTRODUCTION

Thank you for choosing the Impex 18 Inch 3-in-1 Stand Fan, Model PF 01. This versatile fan is designed to provide efficient cooling as a stand fan, table fan, or wall-mounted fan. Featuring an 18-inch diameter, high-speed 1350 RPM motor, durable steel blades, and 3-speed control, it offers powerful airflow for various environments. This manual provides essential information for the safe assembly, operation, and maintenance of your fan.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the fan and retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the power supply voltage matches the rating label on the fan (220-240V~, 50/60Hz).
- Do not operate the fan with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Keep fingers, pencils, or any other objects out of the fan grille when it is operating.
- Unplug the fan from the power outlet before moving, cleaning, or performing any maintenance.
- Do not use the fan in wet or damp locations, such as bathrooms or laundry areas, or near water.
- Place the fan on a stable, level surface to prevent it from tipping over.
- Do not cover the fan or restrict airflow during operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PACKAGE CONTENTS

Carefully unpack your fan and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Fan Motor Unit with Rear Grille
- Fan Blades
- Front Grille
- Grille Retaining Ring/Clips
- Stand Pole (for pedestal configuration)
- Round Base (for pedestal configuration)
- Table/Wall Mount Bracket
- Mounting Hardware (screws, wall plugs)
- User Manual

4. ASSEMBLY INSTRUCTIONS

The Impex PF 01 fan can be assembled in three configurations: Stand Fan, Table Fan, or Wall-Mounted Fan. Follow the instructions below for your desired setup.



Figure 1: The Impex PF 01 fan demonstrating its three convertible configurations: stand, table, and wall-mounted.

4.1. Fan Head Assembly (Common to all configurations)

1. Unscrew the spinner cap and the plastic nut from the motor shaft.
2. Place the rear grille onto the motor unit, ensuring it aligns with the locating pins. Secure it with the plastic nut, tightening clockwise.
3. Slide the fan blades onto the motor shaft, aligning the groove on the blades with the pin on the shaft. Secure with the

spinner cap, tightening counter-clockwise.

4. Place the front grille over the rear grille, aligning the clips or securing ring. Fasten the grille securely to prevent accidental contact with the blades.

4.2. Stand Fan Assembly



Figure 2: The Impex PF 01 fan fully assembled in its stand configuration.

1. Attach the stand pole to the round base, securing it with the provided screw and washer from underneath the base.
2. Mount the assembled fan head (from Section 4.1) onto the top of the stand pole. Tighten the adjustment knob on the stand pole to secure the fan head at the desired height.
3. Ensure all connections are firm and stable before plugging in the fan.

4.3. Table Fan Assembly

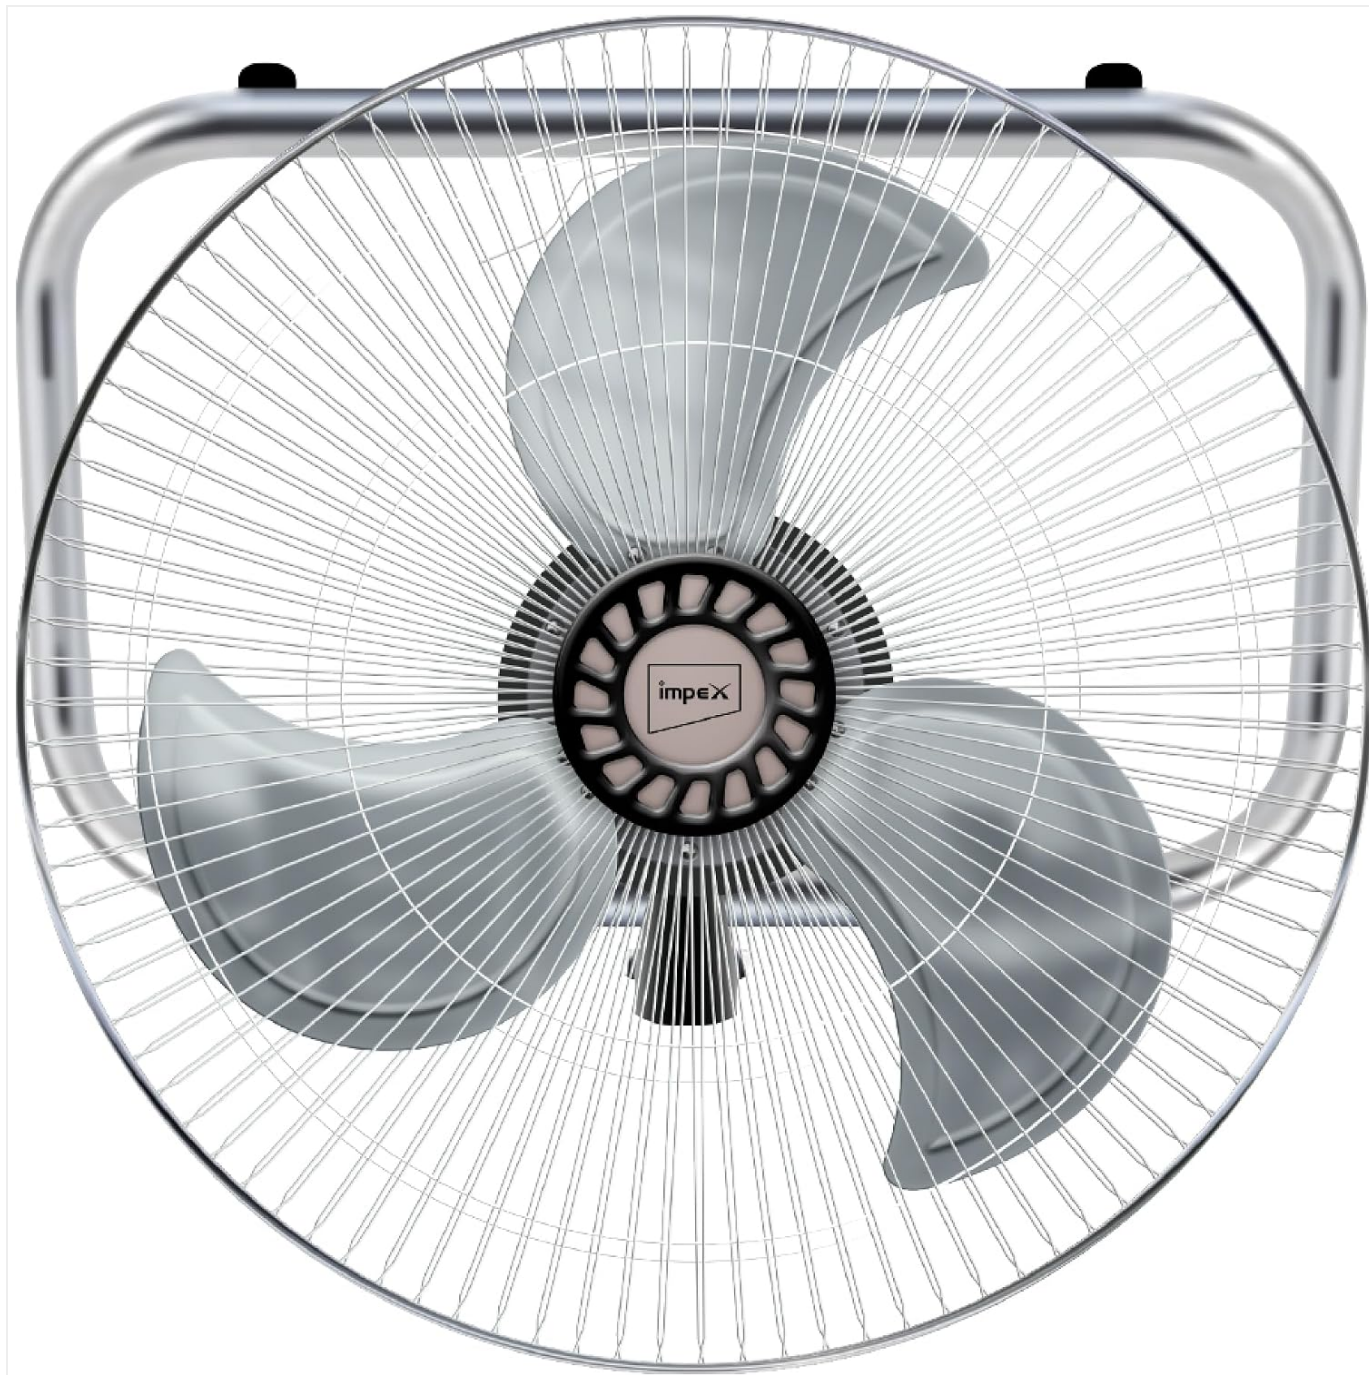


Figure 3: The Impex PF 01 fan assembled in its table fan configuration.

1. Attach the table/wall mount bracket directly to the bottom of the fan motor unit. Secure with the provided screws.
2. Place the fan on a stable, flat surface.

4.4. Wall-Mounted Fan Assembly

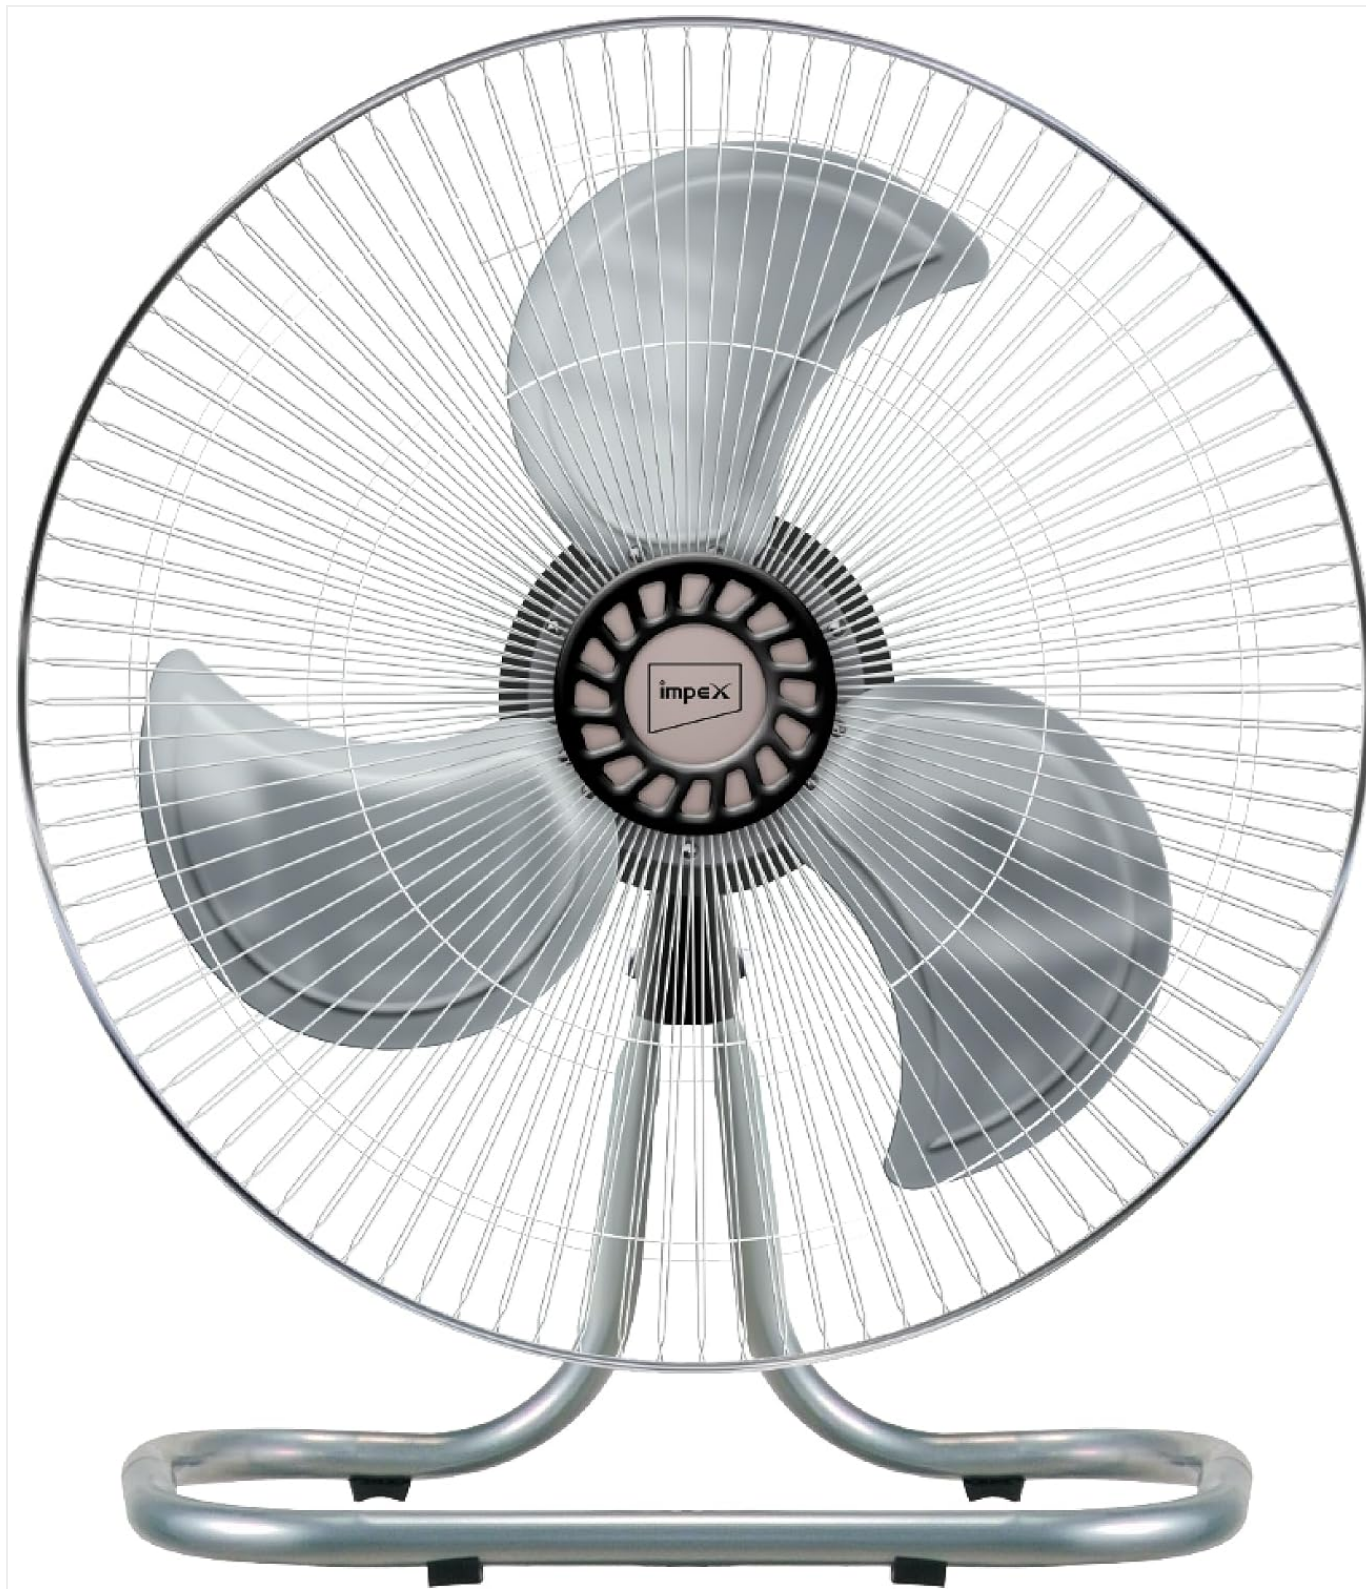


Figure 4: The Impex PF 01 fan assembled in its wall-mounted configuration.

1. Attach the table/wall mount bracket to the bottom of the fan motor unit, securing it with the provided screws.
2. Choose a suitable location on a sturdy wall. Mark the positions for drilling holes using the bracket as a template.
3. Drill holes and insert wall plugs (if necessary for your wall type).
4. Secure the fan to the wall using the provided screws, ensuring it is firmly mounted.

5. OPERATING INSTRUCTIONS

5.1. Power Connection

Plug the fan's power cord into a standard 220-240V~, 50/60Hz electrical outlet.

5.2. Speed Control

The fan features a 3-speed control knob located on the motor housing. Turn the knob to select your desired airflow:

- **0:** Off
- **1:** Low Speed
- **2:** Medium Speed
- **3:** High Speed

5.3. Oscillation Function

To activate the oscillation feature, push down the oscillation knob located on top of the motor housing. The fan head will then sweep from side to side, distributing air over a wider area. To stop oscillation, pull the knob up.



Figure 5: Illustration of the fan's oscillation mechanism, which distributes air across a wider area.

5.4. Tilt Adjustment

The fan head can be tilted up or down to direct airflow precisely where needed. Loosen the adjustment knob on the side of the fan head, adjust the angle, and then tighten the knob firmly to secure the position.



Figure 6: Diagram illustrating the fan's tilting mechanism, allowing for vertical adjustment of airflow.

6. MAINTENANCE

Regular cleaning and maintenance will help ensure the longevity and efficient operation of your fan.

6.1. Cleaning

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades, carefully remove the front grille. Wipe the blades with a soft, damp cloth. Ensure the blades are completely dry before reattaching the grille.

- Do not immerse the fan in water or allow water to drip into the motor housing.

6.2. Storage

When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

7. TROUBLESHOOTING

If you encounter any issues with your fan, please refer to the following troubleshooting guide:

- **Fan does not turn on:**
 - Ensure the fan is securely plugged into a working power outlet.
 - Check if the speed control knob is set to an 'On' position (1, 2, or 3).
 - Verify that the power outlet is functioning by plugging in another appliance.
- **Weak airflow:**
 - Increase the fan speed using the control knob.
 - Ensure the fan grilles and blades are clean and free from dust buildup.
 - Check for any obstructions blocking the airflow.
- **Unusual noise:**
 - Ensure all parts are securely assembled and tightened.
 - Check if the fan blades are clean and free from debris.
 - Ensure the fan is placed on a stable, level surface.

If the problem persists after following these steps, please contact Impex customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Impex
Model Number	PF 01
Color	Black and Grey
Power / Wattage	70 watts
Material	Alloy Steel
Number of Speeds	3
Special Features	Adjustable Tilt, Oscillating, Pedestal Base
Item Weight	4.35 Kilograms
Product Dimensions	40D x 43W x 130H centimeters
Input Voltage	220-240V~, 50/60Hz

Feature	Specification
Motor Speed	1350 RPM

9. WARRANTY AND SUPPORT

The Impex 18 Inch 3-in-1 Stand Fan (Model PF 01) comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects under normal use conditions.

For warranty claims, technical support, or any inquiries regarding your product, please contact Impex customer service or visit the official Impex store:

[Visit the Impex Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question