

PDP 500-069-NA-LZ00

PDP Faceoff Deluxe Wired Pro Controller for Nintendo Switch Instruction Manual

Model: 500-069-NA-LZ00

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your PDP Faceoff Deluxe Wired Pro Controller for Nintendo Switch. Please read this manual thoroughly before using your controller to ensure optimal performance and longevity.



Image: The PDP Faceoff Deluxe Wired Pro Controller featuring a Zelda-themed faceplate. This image displays the front view of the controller, highlighting its buttons, analog sticks, and the attached USB cable.

SETUP

1. Connecting the Controller

1. Ensure your Nintendo Switch console is powered on and updated to the latest system software.
2. Locate an available USB port on your Nintendo Switch dock.
3. Connect the USB-A end of the detachable 10-foot cable to the USB port on the Nintendo Switch dock.
4. Connect the USB-C end of the cable to the port on the top of your PDP Faceoff Deluxe Wired Pro Controller.
5. The controller should be automatically recognized by your Nintendo Switch. You can verify this by navigating to the 'Controllers' menu on the Switch home screen.

2. Attaching/Changing Faceplates

The Faceoff Deluxe Wired Pro Controller features an interchangeable faceplate design, allowing for customization. Your controller includes two faceplates: one with a Zelda design and another with a Sheikah Eye design.



Includes controller and two faceplates

Image: The PDP Faceoff Deluxe Wired Pro Controller shown alongside two distinct faceplates, one featuring a Zelda theme and the other a Sheikah Eye design, illustrating the interchangeable customization option.

1. To remove a faceplate, gently lift it from the edges of the controller. It is designed to snap on and off.
2. Align the desired faceplate with the controller's body, ensuring the button and stick cutouts match.
3. Press down firmly until the faceplate snaps securely into place.



Image: A blue arrow indicates the direction to remove or attach an interchangeable faceplate from the main body of the PDP Faceoff Deluxe Wired Pro Controller. This demonstrates the modular design.

OPERATING INSTRUCTIONS

1. Basic Controls

The PDP Faceoff Deluxe Wired Pro Controller features standard Nintendo Switch button layouts, including A, B, X, Y buttons, a D-pad, Left and Right analog sticks, L/R and ZL/ZR shoulder buttons, and Home, Capture, Plus (+), and Minus (-) buttons.

2. Programmable Paddle Buttons

The controller includes two programmable paddle-style buttons on the back for customizable play. These can be mapped to replicate any other button on the controller.



Image: A rear view of the PDP Faceoff Deluxe Wired Pro Controller, with blue lines pointing to the two programmable paddle-style buttons located on the underside grips. The image also highlights the textured design for enhanced grip.

Programming Steps:

1. Press and hold the Program button (small button on the back, usually near the paddles) until the LED indicator on the controller begins to flash.
2. Press the paddle button you wish to program (e.g., P1 or P2).
3. Press the button you want to assign to that paddle (e.g., A, B, X, Y, L, R, ZL, ZR, etc.).
4. Release the Program button. The LED indicator will stop flashing, confirming the button has been programmed.
5. To clear a programmed paddle, repeat the steps and press the paddle button without pressing any other button before releasing the Program button.

3. Analog Sticks

The controller features responsive low-friction metal analog sticks, designed for smooth turns and precise movements during gameplay. Low friction rings around each analog stick further enhance performance.



Image: A close-up view of the right analog stick on the PDP Faceoff Deluxe Wired Pro Controller, highlighting the gold-colored low-friction ring around its base, designed for smooth movement.

4. Important Considerations

Please note that this wired controller does not include certain features found in some other Nintendo Switch controllers, such as HD Rumble, motion controls (gyroscope), or NFC functionality for Amiibo support.

MAINTENANCE

1. Cleaning

- Disconnect the controller from the Nintendo Switch before cleaning.
- Use a soft, dry cloth to wipe down the controller's surface.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive materials, as these can damage the controller's finish.

2. Cable Care

- Avoid bending or twisting the cable sharply, especially near the connectors.
- When storing, coil the cable loosely. Do not wrap it tightly around the controller.
- Always grasp the plug, not the cable, when connecting or disconnecting.

TROUBLESHOOTING

- **Controller Not Responding:** Ensure the USB cable is securely connected to both the controller and the Nintendo Switch dock. Try a different USB port on the dock.
- **Buttons or Sticks Not Working Correctly:** Disconnect and reconnect the controller. If the issue persists, ensure your Nintendo Switch system software is up to date.
- **Faceplate Difficult to Remove/Attach:** Apply gentle, even pressure. Avoid forcing the faceplate, as this could cause damage. Ensure it is correctly aligned before pressing down.
- **Accidental Paddle Activations:** If the programmable paddles are being pressed unintentionally, consider reprogramming them to a less frequently used button or clearing their assignment if not needed.

SPECIFICATIONS

| Feature | Detail |
|--------------|------------------------------|
| Model Number | 500-069-NA-LZ00 |
| Connectivity | Wired (Detachable USB Cable) |
| Cable Length | 10 feet (approx. 3 meters) |
| Dimensions | 3.1 x 17.5 x 12.7 cm |

| | |
|------------------|---|
| Weight | 390 g |
| Special Features | Interchangeable Faceplates, Programmable Paddle Buttons, Low-Friction Analog Sticks |
| Compatibility | Nintendo Switch |

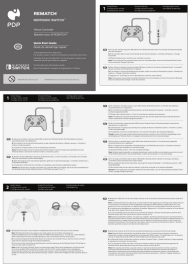

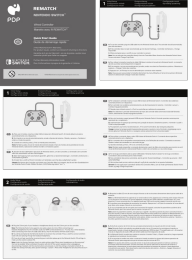
WARRANTY AND SUPPORT




For warranty information and customer support, please refer to the official PDP website or contact their customer service directly. Details regarding product registration, warranty claims, and technical assistance can typically be found on the manufacturer's support pages.

You can visit the PDP support page at www.pdp.com/support for the most up-to-date information.

© 2023 PDP. All rights reserved. Nintendo Switch is a trademark of Nintendo.

Related Documents - 500-069-NA-LZ00

| | |
|---|---|
|  | <p>REMATCH Wired Controller for Nintendo Switch Quick Start Guide</p> <p>A quick start guide for the REMATCH Wired Controller for Nintendo Switch, detailing setup, audio configuration, volume controls, back button programming, and interchangeable parts.</p> |
|  | <p>Afterglow Wireless Deluxe Controller for Nintendo Switch - Quick Start Guide & Features PDP</p> <p>Get started with your PDP Afterglow Wireless Deluxe Controller for Nintendo Switch. Learn how to pair, charge, customize lights, program back buttons, and understand the limited warranty.</p> |
|  | <p>PDP REMATCH Wired Controller for Nintendo Switch: Quick Start Guide</p> <p>Concise guide to setting up and using the PDP REMATCH Wired Controller for Nintendo Switch, covering initial setup, audio, volume, and back button programming.</p> |

| | |
|---|---|
|  | <p>REALMz™ Wired Controller Quick Start Guide for Nintendo Switch</p> <p>Quick start guide for the REALMz™ Wired Controller for Nintendo Switch. Learn setup, audio, volume, and LED lighting features.</p> |
|  | <p>PDP Rock Candy Wired Controller for Nintendo Switch Quick Start Guide</p> <p>This guide provides instructions for setting up and using the PDP Rock Candy Wired Controller for Nintendo Switch. It includes warranty information and contact details for customer support.</p> |
|  | <p>PDP AIRLITE Wired Headset for Nintendo Switch: Quick Start Guide</p> <p>Get started quickly with the PDP AIRLITE Wired Headset for Nintendo Switch. This guide covers initial setup, connecting the headset, mic mute, audio controls, and warranty information.</p> |