

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Goodmans](#) /

› [Goodmans 40W Bluetooth Soundbar GDSB06BT40OP User Manual](#)

Goodmans GDSB06BT40OP

Goodmans 40W Bluetooth Soundbar GDSB06BT40OP User Manual

Model: GDSB06BT40OP

1. INTRODUCTION

Thank you for purchasing the Goodmans 40W Bluetooth Soundbar, model GDSB06BT40OP. This manual provides essential information for the safe and efficient operation of your new soundbar. Please read these instructions carefully before use and retain them for future reference.

The Goodmans GDSB06BT40OP is designed to enhance your audio experience, offering 40 watts of power and seamless Bluetooth connectivity for streaming music from compatible devices.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the device or injury to yourself:

- Do not expose the soundbar to rain, moisture, or extreme temperatures.
- Ensure proper ventilation around the unit. Do not block any ventilation openings.
- Only use attachments/accessories specified by the manufacturer.
- Disconnect the power cord during lightning storms or when unused for long periods.
- Do not attempt to service the unit yourself. Refer all servicing to qualified service personnel.
- Keep the soundbar away from sources of heat, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

3. PACKAGE CONTENTS

Please check that all items are present:

- Goodmans 40W Bluetooth Soundbar (GDSB06BT40OP)
- Power Adapter
- Remote Control (if included, typically with soundbars)
- User Manual (this document)
- Wall Mounting Kit (if included, as it's wall-mountable)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Goodmans Soundbar.



Figure 1: Front view of the Goodmans 40W Bluetooth Soundbar. The soundbar features a sleek black design with a speaker grille covering the front. On the top surface, there is a control panel with buttons for functions such as power, source selection, volume adjustment, and Bluetooth pairing. The Goodmans logo is visible on the right side of the top panel.

Front Panel Controls:

- **Power Button:** Turns the soundbar on or off.
- **Source Button:** Cycles through input sources (e.g., Bluetooth, Optical, AUX).
- **Volume Up/Down Buttons:** Adjusts the sound volume.
- **Pair Button (Bluetooth):** Initiates Bluetooth pairing mode.

Rear Panel Connections:

(Specific connections are not detailed in product data, but typically include:)

- **DC IN:** For connecting the power adapter.
- **Optical IN:** For digital audio connection from a TV or other device.
- **AUX IN:** For analog audio connection using a 3.5mm cable.

5. SETUP

5.1 Placement

The Goodmans Soundbar can be placed on a flat surface or mounted on a wall.

- **Tabletop Placement:** Place the soundbar on a stable, flat surface in front of your TV, ensuring it does not obstruct the TV's remote sensor.
- **Wall Mounting:** If wall mounting, use the provided wall mounting kit (if applicable) and follow the instructions carefully. Ensure the wall can support the weight of the soundbar.

5.2 Connecting to Power

1. Connect the power adapter to the DC IN port on the rear of the soundbar.
2. Plug the other end of the power adapter into a suitable wall outlet.

5.3 Audio Connections

Choose one of the following methods to connect your audio source:

- **Bluetooth Connection:** For wireless audio streaming from smartphones, tablets, or other Bluetooth-enabled devices.
- **Optical Connection:** For high-quality digital audio from your TV or other optical-enabled devices. (Cable not always included).
- **AUX Connection:** For analog audio from devices with a 3.5mm audio output. (Cable not always included).

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **Power** button on the soundbar or remote control to turn the unit on or off.

6.2 Source Selection

Press the **Source** button on the soundbar or remote control repeatedly to cycle through the available input sources (e.g., Bluetooth, Optical, AUX).

6.3 Bluetooth Pairing

1. Turn on the soundbar and select the Bluetooth source. The Bluetooth indicator will flash, indicating it's in pairing mode.
2. Enable Bluetooth on your smartphone, tablet, or other device.
3. Search for "Goodmans GDSB06BT40OP" (or similar name) in your device's Bluetooth list and select it to connect.
4. Once connected, the Bluetooth indicator on the soundbar will stop flashing and remain solid. You can now stream audio.

6.4 Volume Control

Use the **Volume Up (+)** and **Volume Down (-)** buttons on the soundbar or remote control to adjust the audio level.

7. MAINTENANCE

7.1 Cleaning

Wipe the soundbar with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the finish.

7.2 Storage

If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place, away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not active.	Ensure power cord is securely connected; Try a different power outlet.
No sound	Incorrect input source selected; Volume too low; Audio cable not connected properly.	Select the correct input source; Increase volume; Check audio cable connections.
Bluetooth not connecting	Soundbar not in pairing mode; Device too far; Bluetooth disabled on source device.	Ensure soundbar is in Bluetooth pairing mode; Move device closer; Enable Bluetooth on your device.
Remote control not working	Batteries depleted; Obstruction between remote and soundbar.	Replace remote control batteries; Remove any obstructions.

9. SPECIFICATIONS

Feature	Detail
Model Number	GDSB06BT400P
Brand	Goodmans
Speaker Type	Soundbar
Max Speaker Output Power	40 Watts
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0
Recommended Uses	For smartphone or tablet
Compatible Devices	Smartphone, Tablet
Control Method	Voice (<i>Note: Voice control functionality details not provided in product data. Refer to device for specific implementation.</i>)
Mounting Type	Wall Mount
Color	Black
Material	Plastic
Item Weight	3.97 pounds
Impedance	4 Ohms
Power Source	Corded Electric
Manufacturer Warranty	1 year

10. WARRANTY AND SUPPORT

Your Goodmans 40W Bluetooth Soundbar GDSB06BT40OP comes with a **1-year manufacturer warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or service inquiries, please contact your retailer or the Goodmans customer service department. Please retain your proof of purchase for warranty validation.

Note: Availability of spare parts information is not available. Software updates information is not available.