

[manuals.plus](#) /

› [TEESA](#) /

› [Teesa Eris 750 Bagged Vacuum Cleaner Instruction Manual](#)

TEESA TSA5011

Teesa Eris 750 Bagged Vacuum Cleaner Instruction Manual

Model: TSA5011

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the appliance and keep it for future reference. Improper use may result in injury or damage to the appliance.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not use the vacuum cleaner to pick up water or other liquids, hot ashes, sharp objects, or flammable materials.
- Do not operate the appliance with a damaged power cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Always unplug the vacuum cleaner from the power outlet before cleaning or performing maintenance.
- This appliance is for household use only.
- Supervise children to ensure they do not play with the appliance.

2. PRODUCT OVERVIEW

The Teesa Eris 750 is a bagged vacuum cleaner designed for efficient cleaning of various surfaces. It features a powerful motor, HEPA filtration, and convenient functions for ease of use.



Image 2.1: Teesa Eris 750 Bagged Vacuum Cleaner with hose and floor nozzle.

Key features include:

- 750 Watt motor for effective cleaning.
- H13 HEPA exhaust air filter for cleaner air output.
- 2-liter dust bag capacity.
- Automatic cord rewinding.

- Power control knob.
- Dust bag full indicator.
- Telescopic tube with lock.
- 360° swivel hose.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all the following items are present:

- Teesa Eris 750 Vacuum Cleaner unit
- Flexible Hose
- Telescopic Tube
- Two-stage Floor Nozzle
- Crevice Nozzle
- Small Nozzle (Brush)
- Instruction Manual



Image 3.1: Included accessories: crevice nozzle, small nozzle, and two-stage floor nozzle.

4. SETUP

Follow these steps to assemble your Teesa Eris 750 vacuum cleaner:

1. **Attach the Flexible Hose:** Insert the hose end into the suction inlet on the main vacuum unit until it clicks securely into place.
2. **Connect the Telescopic Tube:** Attach the telescopic tube to the handle end of the flexible hose.
3. **Attach the Floor Nozzle:** Connect the two-stage floor nozzle to the end of the telescopic tube. Ensure it is firmly attached.
4. **Select Accessories:** For specific cleaning tasks, you can attach the crevice nozzle or small nozzle

directly to the hose handle or the telescopic tube.



Image 4.1: The vacuum cleaner fully assembled with hose, telescopic tube, and floor nozzle.

5. OPERATING INSTRUCTIONS

Operating your vacuum cleaner is straightforward:

1. **Power Connection:** Pull out the power cord from the back of the unit to the desired length. The maximum cable length is 5 meters. Plug the power cord into a suitable electrical outlet.
2. **Power On/Off:** Press the power button located on the main unit to turn the vacuum cleaner on or off.
3. **Adjust Suction Power:** Use the rotary knob on the top of the unit to adjust the suction power according to the surface being cleaned. Turn clockwise for higher suction, counter-clockwise for lower suction.
4. **Cleaning:** Guide the floor nozzle or selected accessory over the surface to be cleaned.
5. **Cord Rewind:** After use, unplug the power cord from the outlet. Press the cord rewind button (usually located near the power cord entry) to automatically retract the cord into the unit.



Image 5.1: Top view of the vacuum cleaner showing the power control knob and dust bag full indicator.



Image 5.2: The Teesa Eris 750 vacuum cleaner being used to clean a hard floor.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Changing the Dust Bag

- The dust bag full indicator will illuminate when the dust bag needs to be replaced.
- Always unplug the vacuum cleaner before changing the dust bag.
- Open the dust bag compartment cover.
- Carefully remove the full dust bag and dispose of it.
- Insert a new paper or textile dust bag, ensuring it is correctly seated in the holder.
- Close the dust bag compartment cover securely.

6.2. Cleaning the Filters

The Teesa Eris 750 is equipped with an H13 HEPA exhaust air filter. This filter should be checked and cleaned regularly, or replaced if heavily soiled.

- Unplug the vacuum cleaner.
- Locate the filter compartment (refer to your specific model's diagram if unsure).
- Remove the HEPA filter.
- Gently tap the filter to remove loose dust. Do not wash the HEPA filter unless explicitly stated in the product documentation, as this can damage it.
- Replace the filter if it is visibly damaged or excessively dirty.
- Ensure the filter is dry before reinserting it.

6.3. General Cleaning

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Check the nozzles and hose for blockages and remove any debris.

7. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	No power supply.	Check if the power cord is properly plugged into the outlet. Check the circuit breaker.
Low suction power.	Full dust bag, clogged filter, or blocked hose/nozzle.	Replace the dust bag. Clean or replace the filters. Remove any blockages from the hose or nozzles.
Unusual noise during operation.	Blockage in the hose or nozzle, or a foreign object in the fan.	Turn off and unplug the vacuum. Check for and remove any blockages. If the noise persists, contact customer support.
Dust escapes from the vacuum cleaner.	Dust bag not installed correctly, or filter is missing/damaged.	Ensure the dust bag is correctly seated. Check and replace filters if necessary.


If the problem persists after attempting these solutions, please contact Teesa customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Teesa Eris 750 vacuum cleaner:

Feature	Specification
Model	TSA5011
Nominal Power	750 W
Power Supply	220-240 V; 50/60 Hz
Dust Bag Capacity	2 Liters
Dust Bag Type	Paper or Textile
Exhaust Air Filter	H13 HEPA
Energy Efficiency Class	A
Annual Energy Consumption	27.8 kWh/year
Carpet Cleaning Class	D
Hard Floor Cleaning Class	B
Dust Re-emission Class	C
Sound Power Level	<79 dB
Airflow	29 l/s
Vacuum (max)	20 kPa
Operating Radius	8 m

Feature	Specification
Cable Length	5 m
Weight (Vacuum Cleaner)	3.2 kg
Dimensions (Vacuum Cleaner)	25 x 20 x 36 cm

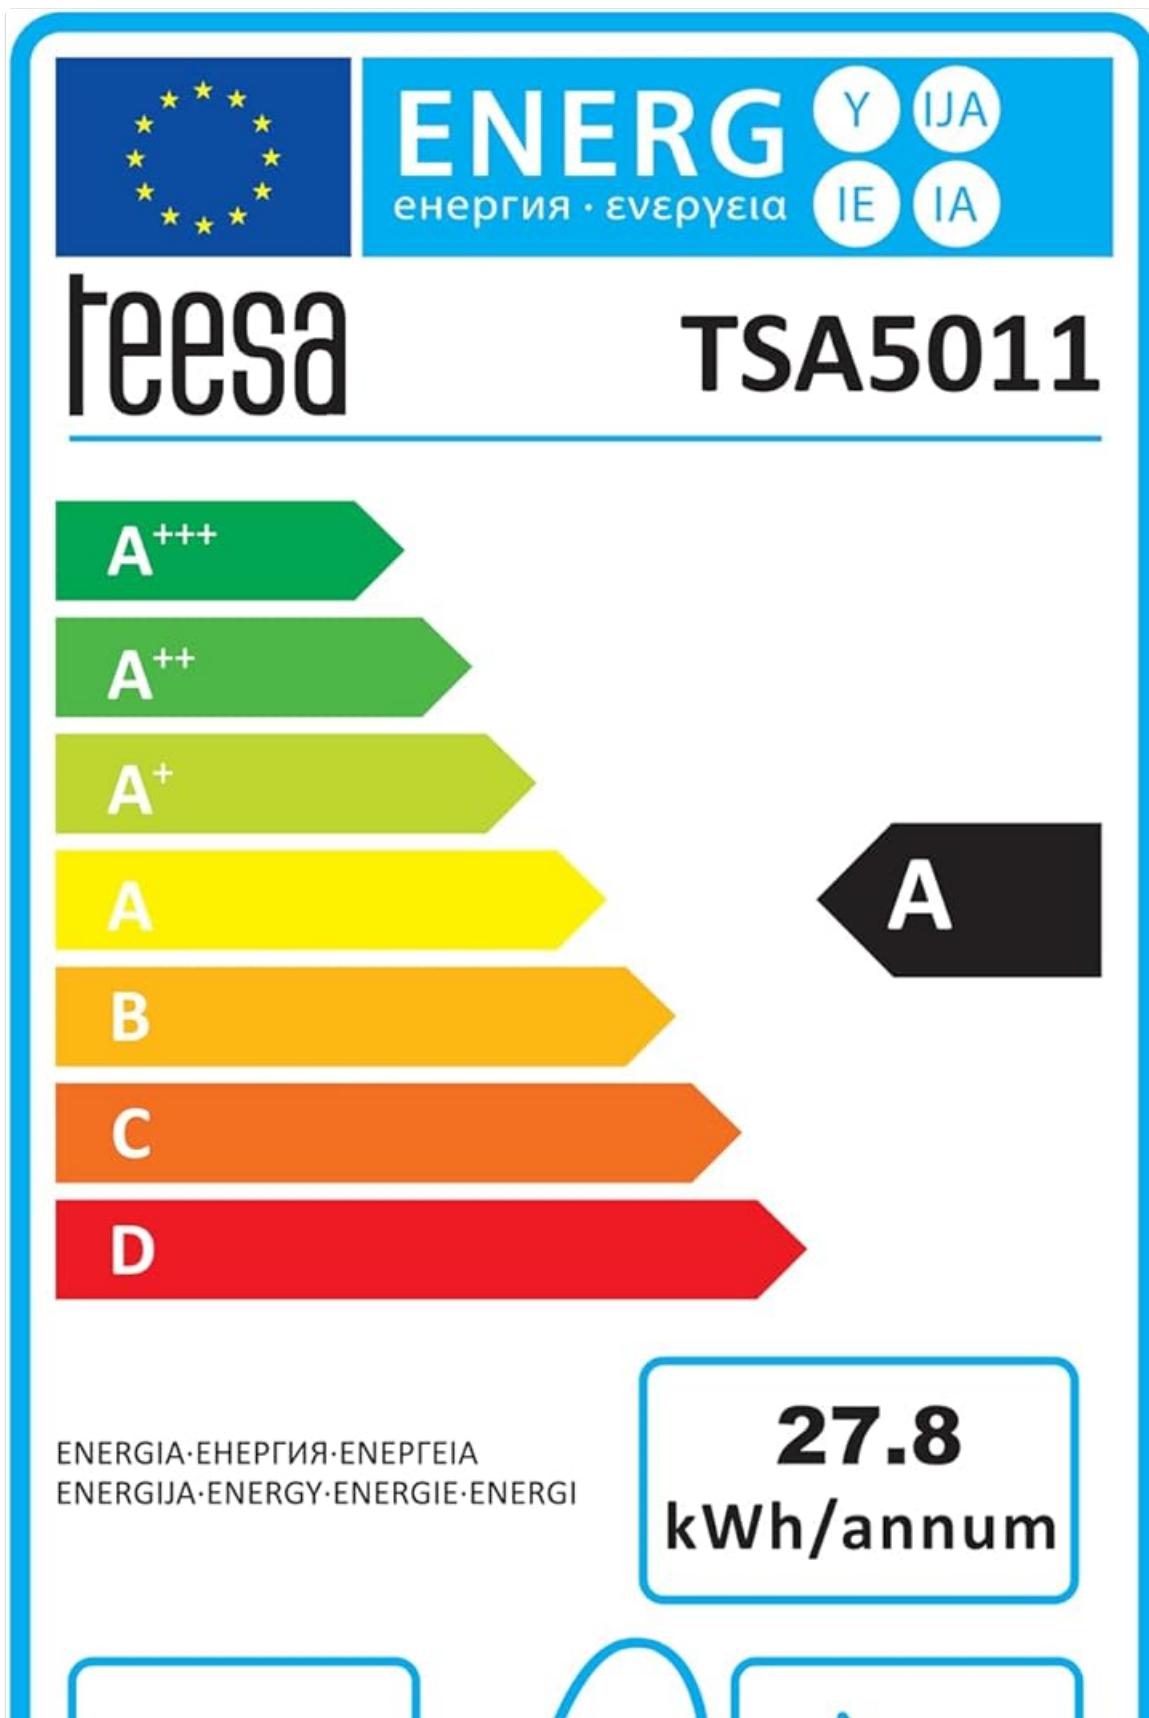

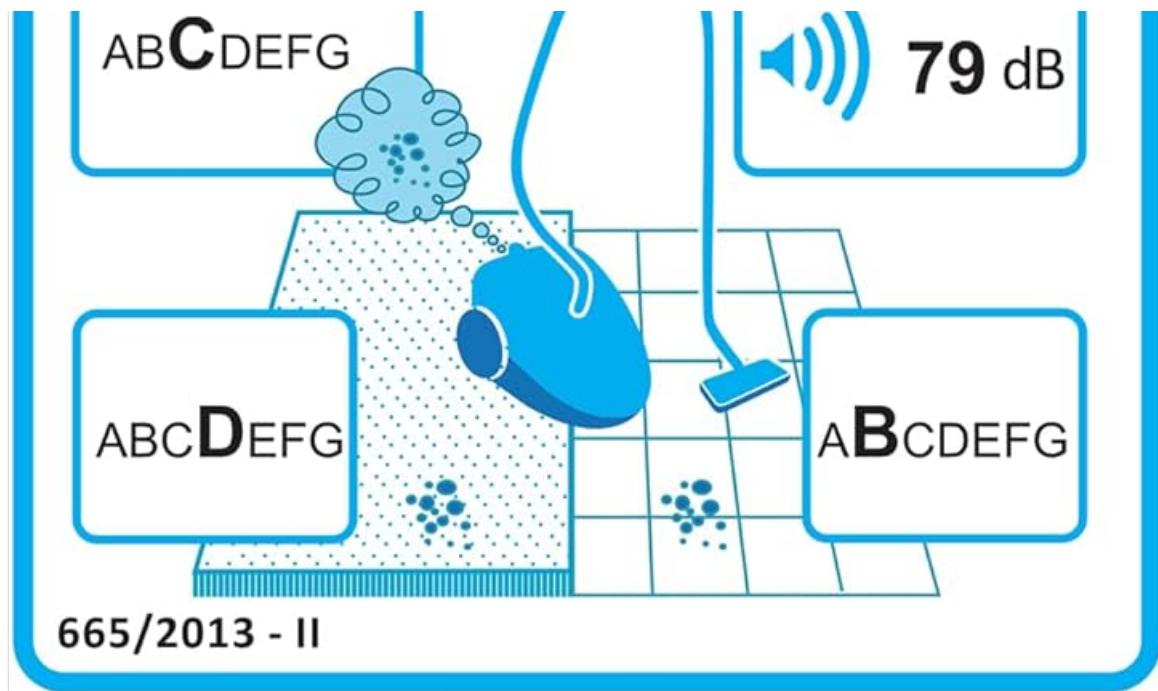


Image 8.1: Energy label for the Teesa Eris 750 (TSA5011) vacuum cleaner, showing energy efficiency class A, annual energy consumption of 27.8 kWh, and sound level of 79 dB.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Teesa website. Keep your proof of purchase for any warranty claims.

Manufacturer: TEESA

Model Number: TSA5011

ASIN: B073X83SSJ