



Manuals.plus /

- › SKMEI /
- › SKMEI Digital Sports Watch Model 1229BLU User Manual

SKMEI 1229BLU

SKMEI Digital Sports Watch Model 1229BLU User Manual

Comprehensive instructions for setup, operation, and maintenance.

INTRODUCTION

This manual provides detailed instructions for the SKMEI Digital Sports Watch, Model 1229BLU. Please read this manual carefully to ensure proper use and to understand all functions of your new watch. This watch features a digital display, 3ATM water resistance, and a durable stainless steel back case.



Image 1: Front view of the SKMEI Digital Sports Watch Model 1229BLU, showing the digital display and various function buttons.

PRODUCT OVERVIEW AND BUTTON FUNCTIONS

The SKMEI 1229BLU watch features multiple buttons for various functions. Familiarize yourself with their locations:

- **LIGHT Button (Top Left):** Activates the EL Backlight for illumination.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch, Dual Time).
- **START Button (Top Right):** Used to start/stop functions in Stopwatch mode, and adjust settings.
- **RESET Button (Bottom Right):** Used to reset functions in Stopwatch mode, and adjust settings.



Image 2: Close-up view of the watch face, highlighting the labels for the LIGHT, MODE, START, and RESET buttons.

SETUP AND TIME SETTING

1. **Initial Power On:** The watch is typically pre-powered. If the display is blank, check the battery.
2. **Entering Time Setting Mode:** From the normal time display, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in time setting mode.
3. **Adjusting Seconds:** Press the **RESET** button to zero out the seconds.
4. **Selecting Next Setting:** Press the **START** button to move to the next setting (e.g., hours, minutes, month, date, day of week).
5. **Adjusting Values:** While a value is flashing, press the **RESET** button to increase the value. Hold the **RESET** button for faster adjustment.
6. **Exiting Setting Mode:** Once all settings are adjusted, press the **MODE** button to return to the normal time display.



Image 3: The watch display showing the time 10:23:15, illustrating the digital format for time and date.

OPERATING INSTRUCTIONS

Using the EL Backlight

Press the **LIGHT** button (top left) to illuminate the display. The backlight will remain active for a few seconds.

Alarm Function

1. From the normal time display, press the **MODE** button once to enter Alarm mode. The alarm time will be displayed.
2. Press the **START** button to toggle the alarm ON/OFF. An alarm icon will appear when the alarm is active.
3. To set the alarm time, press and hold the **RESET** button until the hour digits flash.
4. Press the **START** button to adjust the hour.
5. Press the **MODE** button to switch to minute setting.
6. Press the **START** button to adjust the minutes.

7. Press the **RESET** button to confirm and exit alarm setting.

Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to "00:00:00" while paused.
5. Press the **MODE** button to exit Stopwatch mode.

Dual Time Function

This feature allows you to track a second time zone.

1. From the normal time display, press the **MODE** button three times to enter Dual Time mode.
2. Press and hold the **RESET** button until the hour digits flash.
3. Press the **START** button to adjust the hour for the second time zone.
4. Press the **MODE** button to switch to minute setting.
5. Press the **START** button to adjust the minutes for the second time zone.
6. Press the **RESET** button to confirm and exit Dual Time setting.



Image 4: The watch display showing the time 12:39:39, demonstrating the clarity of the digital readout.

MAINTENANCE AND CARE

- **Water Resistance:** This watch is 3ATM water resistant. This means it is suitable for daily use, splash/rain resistant. **DO NOT press any buttons underwater.** Avoid hot water, steam, and prolonged submersion.
- **Cleaning:** Wipe the watch with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for extended periods.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and other chemical substances that may damage the case or strap.
- **Battery Replacement:** When the display becomes dim or functions irregularly, the battery may need replacement. This should be performed by a qualified watch technician to ensure water resistance is maintained.



Image 5: Side view of the watch, showing the robust casing and button design.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery. Consult a professional watch technician.
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons firmly. If issue persists, a reset (if available) or professional inspection may be needed.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal damage).	Immediately take the watch to a professional for inspection and repair to prevent further damage.
Time is incorrect.	Time not set correctly or battery low.	Refer to "Setup and Time Setting" section. If issue persists, check battery.

SPECIFICATIONS

- **Model:** SKMEI 1229BLU
- **Movement:** Original JAPAN Time Module Quartz Movement
- **Display:** Digital
- **Case Material:** Environmental IPS electroplating Case, Stainless Steel Back
- **Band Material:** Rubber
- **Water Resistance:** 3ATM (30 meters) - Splash/Rain Resistant. Not suitable for swimming or diving.
- **Functions:** Time, Second, Month, Date, Day of Week, Alarm, Stopwatch, EL Backlight, Dual Time.
- **Case Diameter:** 46 mm
- **Item Weight:** 70 g



Image 6: Rear view of the watch, showing the stainless steel back case with engraved details and the watch strap.

WARRANTY INFORMATION

This SKMEI Digital Sports Watch Model 1229BLU comes with a **6 Months Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the watch was exposed to conditions beyond its 3ATM rating (e.g., pressing buttons underwater, hot water exposure).
- Battery replacement.
- Unauthorized repairs or modifications.

For warranty claims, please retain your proof of purchase and contact the retailer or SKMEI customer service.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your SKMEI Digital Sports Watch Model 1229BLU, please refer to the contact information provided by your retailer or visit the official SKMEI website. You can also visit the SKMEI Store on Amazon for more product information: [SKMEI Official Store](#)