



[Manuals.plus](#) /

> [Xerox](#) /

> Xerox AltaLink C8070/H2 Color Multifunction Printer User Manual

## Xerox C8070/H2

# Xerox AltaLink C8070/H2 Color Multifunction Printer User Manual

Model: C8070/H2

## 1. INTRODUCTION

---

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your Xerox AltaLink C8070/H2 Color Multifunction Printer. Designed for office environments, this device offers high-speed color and monochrome printing, copying, and scanning capabilities, along with advanced features to enhance productivity. Please read this manual thoroughly before using the printer to ensure safe and efficient operation and to maximize the lifespan of your device.

## 2. SETUP

---

### 2.1 Unpacking and Placement

Carefully remove the printer from its packaging. The unit weighs approximately 349 pounds, so ensure adequate assistance for moving and placement. The dimensions are 28.9"D x 25.2"W x 45.2"H. Place the printer on a stable, level surface with sufficient space for ventilation and access to all trays and compartments. Ensure the printer is placed near a power outlet and a network connection point (Ethernet).



Figure 2.1: Front view of the Xerox AltaLink C8070/H2 Multifunction Printer, showing the main unit with multiple paper trays and the control panel.

## 2.2 Connecting Power and Network

1. Connect the power cord to the printer and then to a grounded electrical outlet.
2. Connect an Ethernet cable from your network router or switch to the Ethernet port on the printer.
3. The printer also supports NFC connectivity for certain functions.

## 2.3 Initializing the Printer

Upon first power-on, the printer will perform an initialization sequence. Follow any on-screen prompts on the control panel. The control panel is a touch-screen interface that allows for easy navigation and configuration.



Figure 2.2: Top-down view of the Xerox AltaLink C8070/H2 Multifunction Printer with the automatic document feeder (ADF) open, revealing the scanner glass and paper guides.

## 2.4 Loading Paper

The printer comes with 2-520 sheet trays, a 2,000-sheet high-capacity tandem tray, and a 100-sheet bypass tray. It supports plain paper up to Super B/A3 size.

1. Pull out the desired paper tray.
2. Adjust the paper guides to fit the paper size.
3. Load the paper stack, ensuring it is not overfilled.
4. Gently push the tray back into the printer.

## 3. OPERATING INSTRUCTIONS

---

The Xerox AltaLink C8070/H2 is an all-in-one multifunction device capable of printing, copying, and scanning.

### 3.1 Printing

The printer supports color and monochrome PC/Network printing at up to 70 pages per minute (ppm). Maximum color print resolution is 1200 x 2400 dpi, and maximum black and white print resolution is 600 dpi.

1. Ensure the printer is connected to your network and drivers are installed on your computer.
2. From your computer, open the document you wish to print.

3. Select "Print" from the application's menu.
4. Choose the Xerox AltaLink C8070/H2 from the list of available printers.
5. Adjust print settings (e.g., color/mono, duplex, paper source) as needed.
6. Click "Print".

## 3.2 Copying

The maximum copy speed for both black & white and color is 70 ppm, with a resolution of 600 x 600 dpi. The printer supports automatic duplex copying.

1. Place your original document face-up in the Automatic Document Feeder (ADF) or face-down on the scanner glass.
2. On the printer's control panel, select the "Copy" function.
3. Adjust settings such as number of copies, color/mono, duplex, and reduction/enlargement.
4. Press the "Start" button to begin copying.

## 3.3 Scanning

The integrated Automatic Document Feeder (ADF) allows for efficient scanning of multiple pages.

1. Place your original document(s) in the ADF or on the scanner glass.
2. On the printer's control panel, select the "Scan" function.
3. Choose your desired scan destination (e.g., email, network folder, USB).
4. Configure scan settings such as resolution, file format, and color mode.
5. Press the "Start" button to begin scanning.



Figure 3.1: Side view of the Xerox AltaLink C8070/H2 Multifunction Printer, highlighting the output tray and the overall compact design.

## 4. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the life of your Xerox AltaLink C8070/H2 printer.

### 4.1 Replacing Toner Cartridges

The printer uses CMYK (Cyan, Magenta, Yellow, Black) toner cartridges. The control panel will display alerts when toner levels are low.

1. Open the front cover of the printer.
2. Identify the empty toner cartridge.
3. Grasp the handle of the cartridge and pull it out.
4. Unpack the new toner cartridge and shake it gently to distribute the toner.
5. Insert the new cartridge firmly until it clicks into place.
6. Close the front cover.

## 4.2 Cleaning the Scanner Glass and ADF

Dust and smudges on the scanner glass or ADF can affect scan quality.

1. Power off the printer.
2. Open the document feeder cover.
3. Wipe the scanner glass and the white strip on the underside of the ADF cover with a soft, lint-free cloth dampened with a mild, non-abrasive glass cleaner.
4. Allow surfaces to dry completely before closing the covers and powering on the printer.

## 5. TROUBLESHOOTING

---

This section addresses common issues you might encounter with your printer.

### 5.1 Paper Jams

If a paper jam occurs, the control panel will display an error message indicating the location of the jam. Follow the on-screen instructions or the steps below:

1. Open the indicated covers or trays.
2. Carefully remove any jammed paper, pulling it in the direction of the paper path to avoid tearing.
3. Ensure all paper fragments are removed.
4. Close all covers and trays securely.

### 5.2 Print Quality Issues

If prints are faded, streaky, or have incorrect colors:

- Check toner levels and replace any low cartridges.
- Perform a print head cleaning or calibration from the printer's control panel settings.
- Ensure you are using appropriate paper for your print job.

### 5.3 Network Connectivity Problems

If the printer is not accessible on the network:

- Verify the Ethernet cable is securely connected to both the printer and the network device.
- Check the network status on the printer's control panel.
- Restart the printer and your network router/switch.
- Ensure the printer has a valid IP address.

## 6. SPECIFICATIONS

---

### Xerox AltaLink C8070/H2 Key Specifications

Feature	Detail
Product Dimensions	28.9"D x 25.2"W x 45.2"H
Item Weight	349 Pounds
Printing Technology	Laser
Printer Output	Color

Feature	Detail
Max Print Speed (Color/Mono)	70 ppm
Max Color Print Resolution	1200 x 2400 dpi
Max B&W Print Resolution	600 dpi
Max Copy Speed (Color/Mono)	70 ppm
Max Copy Resolution	600 x 600 dpi
Scanner Type	Automatic Document Feeder (ADF)
Duplex Printing/Copying	Automatic
Paper Supply	2-520 Sheet Trays, 2,000-Sheet High Capacity Tandem Tray, 100-Sheet Bypass
Max Input Sheet Capacity	2000
Maximum Media Size	Super B/A3
Memory Storage Capacity	8 GB
Hardware Interface	Ethernet
Connectivity Technology	NFC
Included Components	Printer, Paper Trays, NFC Tag

## 7. WARRANTY AND SUPPORT

---

The Xerox AltaLink C8070/H2 comes with a limited warranty. For specific terms and conditions, please refer to the warranty documentation included with your product or visit the official Xerox website.

For technical support, service requests, or further assistance, please contact Xerox Customer Support. You can find contact information on the Xerox website or through the documentation provided with your printer.

**Manufacturer:** Xerox Corporation

**Model Number:** C8070/H2

**ASIN:** B073XWD8G2

**UPC:** 095205880212

