

[Manuals.plus](#) /

› [Best Choice Products](#) /

› Best Choice Products 5.5qt 6-in-1 Digital Air Fryer (Model SKY3775) User Manual

## Best Choice Products SKY3775

# Best Choice Products 5.5qt 6-in-1 Digital Air Fryer (Model SKY3775) User Manual

Model: SKY3775 | Brand: Best Choice Products

## 1. INTRODUCTION

Thank you for choosing the Best Choice Products 5.5qt 6-in-1 Digital Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods by circulating hot air, resulting in crispy textures with little to no oil. Please read this manual thoroughly before use to ensure safe and efficient operation.



Image: The Best Choice Products 5.5qt Digital Air Fryer positioned on a kitchen counter, surrounded by various dishes, showcasing its integration into a modern kitchen environment.

## 2. IMPORTANT SAFETY INSTRUCTIONS

**WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:**

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause

injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### **3. PRODUCT OVERVIEW**

---

The Best Choice Products 5.5qt Digital Air Fryer features a user-friendly digital interface and a spacious cooking basket for family-sized meals.

#### **Components:**

- Main Unit with Digital Control Panel
- Removable Fry Basket with Non-Stick Coating
- Basket Handle

#### **Control Panel:**



Image: A detailed view of the air fryer's digital control panel, highlighting the display, mode selections, fan indicator, heat indicator, temperature controls, and time controls.

- **Display:** Shows temperature and time settings.
- **Mode Selections:** Icons for various food presets (e.g., fries, chicken, steak).
- **Fan Indicator:** Illuminates when the fan is active.
- **Heat Indicator:** Illuminates when the heating element is active.
- **Power Button:** Turns the appliance on/off.
- **Temperature Control Buttons (+/-):** Adjust cooking temperature.
- **Time Control Buttons (+/-):** Adjust cooking time.
- **Menu Button (M):** Cycles through preset cooking modes.

## 4. SETUP

1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
2. **Initial Cleaning:** Before first use, clean the fry basket and the inside of the appliance with a damp cloth and mild detergent. Wipe dry thoroughly.

3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space on all sides.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## 5. OPERATING INSTRUCTIONS

---

The air fryer uses rapid air circulation technology to cook food evenly and efficiently.

### Basic Operation:

1. **Prepare Food:** Place your ingredients into the fry basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the fry basket back into the main unit until it clicks securely into place.
3. **Power On:** Press the Power button to turn on the appliance.
4. **Set Temperature and Time:**
  - Use the Temperature Control buttons (+/-) to set the desired cooking temperature (100-392°F).
  - Use the Time Control buttons (+/-) to set the desired cooking time.
5. **Use Presets (Optional):** Press the Menu button (M) to cycle through the six preset cooking modes for common foods. Each preset has a default temperature and time, which can be adjusted manually.
6. **Start Cooking:** The air fryer will automatically begin cooking after a few seconds of inactivity or by pressing the Power button again.
7. **Shake Basket (Optional):** For some foods, it is recommended to shake the basket halfway through the cooking process to ensure even crisping. Carefully pull out the basket, shake, and reinsert. The appliance will pause and resume cooking once the basket is reinserted.
8. **Finish Cooking:** The air fryer will beep when the cooking time is complete. Carefully remove the basket and transfer food to a serving dish.



Oil free  
Cooking



Temperature  
Control



Built in  
Timer

Image: An illustrative cross-section of the air fryer demonstrating the hot air circulation around a whole chicken, highlighting the oil-free cooking and temperature control features.

French Fries



Fried Chicken



Steak



Pizza



Chicken Breast



Hamburger

Image: A visual representation of different food items that can be prepared using the air fryer, such as French fries, fried chicken, steak, pizza, hamburgers, and chicken breasts.

#### Official Product Video:

Your browser does not support the video tag.

Video: An official product video demonstrating the features and use of the Best Choice Products 5.5qt 6-in-1 Digital Air Fryer Appliance, including food preparation and operation of the digital controls.

## 6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Clean Fry Basket:** The fry basket has a non-stick coating and is dishwasher safe. For manual

cleaning, wash with hot water, dish soap, and a non-abrasive sponge.

3. **Clean Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
4. **Clean Heating Element:** Use a cleaning brush to remove any food residue from the heating element inside the appliance.
5. **Storage:** Ensure all parts are dry before storing the air fryer in a cool, dry place.



Image: The removable fry basket of the air fryer, filled with food, being detached from the main unit, illustrating its ease of removal for cleaning or serving.

## 7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet malfunction; main unit or basket not properly closed.	Ensure the power cord is securely plugged into a working outlet. Check if the fry basket is fully inserted and clicked into place.
Food is not cooked evenly.	Basket is overfilled; food pieces are too large; insufficient shaking during cooking.	Do not overfill the basket. Cut food into smaller, uniform pieces. Shake the basket halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients cooking.	Clean the basket and inside of the appliance thoroughly after each use. For fatty foods, add a small amount of water to the bottom of the outer pan to prevent smoke.
Food is not crispy.	Not enough oil (if desired); temperature too low; cooking time too short.	Lightly brush or spray food with oil for extra crispiness. Increase temperature or cooking time as needed.

## 8. SPECIFICATIONS

- **Model Number:** SKY3775
- **Capacity:** 5.5 Quarts
- **Output Wattage:** 1800 Watts
- **Voltage:** 120 Volts
- **Temperature Range:** 100-392°F (38-200°C)
- **Control Method:** Touch
- **Material:** Plastic (Outer), Non-Stick Coated (Basket)
- **Product Dimensions (D x W x H):** 10.5" x 13" x 14" (26.7 cm x 33 cm x 35.6 cm)
- **Item Weight:** 12.13 Pounds (5.5 kg)
- **Dishwasher Safe:** Yes (Fry Basket)

13 in.  
33 cm



14 in.  
35.6 cm

10.5 in.  
25.4 cm

Image: A diagram illustrating the physical dimensions of the air fryer, including its height (14 inches), width (13 inches), and depth (10.5 inches).

## 9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included with your purchase or visit the official Best Choice Products website. Please have your model number (SKY3775) and purchase date available when contacting support.