

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [BOMAZ](#) /

› BOMAZ Replacement Remote Control User Manual for Samsung Smart LED TVs UN24H4500, UN28H4500, UN28H4500AF

BOMAZ 758232816028

BOMAZ Replacement Remote Control User Manual

For Samsung Smart LED TVs UN24H4500, UN28H4500, UN28H4500AF

INTRODUCTION

This manual provides comprehensive instructions for the BOMAZ replacement remote control, designed for use with specific Samsung Smart LED TV models. This remote offers stable performance and requires no programming for immediate use. Please read this manual carefully to ensure proper operation and longevity of your remote control.



Image: Front view of the BOMAZ replacement remote control. This image displays the full layout of buttons on the remote, including power, number pad, volume, channel, navigation, and smart functions.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back view of the BOMAZ replacement remote control. This image highlights the rear of the remote, where the battery compartment is located.

2. Initial Use

This replacement remote control is designed to work with compatible Samsung Smart LED TV models without any programming. Once batteries are installed, it is ready for immediate use. Simply point the remote at your television and begin operating.

OPERATING INSTRUCTIONS

The BOMAZ replacement remote control provides all essential functions for your Samsung Smart LED TV. Below is a guide to common buttons and their functions:

- **Power (TV / STB):** Turns the television or set-top box on or off.
- **Source:** Selects input sources (e.g., HDMI1, HDMI2, AV).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes television channels.
- **Mute:** Silences the television audio.
- **CH LIST:** Displays the channel list.
- **MENU:** Accesses the TV's main menu.
- **GUIDE:** Displays the electronic program guide.
- **SMART HUB:** Opens the Smart Hub for access to apps and streaming services.
- **TOOLS:** Provides quick access to common functions or settings.
- **INFO:** Displays information about the current program or input.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **Enter (Center Button):** Confirms selections.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Functions vary depending on the TV menu or application.
- **E-MANUAL:** Accesses the TV's electronic manual (if supported by TV).
- **HISTORY:** Displays viewing history.
- **Playback Controls:** Play, Pause, Stop, Rewind, Fast Forward for media playback.

Compatibility

This remote control is specifically designed as a replacement for original remotes compatible with the following Samsung Smart LED TV models:

- UN24H4500
- UN24H4500AF
- UN24H4500AFXZA
- UN28H4500
- UN28H4500AF
- UN28H4500AFXZA

MAINTENANCE

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Avoid using liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's finish or internal components.

TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are installed correctly with the correct polarity (+/-).
- Replace old batteries with new ones.
- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within the operable distance (more than 8 meters) and pointing the remote directly at the TV.

- **Specific buttons not working:**

- This remote is a replacement and may not support all advanced functions of certain original Samsung Smart remotes (e.g., voice control, motion control).
- If a basic function button (e.g., Power, Volume) is not working, try replacing the batteries.

SPECIFICATIONS

Brand	BOMAZ
Model Number	758232816028
Compatible Devices	Samsung Smart LED TVs (UN24H4500, UN28H4500, UN28H4500AF series)
Battery Type	2 x AAA Batteries (not included)
Operable Distance	More than 8 meters
Material	ABS Material
Product Dimensions	0.5 x 2 x 8 inches
Item Weight	3.7 ounces
Color	Black

WARRANTY AND SUPPORT

Warranty Information

This BOMAZ replacement remote control comes with a 30-day warranty from the date of purchase. This warranty covers manufacturing defects. Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any issues with your remote control that are not resolved by the troubleshooting steps, or if you have questions regarding its operation, please contact the seller or manufacturer for assistance. We test every remote before shipment to ensure quality.

