

Carimali 4251391306318

Carimali Kicco-COF/Kicco-LM Espresso Machine Front Film User Manual

Model: 4251391306318

INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of the Carimali Front Film for Kicco-COF and Kicco-LM espresso machines. This component is designed to be a direct replacement part, ensuring proper functionality and display for your espresso machine.

The front film is a crucial part of the user interface, often displaying icons for various coffee selections and machine status. Its precise dimensions ensure a perfect fit and clear visibility.

PRODUCT OVERVIEW



Figure 1: Carimali Front Film for Kicco-COF and Kicco-LM espresso machines. This image displays the black film with blue oval outlines and white icons representing various coffee selections (single espresso, double espresso, larger coffee cups) and possibly other beverage options or machine states. The top left corner shows "Carimali 33-00303 1° MARRONE". This film is a replacement part for the espresso machine's control panel.

The Carimali front film is specifically designed for Kicco-COF and Kicco-LM espresso machines. It measures 178 mm in length and 51 mm in width, ensuring compatibility and a precise fit for the designated models. This film typically features printed icons that correspond to the machine's functions, guiding the user through beverage selection and operation.

SETUP AND INSTALLATION

Installation of the front film should be performed by a qualified technician or an individual with experience in espresso machine maintenance. Improper installation may lead to damage to the film or the espresso machine.

- 1. Safety First:** Ensure the espresso machine is completely powered off and unplugged from the electrical outlet before

beginning any installation or maintenance.

2. **Access the Control Panel:** Carefully open or remove the necessary panels of the espresso machine to gain access to the existing front film or the area where the new film will be installed. Refer to your specific espresso machine's service manual for detailed instructions on accessing internal components.
3. **Remove Old Film (if applicable):** If replacing an existing film, gently peel it off, taking care not to damage the underlying control panel or wiring. Clean any adhesive residue from the surface.
4. **Position New Film:** Align the new Carimali front film (Model 4251391306318) precisely with the control panel's cutouts and button locations. Ensure the icons on the film correspond correctly with the underlying sensors or buttons.
5. **Secure the Film:** Apply gentle, even pressure across the film to ensure it adheres properly to the surface. If the film has an adhesive backing, ensure it is fully engaged.
6. **Reassemble:** Carefully reassemble any panels or covers that were removed.
7. **Test Functionality:** Plug in the espresso machine and power it on. Test all functions associated with the control panel to ensure the new film does not impede button presses or display visibility.

OPERATING INSTRUCTIONS

This front film is a passive component of the espresso machine's user interface. It does not have active operating controls itself. Its primary function is to provide a visual guide for the machine's buttons and display areas. For detailed operating instructions of your Carimali Kicco-COF or Kicco-LM espresso machine, please refer to the specific user manual provided with your espresso machine. The icons on this film correspond to the functions described in your machine's operational guide, such as:

- Single Espresso Shot
- Double Espresso Shot
- Long Coffee / Americano
- Hot Water Dispense
- Steam Wand Activation
- Cleaning Cycles

Ensure the film is clean and free from obstructions to allow for clear visibility of the icons and proper interaction with the underlying control panel.

MAINTENANCE

Proper maintenance of the front film ensures its longevity and continued clear visibility.

- **Cleaning:** Regularly wipe the surface of the film with a soft, damp cloth. Use only mild, non-abrasive cleaning solutions. Avoid harsh chemicals, solvents, or abrasive materials, as these can damage the film's surface and printed icons.
- **Inspection:** Periodically inspect the film for any signs of wear, peeling, or damage. If the film becomes scratched, faded, or starts to peel, it may be time for a replacement to maintain optimal machine aesthetics and usability.
- **Protection:** Avoid placing sharp objects or excessive pressure on the film, which could lead to scratches or punctures.

TROUBLESHOOTING

As a passive component, the front film itself typically does not cause operational issues with the espresso machine. However, issues related to the film can impact user interaction.

| Problem | Possible Cause | Solution |
|--|--|---|
| Icons on film are unclear or faded. | Wear and tear, exposure to harsh cleaning agents, or prolonged sunlight. | Clean the film gently. If fading persists, consider replacing the front film. |
| Film is peeling or bubbling. | Improper installation, adhesive failure, or exposure to extreme temperatures/humidity. | Attempt to re-adhere if possible. If not, replacement is recommended. Ensure proper installation in a suitable environment. |
| Buttons beneath film are unresponsive. | Film misalignment, excessive thickness, or underlying machine issue. | Check film alignment. Ensure the film is the correct part for your machine. If the issue persists, the problem likely lies with the machine's internal electronics or buttons, not the film itself. Consult a technician. |

SPECIFICATIONS

- Product Type:** Front Film for Espresso Machine
- Brand:** Carimali
- Model Compatibility:** Carimali Kicco-COF, Carimali Kicco-LM Espresso Machines
- Part Number (Model):** 4251391306318
- ASIN:** B073Z985S4
- Length:** 178 mm
- Width:** 51 mm
- Usage:** Espresso machine interface component

WARRANTY AND SUPPORT

Information regarding the availability of spare parts for this specific component is currently unavailable. For warranty information or technical support related to Carimali products, please contact Carimali directly or your authorized Carimali service provider.

When contacting support, please provide the product's model number (4251391306318) and ASIN (B073Z985S4) for faster assistance.

For general inquiries or to find a service center, please visit the official Carimali website or refer to the documentation that came with your Carimali espresso machine.