

[Manuals.plus](#) /

› [Kanto](#) /

› Kanto TTS100 Tabletop TV Stand Instruction Manual for 37" to 65" TVs

Kanto TTS100

Kanto TTS100 Tabletop TV Stand Instruction Manual

Model: TTS100 | Brand: Kanto

PRODUCT OVERVIEW

The Kanto TTS100 is a versatile tabletop TV stand designed to enhance your viewing experience. It provides a stable and adjustable platform for your television, offering features like height adjustment, swivel, and tilt, along with integrated cable management and a safety tether for secure placement.





Image: Front view of the Kanto TTS100 Tabletop TV Stand, showcasing its sleek black design and sturdy base.

This stand is suitable for TVs ranging from 37 to 65 inches and can support weights up to 88 pounds (40 kg).

Why Choose a Tabletop Stand?

Your browser does not support the video tag.

Video: An informational video discussing TV mounting solutions that do not require drilling, highlighting the benefits and flexibility of tabletop stands like the Kanto TTS100.

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before installation and use. Failure to do so may result in personal injury or property damage. If you have any questions, contact Kanto customer support.

- Ensure the TV weight and size are within the specified limits (up to 88 lbs, 37"-65" TVs).
- Always use the provided safety tether to secure the stand to a wall stud to prevent tipping.
- Do not overtighten screws.

- Keep children and pets away during installation.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly.

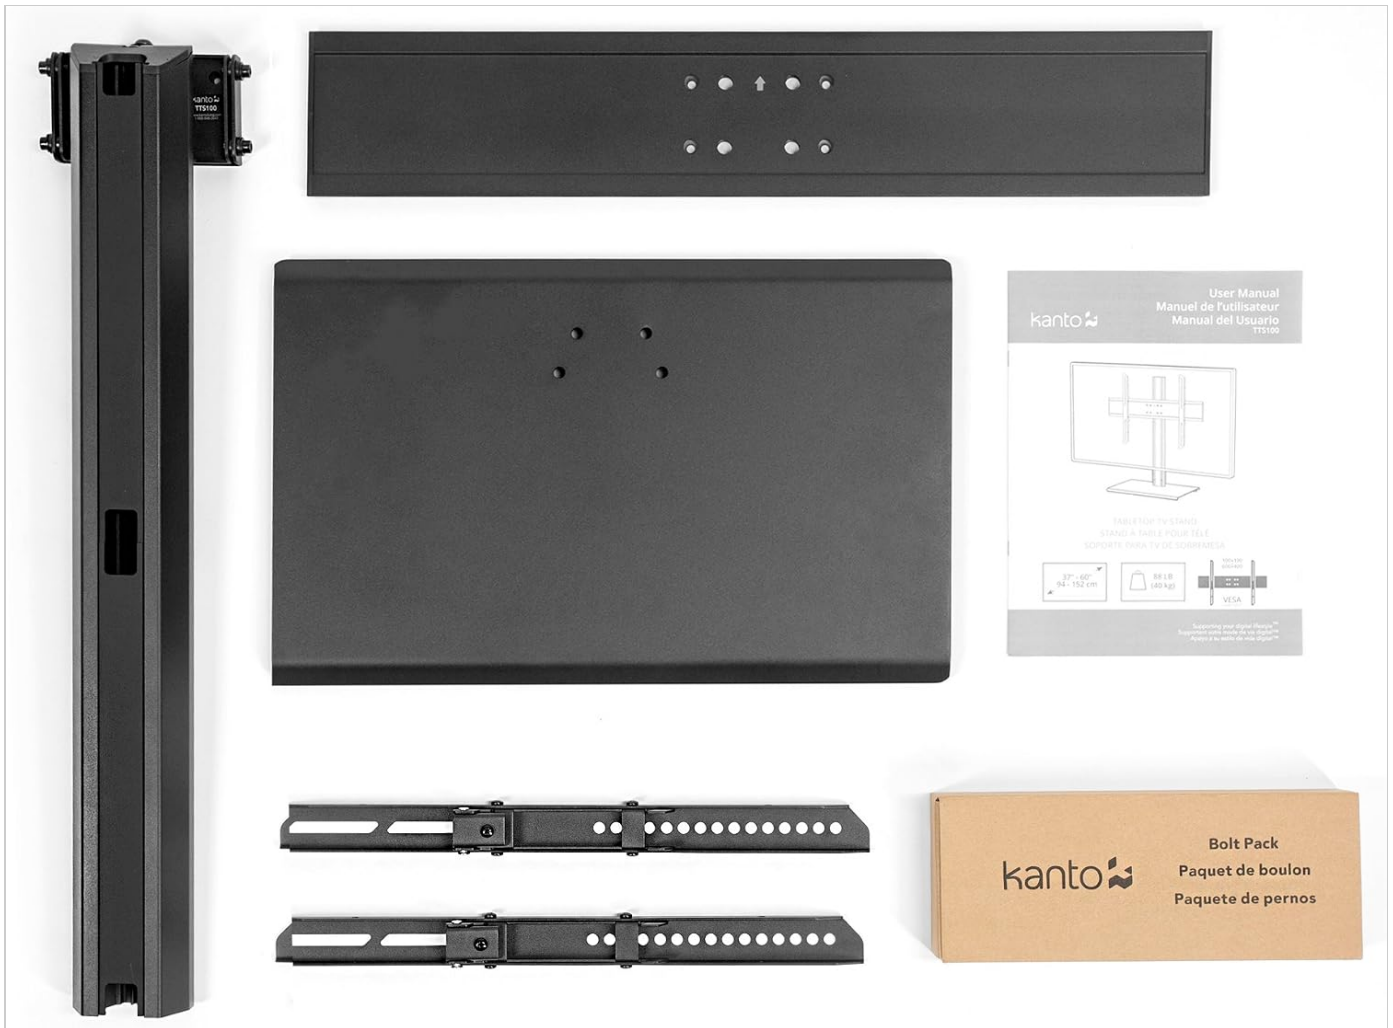


Image: All components of the Kanto TTS100 Tabletop TV Stand laid out, including the base, support column, VESA mounting plate, TV brackets, and hardware kit.

The package includes the stand base, support column, VESA mounting plate, TV brackets, and a hardware kit with various screw sizes to fit most TVs.

SETUP AND INSTALLATION

Follow these steps to assemble your Kanto TTS100 Tabletop TV Stand and mount your television.

Video Installation Guide

Your browser does not support the video tag.

Video: A detailed installation guide for the Kanto TTS100 Tabletop TV Stand, demonstrating each step of assembly and TV mounting.

Step-by-Step Instructions

1. Attach TV Brackets to TV:

Carefully place your TV face down on a soft, clean surface. Identify the VESA mounting holes on the back of your TV. Select the appropriate screws and spacers from the hardware kit to securely attach the TV brackets to your

television. Ensure the brackets are oriented correctly (usually with the longer arms pointing downwards or as indicated by arrows).

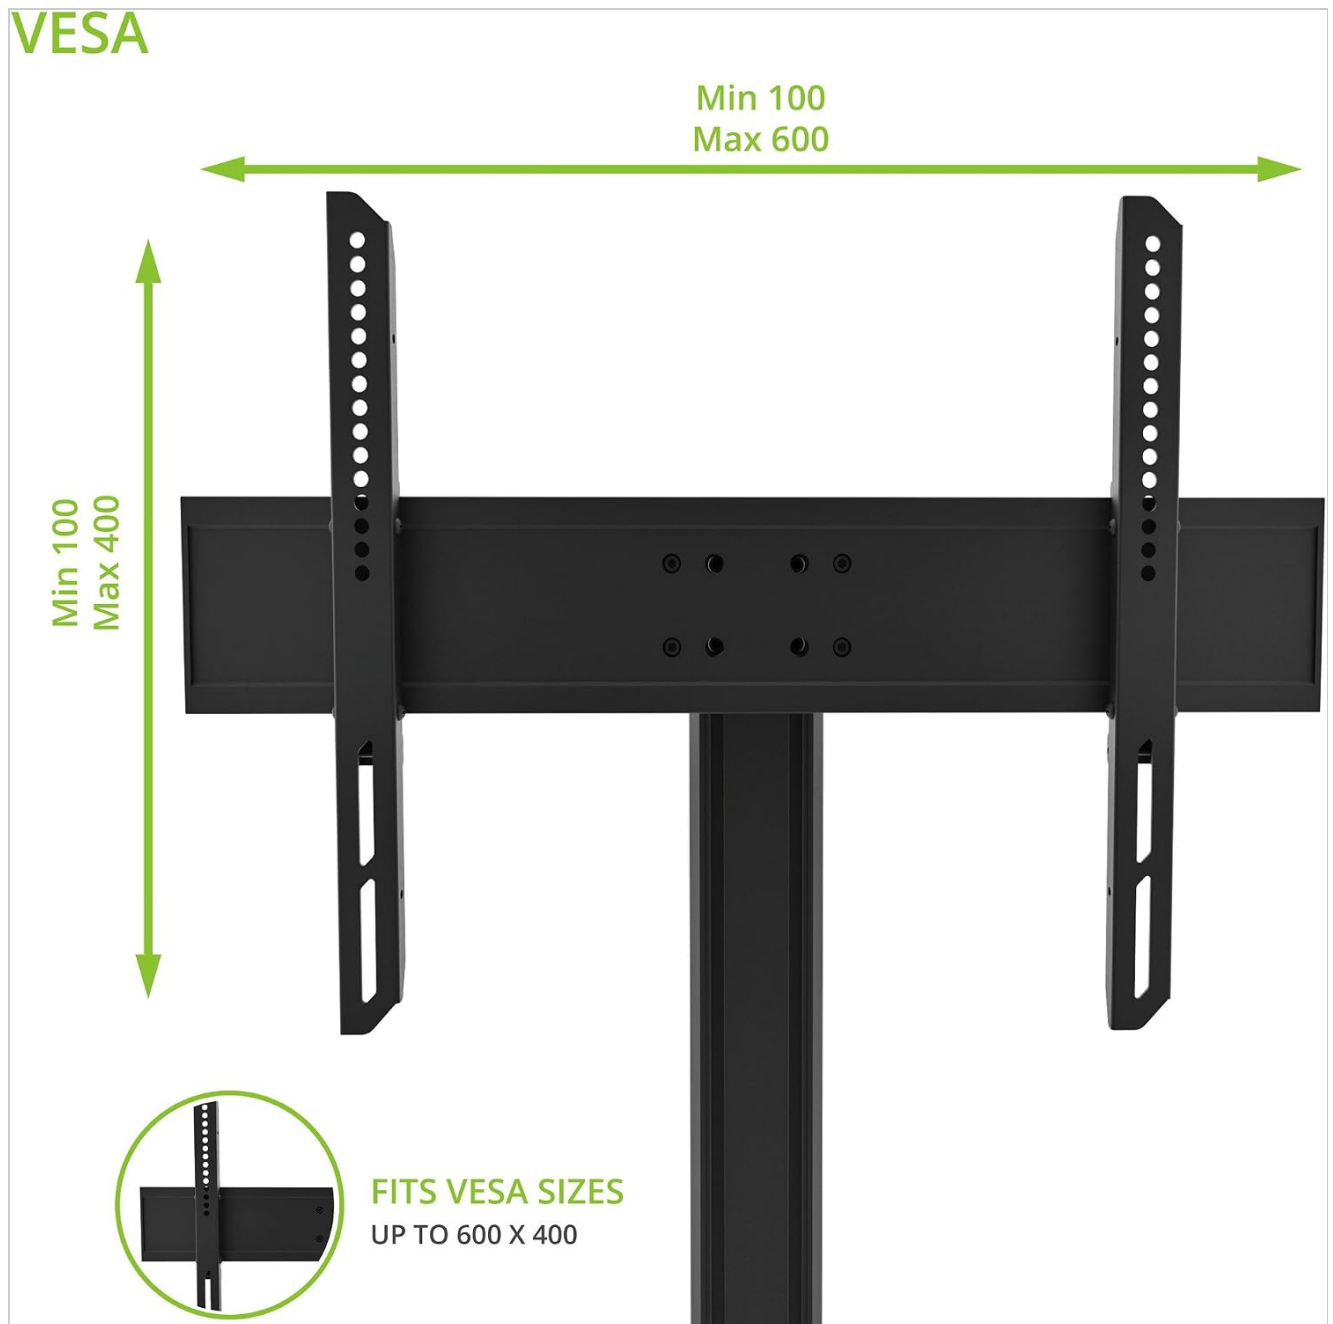


Image: Diagram illustrating VESA mounting hole patterns (Min 100, Max 600 horizontally; Min 100, Max 400 vertically) for compatible TVs.

2. Assemble the Stand Base:

Attach the support column to the stand base using the provided screws. Ensure all connections are tight and secure.

3. Attach VESA Mounting Plate to Support Column:

Secure the VESA mounting plate to the top of the support column using the designated hardware. Pay attention to the orientation, as this plate will hold your TV.

4. Mount the TV onto the Stand:

With assistance, carefully lift your TV and hook the attached TV brackets onto the VESA mounting plate. Ensure the TV is securely seated on the stand. Tighten any safety screws or locking mechanisms on the TV brackets to prevent accidental dislodgement.



Image: A television securely mounted on the Kanto TTS100 Tabletop TV Stand, viewed from the front.

ADJUSTMENTS

The Kanto TTS100 offers several adjustment options to optimize your viewing angle.

- **Height Adjustment:** The center column allows you to raise the center of your TV between 9.8 inches (25 cm) and 25.6 inches (65 cm). This provides space for soundbars or other AV equipment.
- **Swivel:** The TV can swivel up to 30 degrees left or right, allowing you to adjust the viewing angle for different seating positions.
- **Tilt:** The stand allows for a backward tilt of 5 degrees, which can help reduce glare from overhead lighting.



Image: Diagram illustrating the swivel (up to 30 degrees left or right) and tilt (5 degrees backward) capabilities of the Kanto TTS100 stand.




**SOLID STEEL
CONSTRUCTION**
SUPPORTS 88 LB (40 KG)

HEIGHT ADJUSTABLE
BETWEEN 9.8" (25 CM)
AND 25.6" (65 CM)

Image: Diagram showing the height adjustment range of the Kanto TTS100, from 9.8 inches to 25.6 inches, with a TV and soundbar for context.

CABLE MANAGEMENT

The Kanto TTS100 features integrated cable management to keep your setup tidy and organized. Route your TV and accessory cables through the designated channels in the support column to conceal them from view.

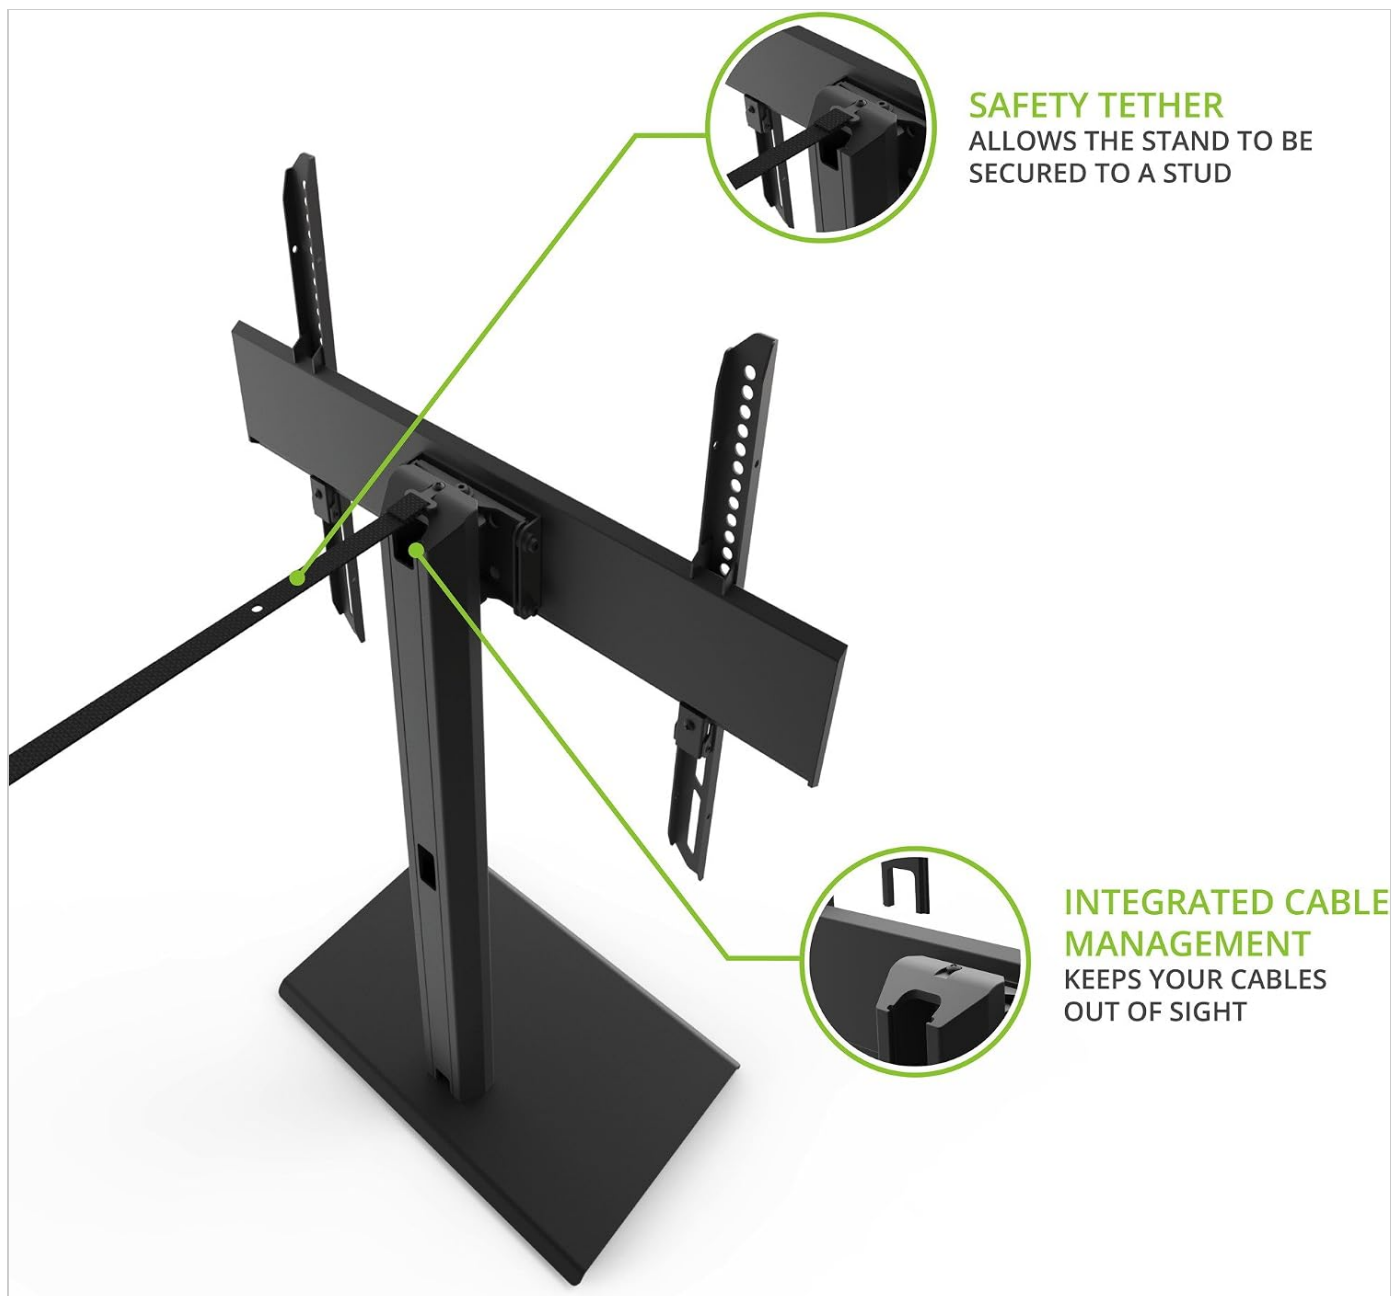

SAFETY TETHER
ALLOWS THE STAND TO BE
SECURED TO A STUD

**INTEGRATED CABLE
MANAGEMENT**
KEEPS YOUR CABLES
OUT OF SIGHT

Image: Illustration highlighting the integrated cable management system within the stand's support column and the optional safety tether attachment point.

SAFETY TETHER INSTALLATION

For enhanced stability and to prevent accidental tipping, it is recommended to install the provided safety tether. Secure one end of the tether to the designated point on the stand and the other end to a wall stud using appropriate hardware (not always included, but implied by "provided strap to secure the mount to the wall").

Refer to the installation video for visual guidance on attaching the safety tether.

SPECIFICATIONS

Feature	Detail
Brand	Kanto
Model Number	TTS100

Compatible TV Sizes	37" to 65"
Maximum Weight Capacity	88 lb (40 kg)
Height Adjustment Range	9.8" - 25.6" (25 cm - 65 cm)
Swivel Range	Up to 30° left or right
Tilt Range	5° backward
Material	Metal
Color	Black
Item Weight	20.2 pounds
Product Dimensions	4.49 x 14.69 x 30.39 inches
UPC	800152717968

TROUBLESHOOTING

- **TV not level:** Ensure all mounting screws are tightened evenly. Re-check the VESA mounting plate attachment to the support column.
- **Stand feels unstable:** Verify that the stand is placed on a flat, stable surface. Ensure all assembly screws are fully tightened. Install the safety tether to a wall stud.
- **Difficulty with adjustments:** Check for any obstructions or overtightened components. Ensure the TV weight is within the specified limits.

WARRANTY AND SUPPORT

For warranty information or technical support, please visit the official Kanto website or contact their customer service department. Keep your purchase receipt for warranty claims.

You can find more information and support resources at [Kanto Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question