



[Manuals.plus](#) /

› [SteamOne](#) /

› SteamOne H18B Vertical Garment Steamer User Manual

SteamOne H18B

SteamOne H18B Vertical Garment Steamer User Manual

Model: H18B

1. INTRODUCTION

Thank you for choosing the SteamOne H18B Vertical Garment Steamer. This appliance is designed to efficiently de-wrinkle, refresh, and sanitize your garments with continuous steam. Please read this manual carefully before initial use to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.


- Always connect the steamer to a grounded electrical outlet.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Unplug the steamer from the outlet when not in use and before cleaning.
- Do not operate the steamer with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Keep the steam head away from your body and hands during operation to prevent burns.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- Never direct steam at people or pets.
- Ensure the water tank is securely in place before operating.
- Do not leave the steamer unattended while it is powered on.

3. PRODUCT OVERVIEW AND COMPONENTS

The SteamOne H18B is a powerful vertical garment steamer designed for ease of use and effective wrinkle removal. It features an 1800W boiler and a continuous steam output of 40g/min, ready in just 60 seconds.



The SteamOne H18B Vertical Garment Steamer, fully assembled.

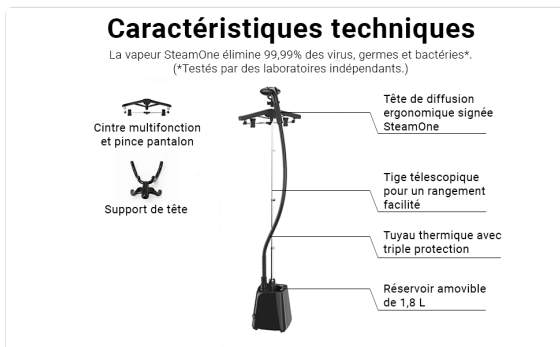

Key components of the SteamOne H18B steamer:
 Multifunction hanger with pant clips, head support, ergonomic diffusion head, telescopic pole, triple thermal protection hose, and 1.8L removable water tank.

Key Features:

- **Powerful Steam:** 1800 Watts for quick and effective de-wrinkling.
- **Fast Heat-up:** Ready to use in approximately 60 seconds.
- **Large Water Tank:** 1.8 Liters removable tank for extended steaming sessions (up to 45 minutes).
- **Continuous Steam Output:** 40g/min for consistent performance.
- **Ergonomic Design:** Lightweight handle and telescopic pole for comfortable use and compact storage.
- **Mobility:** Equipped with 4 wheels for easy movement.
- **Triple Thermal Protection Hose:** Ensures heat insulation and safety.
- **Anti-Limescale Valve:** For easy maintenance and prolonged appliance life.
- **Integrated Hanger:** Convenient for steaming garments directly on the unit.
- **Stainless Steel Soleplate:** Enhances steaming quality for various fabrics.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Assemble the Pole:** Insert the telescopic pole into the base unit. Extend the pole to your desired height and secure it.
3. **Attach Hanger and Head Support:** Mount the multifunction hanger and the steam head support onto the top of the telescopic pole.
4. **Connect Steam Hose:** Securely attach the steam hose to the base unit and the steam head to the hose.
5. **Fill Water Tank:** Remove the 1.8L water tank from the base. Open the cap and fill it with distilled or demineralized water. Do not overfill.



Always fill the removable water tank with distilled or demineralized water.

6. **Insert Water Tank:** Place the filled water tank back into the base unit, ensuring it is seated correctly.
7. **Plug In:** Connect the power cord to a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Initial Use and Heating

1. After setup, press the power button on the base unit. The indicator light will illuminate.
2. The steamer will begin heating. It typically takes about 60 seconds to reach operating temperature.
3. Once ready, steam will start to emit continuously from the steam head.

5.2 Steaming Garments

The SteamOne H18B is suitable for a wide range of fabrics, including cotton, wool, polyester, denim, silk, linen, and muslin. It effectively eliminates wrinkles and can remove up to 99.99% of impurities.



The SteamOne H18B is effective on various fabric types, including cotton, wool, polyester, denim, silk, linen, and muslin.



Proper technique for steaming: Hold the fabric taut and move the steam head downwards.

1. Hang your garment on the integrated hanger or a suitable clothes hanger.
2. Hold the steam head with the nozzle facing the garment.
3. Gently pull the fabric taut with your free hand (use the provided heat-protective glove if necessary).
4. Move the steam head slowly downwards over the fabric, allowing the steam to penetrate and relax the fibers.
5. For stubborn wrinkles, pass the steam head over the area multiple times.
6. After steaming, allow the garment to cool and dry completely before wearing or storing.

5.3 Powering Off

Press the power button again to turn off the steamer. Unplug the appliance from the electrical outlet after use.

6. MAINTENANCE

6.1 Cleaning the Water Tank

Regularly empty and rinse the water tank to prevent residue buildup. Use only water for rinsing; do not use detergents or abrasive cleaners.

6.2 Descaling (Anti-Limescale Valve)

The SteamOne H18B is equipped with an anti-limescale valve for easy maintenance. Depending on water hardness and frequency of use, periodic descaling is recommended.

1. Ensure the steamer is unplugged and completely cool.
2. Locate the anti-limescale valve, usually at the bottom or side of the base unit.
3. Unscrew and remove the valve.
4. Rinse the valve under running water to remove any mineral deposits.
5. For thorough cleaning, soak the valve in a solution of water and white vinegar (1:1 ratio) for 30 minutes, then rinse thoroughly.
6. Reinsert and securely tighten the anti-limescale valve.

6.3 Storage

After use, ensure the water tank is empty and the appliance is cool. The telescopic pole can be collapsed for compact storage. Store the steamer in a dry, safe place.

7. TROUBLESHOOTING

If you encounter issues with your SteamOne H18B, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or weak steam output	Water tank empty; appliance not heated; mineral buildup; hose kinked.	Refill water tank; allow 60 seconds for heating; descale the appliance; straighten the hose.
Water dripping from steam head	Condensation; steam head not hot enough; mineral buildup.	Allow steamer to fully heat up; move steam head faster; descale the appliance.
Appliance not turning on	Not plugged in; power outlet malfunction.	Ensure power cord is securely plugged in; test outlet with another appliance.
Unusual noise during operation	Low water level; mineral buildup.	Refill water tank; descale the appliance.

If the problem persists after attempting these solutions, please contact SteamOne customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	H18B
Power	1800 Watts

Feature	Specification
Voltage	240 Volts
Water Tank Capacity	1.8 Liters
Steam Output	40 g/min
Heat-up Time	60 Seconds
Dimensions (L x W x H)	32 x 44 x 36 cm
Weight	7.2 Kilograms
Material	Aluminum
Color	Glossy Black

9. WARRANTY AND SUPPORT

SteamOne products are designed for durability and performance. Spare parts for the H18B model are available for up to 7 years.

For warranty claims, technical assistance, or further inquiries, please refer to the contact information provided with your purchase or visit the official SteamOne website.