

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY EN-22652A Replacement Remote Control for Hisense TVs

ECONTROLLY Remote-EN-22652A

ECONTROLLY EN-22652A Replacement Remote Control for Hisense TVs

Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the ECONTROLLY EN-22652A replacement remote control. Designed for ease of use, this remote offers a direct replacement solution for various Hisense TV models without requiring any complex programming or setup. Please read this manual thoroughly to ensure proper operation and longevity of your remote control.

PRODUCT OVERVIEW

The ECONTROLLY EN-22652A is a dedicated replacement remote control for Hisense televisions. It is designed to function immediately upon battery installation, providing access to all standard TV functions.

Compatible Hisense TV Models:

- 32A300M
- 32K20N
- 32K360
- 32K26NUS
- 50K360G
- 32K26
- 50K362
- LHD32K20NUS
- LHD32A300MUS
- LTDN42K26US
- LTDN50K360GUS
- LTDN55K362GUS
- LHD32K360US
- LTDN39K310US
- LTDN39V77NUS
- LTDN40K360US

- LTDN42A300US



Figure 1: Front view of the ECONTROLLY EN-22652A remote control, showing all buttons including power, input, number pad, navigation, volume, and channel controls.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The remote control is now ready for use. No programming or pairing is required.



Figure 2: Back view of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

OPERATING INSTRUCTIONS

Point the remote control directly at your Hisense TV's infrared sensor. Ensure there are no obstructions between the remote and the TV.

- **Power Button (● Power):** Press to turn the TV on or off.
- **Input Button (INPUT):** Cycles through available input sources (HDMI, AV, USB, VGA, Component).
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL +/-):** Adjusts the TV's volume level.
- **Channel Up/Down (CH +/-):** Changes the TV channel.
- **Mute Button (MUTE):** Mutes or unmutes the TV's audio.
- **Menu Button (MENU):** Accesses the TV's main menu for settings adjustments.
- **Navigation Buttons (Up, Down, Left, Right Arrows):** Navigate through menus and options.
- **Enter Button (ENTER):** Confirms selections in menus.
- **Exit Button (EXIT):** Exits the current menu or function.
- **Display Button (DISPLAY):** Shows current channel information or other on-screen data.
- **FAV.CH Button:** Accesses favorite channels.
- **Sleep Button (SLEEP):** Sets a sleep timer for the TV.
- **Picture Button (PICTURE):** Adjusts picture modes.
- **Sound Button (SOUND):** Adjusts sound modes.
- **Aspect Button (ASPECT):** Changes the screen aspect ratio.
- **CCD Button:** Activates Closed Captioning.
- **Time Button (TIME):** Accesses time-related settings.
- **MTS/SAP Button:** Selects Multi-channel Television Sound/Secondary Audio Program.
- **Colored Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the TV model and current menu/application.
- **Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Previous, Next):** Control media playback when using compatible input sources (e.g., USB).
- **GUIDE Button:** Accesses the electronic program guide (if available).
- **LAST Button:** Returns to the previously viewed channel.

MAINTENANCE

Battery Replacement:

When the remote control's performance degrades or it becomes unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace both batteries simultaneously with new AAA alkaline batteries.

Cleaning:

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote's electronics.

Storage:

If the remote control will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	◦ Dead or incorrectly inserted batteries. ◦ Obstruction between remote and TV. ◦ Remote is out of range.	◦ Replace batteries with new AAA alkaline batteries, ensuring correct polarity. ◦ Remove any objects blocking the line of sight to the TV's IR sensor. ◦ Move closer to the TV (within 300 meters, typically much closer for optimal performance).
Some buttons are unresponsive.	◦ Low battery power. ◦ Dirt or debris under the button.	◦ Replace batteries. ◦ Clean the remote control as described in the Maintenance section.
Remote works intermittently.	◦ Weak batteries. ◦ Interference from other electronic devices.	◦ Replace batteries. ◦ Ensure no other devices are emitting strong infrared signals towards the TV.

SPECIFICATIONS

Brand	ECONTROLLY
Model Number	Remote-EN-22652A
Compatible Devices	Hisense Televisions
Number of Buttons	20
Maximum Range	Up to 300 meters (optimal performance typically closer)
Product Dimensions (L x W x H)	17.78 x 5.08 x 1.65 cm (approximately 7 x 2 x 0.65 inches)
Product Weight	28.35 g (approximately 1 ounce)
Batteries	2 x AAA Alkaline Batteries (not included)

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the available product data. For any inquiries or support needs, please refer to the retailer or the manufacturer's official website if available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07427ZWT3>

More documents and user manuals: **<https://manuals.plus/>**