

[Manuals.plus](#) /

> [Kenwood](#) /

> Kenwood Multipro Food Processor Mini Bowl Instruction Manual for Models FP720, FP730, FP732, FP734, FP735, FP736

Kenwood FP730, FP720, FP735, FP732, FP734, FP736

Kenwood Multipro Food Processor Mini Bowl Instruction Manual

Models: FP720, FP730, FP731, FP732, FP733, FP734, FP735, FP736, FP723

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Kenwood Multipro Food Processor Mini Bowl. This accessory is designed for use with specific Kenwood Multipro food processor models to process smaller quantities of ingredients. Please read these instructions carefully before use and retain them for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the food processor is switched off and unplugged before attaching or removing the mini bowl or any other accessory.
- Do not operate the appliance if the mini bowl or its components are damaged.
- Keep hands and utensils away from moving blades during operation.
- Ensure the mini bowl is correctly assembled and locked into position on the food processor base before switching on.
- Do not overfill the mini bowl. Refer to your main food processor manual for maximum capacities.
- This accessory is intended for domestic use only.
- Exercise caution when handling sharp blades.

3. SETUP AND ASSEMBLY

Follow these steps to correctly assemble the mini bowl onto your Kenwood Multipro food processor:

1. Ensure your food processor base is unplugged and stable on a flat surface.
2. Place the mini bowl onto the food processor's drive shaft, aligning the base of the bowl with the motor unit.
3. Rotate the mini bowl clockwise until it locks securely into place. You should hear a click or feel it firmly seated.
4. Insert the appropriate blade or attachment (e.g., chopping blade) into the mini bowl, ensuring it sits correctly on the central spindle.
5. Place the lid onto the mini bowl, aligning the lid's tab with the handle of the bowl.

6. Rotate the lid clockwise until it locks into place. The food processor will not operate unless the lid is correctly secured.



Figure 1: Kenwood Multipro Mini Bowl. This image displays the clear plastic mini bowl, designed to attach to compatible Kenwood Multipro food processor bases for processing smaller food quantities.

4. OPERATING INSTRUCTIONS

Once the mini bowl is assembled, you can begin processing ingredients:

1. Prepare your ingredients: Cut larger items into smaller pieces to ensure even processing and prevent overloading.
2. Place ingredients into the mini bowl. Do not exceed the maximum fill line, if indicated, or the capacity recommended in your main food processor manual for this accessory.
3. Ensure the lid is securely locked.
4. Plug in the food processor and select the desired speed setting. For most tasks, a medium to high speed is suitable. Use the pulse function for coarse chopping or to gain more control over consistency.
5. Process until the desired consistency is achieved. Monitor the contents through the clear bowl.
6. Switch off the food processor and unplug it before removing the lid and bowl.
7. Carefully remove the blade before emptying the processed ingredients.

Tips for Best Results:

- For herbs or spices, ensure they are dry to prevent clumping.
- When processing nuts, use short pulses to avoid turning them into butter.
- For sauces or dressings, add liquids gradually through the feed tube (if available on your main lid) while the machine is running.

5. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your mini bowl:

1. Always unplug the food processor before cleaning.
2. Disassemble the mini bowl, lid, and blade.
3. Wash all removable parts (bowl, lid, blade) in warm, soapy water. Rinse thoroughly.
4. Alternatively, most parts are dishwasher safe (refer to your main food processor manual for specific instructions). Use the top rack of the dishwasher.
5. Exercise extreme caution when cleaning the blade as it is very sharp. Use a brush if necessary.

6. Dry all parts completely before reassembling or storing.
7. Do not immerse the main food processor motor unit in water. Wipe it clean with a damp cloth.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mini bowl does not fit or lock.	Incorrect model compatibility or improper alignment.	Verify your food processor model against the compatible list. Ensure the bowl is correctly aligned and rotated until it clicks into place.
Food processor does not start with mini bowl attached.	Lid or bowl not securely locked.	Ensure both the mini bowl and its lid are fully locked into their operating positions. The safety interlock prevents operation if not correctly assembled.
Ingredients not processing evenly.	Overfilling or ingredients too large.	Reduce the quantity of ingredients. Cut larger items into smaller, more uniform pieces. Use the pulse function for better control.

7. SPECIFICATIONS

- **Product Type:** Mini Bowl Accessory
- **Brand:** Kenwood
- **Material:** Plastic (Silver color as per product description)
- **Compatible Kenwood Multipro Food Processor Models:**
 - FP720 (Code: 0WFP720001)
 - FP723 (Code: 0WFP723005)
 - FP730 (Code: 0WFP730001)
 - FP731 (Code: 0WFP731001)
 - FP732 (Code: 0WFP732001)
 - FP733 (Code: 0WFP733002)
 - FP734 (Code: 0WFP734011, 0WFP734002)
 - FP735 (Code: 0WFP735005, 0WFP735009, 0WFP735010, 0WFP735002)
 - FP736 (Code: 0WFP736001)

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your main Kenwood Multipro Food Processor unit. This accessory is covered under the general warranty terms applicable to Kenwood products. For technical support or spare parts, please visit the official Kenwood website or contact your local Kenwood service center. Always provide your product model number when seeking support.

You can find more information and contact details on the official Kenwood website: www.kenwoodworld.com

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question