



Manuals.plus /

› Zook /

› Zook Rocker Boombox+ 32W Bluetooth Party Speaker Instruction Manual

Zook BoomBox Plus

Zook Rocker Boombox+

32W BLUETOOTH PARTY SPEAKER USER MANUAL

1. Important Safety Information

Please read all safety instructions carefully before using this product. Keep this manual for future reference.

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids. If liquid enters the speaker, discontinue use immediately.
- Use only the charging cable provided or a certified equivalent.
- Dispose of batteries and electronic components responsibly, following local regulations.

2. Package Contents

Verify that all items are present in the package:

- Zook Rocker Boombox+ Speaker
- Aux Cable
- Micro USB Charging Cable
- Certificate of Authenticity
- User Guide (this manual)



Image: Contents of the Zook Rocker Boombox+ package, including the speaker, cables, and documentation.

3. Product Overview

Familiarize yourself with the various parts and controls of your Zook Rocker Boombox+.



Image: Front view of the Zook Rocker Boombox+ speaker, showing the dual main drivers, dual bass radiators, and central LED display.

Top Control Panel



Image: Close-up of the top control panel, displaying buttons for Mode, Repeat/Folder, Volume, EQ, FM controls, and Auto Scan.

- **MODE Button:** Switches between Bluetooth, FM Radio, USB, TF Card, and AUX modes.
- **REPEAT/FOLDER Button:** For media playback control.
- **VOL- / VOL+ Buttons:** Adjust volume levels.
- **EQ Button:** Cycles through equalizer presets.
- **FM- / FM+ Buttons:** Navigate FM radio stations or tracks.
- **AUTO SCAN Button:** Automatically scans and saves FM radio stations.
- **LED Display:** Shows current mode, track information, or FM frequency.

Rear Ports



Image: Rear view of the Zook Rocker Boombox+ speaker, highlighting the DC 5V charging port, ON/OFF switch, TF Card slot, AUX input, and USB port.

- **DC 5V Port:** For charging the speaker.
- **ON/OFF Switch:** Powers the speaker on or off.
- **TF CARD Slot:** For playing music from a TF (MicroSD) card.
- **AUX Input:** For connecting external audio devices via a 3.5mm audio cable.
- **USB Port:** For playing music from a USB flash drive.

4. Setup

4.1 Initial Charging

1. Before first use, fully charge the speaker.
2. Connect the Micro USB charging cable to the DC 5V port on the rear of the speaker.
3. Connect the other end of the USB cable to a USB power adapter (not included) or a computer USB port.
4. The LED indicator will show charging status. Once fully charged, the indicator will change or turn off.

4.2 Powering On/Off

- To power on, slide the ON/OFF switch on the rear of the speaker to the 'ON' position.
- To power off, slide the ON/OFF switch to the 'OFF' position.

5. Operating Instructions

5.1 Bluetooth Pairing

1. Power on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the LED display.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for Bluetooth devices and select "ZOOOK Rocker Boombox+" from the list.
4. Once successfully paired, the speaker will emit a confirmation sound, and the Bluetooth icon on the display will stop flashing.
5. You can now play audio from your device through the speaker.

5.2 FM Radio Mode

1. Press the **MODE** button repeatedly until 'FM' appears on the LED display.
2. Press the **AUTO SCAN** button to automatically scan and save available FM radio stations. This may take a few minutes.
3. Once scanning is complete, use the **FM-** and **FM+** buttons to navigate between saved stations.

5.3 USB/TF Card Playback

1. Insert a USB flash drive into the USB port or a TF (MicroSD) card into the TF CARD slot on the rear of the speaker.
2. The speaker will automatically switch to USB or TF card mode and begin playing audio files (MP3 format supported).
3. Use the **FM-** and **FM+** buttons to skip tracks.
4. Use the **VOL-** and **VOL+** buttons to adjust volume.

5.4 AUX Input Mode

1. Connect one end of the 3.5mm AUX cable to the AUX input port on the rear of the speaker.
2. Connect the other end of the AUX cable to the audio output jack of your external device (e.g., MP3 player, laptop).
3. Press the **MODE** button repeatedly until 'AUX' appears on the LED display.
4. Audio from your connected device will now play through the speaker. Control playback from your external device.

5.5 Hands-free Calling

When connected via Bluetooth to a smartphone:

- **Answering a Call:** Press the **PLAY/PAUSE** button (often integrated with the Mode button or a dedicated call button, refer to specific button icons if available) to answer an incoming call.
- **Ending a Call:** Press the **PLAY/PAUSE** button again to end the call.
- **Rejecting a Call:** Press and hold the **PLAY/PAUSE** button to reject an incoming call.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or

solvents.

- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

7. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or depleted.	Charge the speaker fully.
No sound.	Volume is too low; Incorrect mode selected; Device not connected properly.	Increase volume on speaker and connected device; Press MODE button to select correct input; Re-pair Bluetooth or re-connect AUX cable.
Bluetooth pairing fails.	Speaker is not in pairing mode; Device Bluetooth is off; Speaker is too far from device.	Ensure speaker is in Bluetooth mode (flashing icon); Turn on Bluetooth on your device; Move speaker closer to device (within 10 meters).
FM radio reception is poor.	Weak signal; Interference.	Relocate the speaker to an area with better reception; Extend the antenna if available (not explicitly mentioned for this model, but common for boomboxes).

8. Specifications

Feature	Detail
Model Name	Thunder Series
Output Power	32 Watts (Dual 15W drivers with two 1W bass radiators)
Bluetooth Version	Bluetooth 4.2
Bluetooth Frequency	2.4G
Max Transmission Distance	More than 10 meters
Battery Type	Lithium Ion (1 included)
Battery Backup	More than 9 hours (playing time)
Power Source	DC
Connectivity	Auxiliary, Bluetooth, USB
Supported Audio Formats	MP3
Product Dimensions (LxWxH)	39 x 16 x 19 cm
Item Weight	2.46 kg
Special Features	FM Radio, LCD Display, Hands-free Calling, Bass/Treble Controls

9. Warranty and Support

The Zook Rocker Boombox+ comes with a **1 Year Warranty** from the date of purchase.

For warranty claims, technical support, or any inquiries regarding your product, please contact Zook customer service or visit their official website. Keep your purchase receipt as proof of purchase for warranty validation.

Manufacturer: Intellegent Technologies Traders Limited

Importer: Fortune Marketing Pvt Ltd