

Hobart FP100-1B

Hobart FP100-1B Food Processor Instruction Manual

Model: FP100-1B

INTRODUCTION

Thank you for choosing the Hobart FP100-1B Food Processor. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions thoroughly before initial use and retain them for future reference.

Important Safety Information

- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Avoid contact with moving parts. Keep hands and utensils away from the cutting blades during operation to prevent injury.
- Do not operate the food processor with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Ensure all parts are correctly assembled before operating the unit.
- This appliance is for commercial use. Do not use outdoors.
- Do not immerse the motor base in water or other liquids.
- Use only attachments recommended or sold by the manufacturer.

SETUP

Unpacking and Inspection

Carefully remove all components from the packaging. Inspect the food processor and its accessories for any signs of damage during transit. If any damage is found, do not operate the unit and contact your supplier immediately.

Assembly

1. Place the motor base on a stable, flat, and dry surface.
2. Carefully place the processing bowl onto the motor base, aligning the tabs and rotating until it locks securely into place.
3. Insert the desired blade or disc onto the drive shaft inside the processing bowl. Ensure it is seated firmly.

4. Place the lid onto the processing bowl, aligning the tabs and rotating until it locks securely. The unit will not operate unless the lid is properly locked.
5. Insert the food pusher into the feed tube on the lid.

Power Connection

Before plugging in, ensure the voltage indicated on the appliance matches your local power supply. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Basic Operation

1. Ensure the food processor is properly assembled and plugged in.
2. Prepare ingredients by cutting them into appropriate sizes to fit the feed tube.
3. For chopping or mixing, add ingredients directly into the processing bowl. For slicing or shredding, place ingredients into the feed tube.
4. Select the desired speed setting (if applicable) or press the 'ON' button.
5. If using the feed tube, gently push ingredients down with the food pusher. **Never use your hands or other utensils.**
6. Process until the desired consistency is achieved.
7. Press the 'OFF' button or turn the speed dial to 'OFF' to stop the appliance.
8. Unplug the unit before disassembling and removing processed food.

Processing Tips

- For best results, process similar-sized pieces of food.
- Do not overload the processing bowl. Process in batches if necessary.
- For even chopping, use the pulse function.
- When processing liquids, ensure the bowl is not filled above the maximum liquid level indicator.

MAINTENANCE

Cleaning

Regular cleaning ensures optimal performance and extends the life of your food processor. Always unplug the unit before cleaning.

1. Disassemble all removable parts: lid, food pusher, processing bowl, and blades/discs.
2. **Product Care Instructions: Hand Wash.** Wash all removable parts in warm, soapy water. Rinse thoroughly and dry immediately. Exercise extreme caution when handling sharp blades.
3. Wipe the motor base with a damp cloth. Never immerse the motor base in water or place it under running water.
4. Ensure all parts are completely dry before reassembling or storing.

Storage

Store the assembled food processor in a clean, dry place, away from direct sunlight and extreme temperatures.

Ensure blades are stored safely to prevent accidental injury.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	<ul style="list-style-type: none">• Not plugged in.• Lid or bowl not properly locked.• Power outage.	<ul style="list-style-type: none">• Ensure power cord is securely plugged into a working outlet.• Check that the bowl and lid are correctly assembled and locked.• Verify power supply to the outlet.
Food not processing correctly.	<ul style="list-style-type: none">• Overloaded bowl.• Incorrect blade/disc used.• Ingredients too large.	<ul style="list-style-type: none">• Reduce the amount of food in the bowl and process in smaller batches.• Ensure the correct blade or disc is installed for the task.• Cut ingredients into smaller, uniform pieces.
Motor stops during operation.	<ul style="list-style-type: none">• Overheating due to prolonged use or overload.	<ul style="list-style-type: none">• Turn off and unplug the unit. Allow it to cool down for at least 30 minutes before restarting. Reduce load for future operations.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

Model: FP100-1B

Brand: Hobart

Product Dimensions: 16.69 x 8.81 x 19.5 inches

Item Weight: 42 pounds

Wattage: 950 watts

Material: Aluminum

Product Care Instructions: Hand Wash

WARRANTY AND SUPPORT

Warranty Information

Hobart products are manufactured to high-quality standards. For specific warranty terms and conditions applicable to your FP100-1B Food Processor, please refer to the warranty card included with your purchase or visit the official Hobart website. Keep your proof of purchase for warranty claims.

Customer Support

Should you require assistance with your Hobart FP100-1B Food Processor, have questions about its operation, or need to report a service issue, please contact Hobart customer support. Contact details can typically be found on

the official Hobart website or in your product packaging.

When contacting support, please have your model number (FP100-1B) and serial number (if applicable) ready.