

Manuals.plus /

› Kenwood /

› Kenwood Multipro Food Processor Juicer Accessory Instruction Manual

Kenwood FDM30, FDM300, FDM31, FPM264, FPP234

Kenwood Multipro Food Processor Juicer Accessory Instruction Manual

Models: FDM30, FDM300, FDM31, FPM264, FPP234

Brand: Kenwood

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your Kenwood Multipro Food Processor Juicer Accessory. This accessory is designed to extract juice from citrus fruits, enhancing the versatility of your compatible Kenwood Multipro food processor.

2. COMPATIBILITY

This juicer accessory is compatible with the following Kenwood Multipro food processor models:

- FDM30
- FDM300
- FDM31
- FPM264
- FPP234

Ensure your food processor model is listed above for proper fit and function. Refer to your food processor's main instruction manual for specific attachment points.

3. PARTS LIST

The Kenwood Multipro Juicer Accessory consists of the following main components:

- **Reamer:** The conical part used to press and extract juice from citrus fruits.
- **Sieve/Juice Bowl:** The bowl with integrated filter that collects the juice and separates pulp and seeds.



Image 1: The reamer and sieve components of the juicer accessory shown separately.



Image 2: Top view of the juicer accessory with the reamer placed onto the sieve, ready for use.



Image 3: Bottom view of the sieve component, showing the attachment mechanism.



Image 4: Side view of the sieve component, highlighting its depth and design.



Image 5: Another top-down view of the fully assembled juicer accessory.

4. SETUP AND ASSEMBLY

1. **Assemble the Juicer:** Place the reamer onto the central spindle of the sieve/juice bowl. Ensure it is

securely seated.

2. **Attach to Food Processor:** Refer to your specific Kenwood Multipro food processor manual for instructions on attaching accessories to the high-speed or low-speed outlet, depending on your model. Typically, the juicer accessory will fit onto the main drive shaft in the bowl.
3. **Position for Use:** Ensure the food processor is on a stable, flat surface and switched off before attaching the accessory.

5. OPERATING INSTRUCTIONS

1. **Prepare Fruit:** Cut citrus fruits (e.g., oranges, lemons, grapefruits) in half.
2. **Start Processor:** Switch on your Kenwood Multipro food processor to a low to medium speed setting.
3. **Juice Extraction:** Take one half of a prepared fruit and firmly press it down onto the rotating reamer. The juice will flow through the sieve into the collection area, while pulp and seeds are retained.
4. **Continue Juicing:** Repeat with remaining fruit halves until all desired juice is extracted.
5. **Switch Off:** Once finished, switch off the food processor and wait for the reamer to stop rotating completely before removing the accessory.

Safety Precautions:

- Always ensure the food processor is switched off and unplugged before assembling, disassembling, or cleaning the accessory.
- Do not use excessive force when pressing fruit onto the reamer.
- Keep hands and utensils away from moving parts during operation.
- This accessory is designed for citrus fruits only. Do not attempt to juice other types of produce.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your juicer accessory.

1. **Disassemble:** After use, switch off and unplug the food processor. Carefully remove the juicer accessory from the food processor. Separate the reamer from the sieve/juice bowl.
2. **Rinse Immediately:** Rinse all parts under warm running water to remove pulp and juice residue.
3. **Hand Wash:** Wash the reamer and sieve/juice bowl with warm, soapy water. Use a brush if necessary to clean the sieve holes thoroughly.
4. **Important:** This accessory is **NOT** dishwasher safe. Hand washing is required to prevent damage.
5. **Dry:** Dry all parts thoroughly with a soft cloth or allow them to air dry completely before storing.
6. **Storage:** Store the clean, dry accessory in a safe place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

- **Accessory does not fit:** Ensure your food processor model is listed in the compatibility section. Double-check that the accessory is aligned correctly with the drive shaft or attachment point.
- **Poor juice extraction:** Ensure the food processor is running at an appropriate speed. Apply firm, but not excessive, pressure to the fruit. Ensure the fruit is cut in half properly.
- **Juice leaking:** Check that the accessory is correctly assembled and securely attached to the food

processor.

- **Accessory is difficult to clean:** Clean immediately after use to prevent pulp from drying and sticking. Use a small brush for stubborn residue in the sieve.

8. SPECIFICATIONS

Feature	Specification
Brand	Kenwood
Color	Black / Grey
Special Feature	Compatible with Kenwood Multipro food processors
Finish Type	Painted (Plastic)
Blade Material (Reamer)	Plastic (with potential internal metal components in food processor drive)
Dishwasher Safe	No
Item Weight	7 ounces (approximately 198 grams)
Material	Plastic

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the documentation provided with your main Kenwood Multipro food processor or visit the official Kenwood website. Keep your proof of purchase for any warranty claims.

You can find more information and contact details on the official Kenwood website: www.kenwoodworld.com