

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ford](#) /

› [2016 Ford Fusion Owner's Manual](#)

## Ford 2016 Fusion

# 2016 Ford Fusion Owner's Manual

Your comprehensive guide to operating and maintaining your vehicle.

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your 2016 Ford Fusion. It covers features, controls, maintenance schedules, and troubleshooting tips. Please read this manual thoroughly to familiarize yourself with your vehicle's capabilities and to ensure a safe driving experience.

## 2016 FUSION Owner's Manual

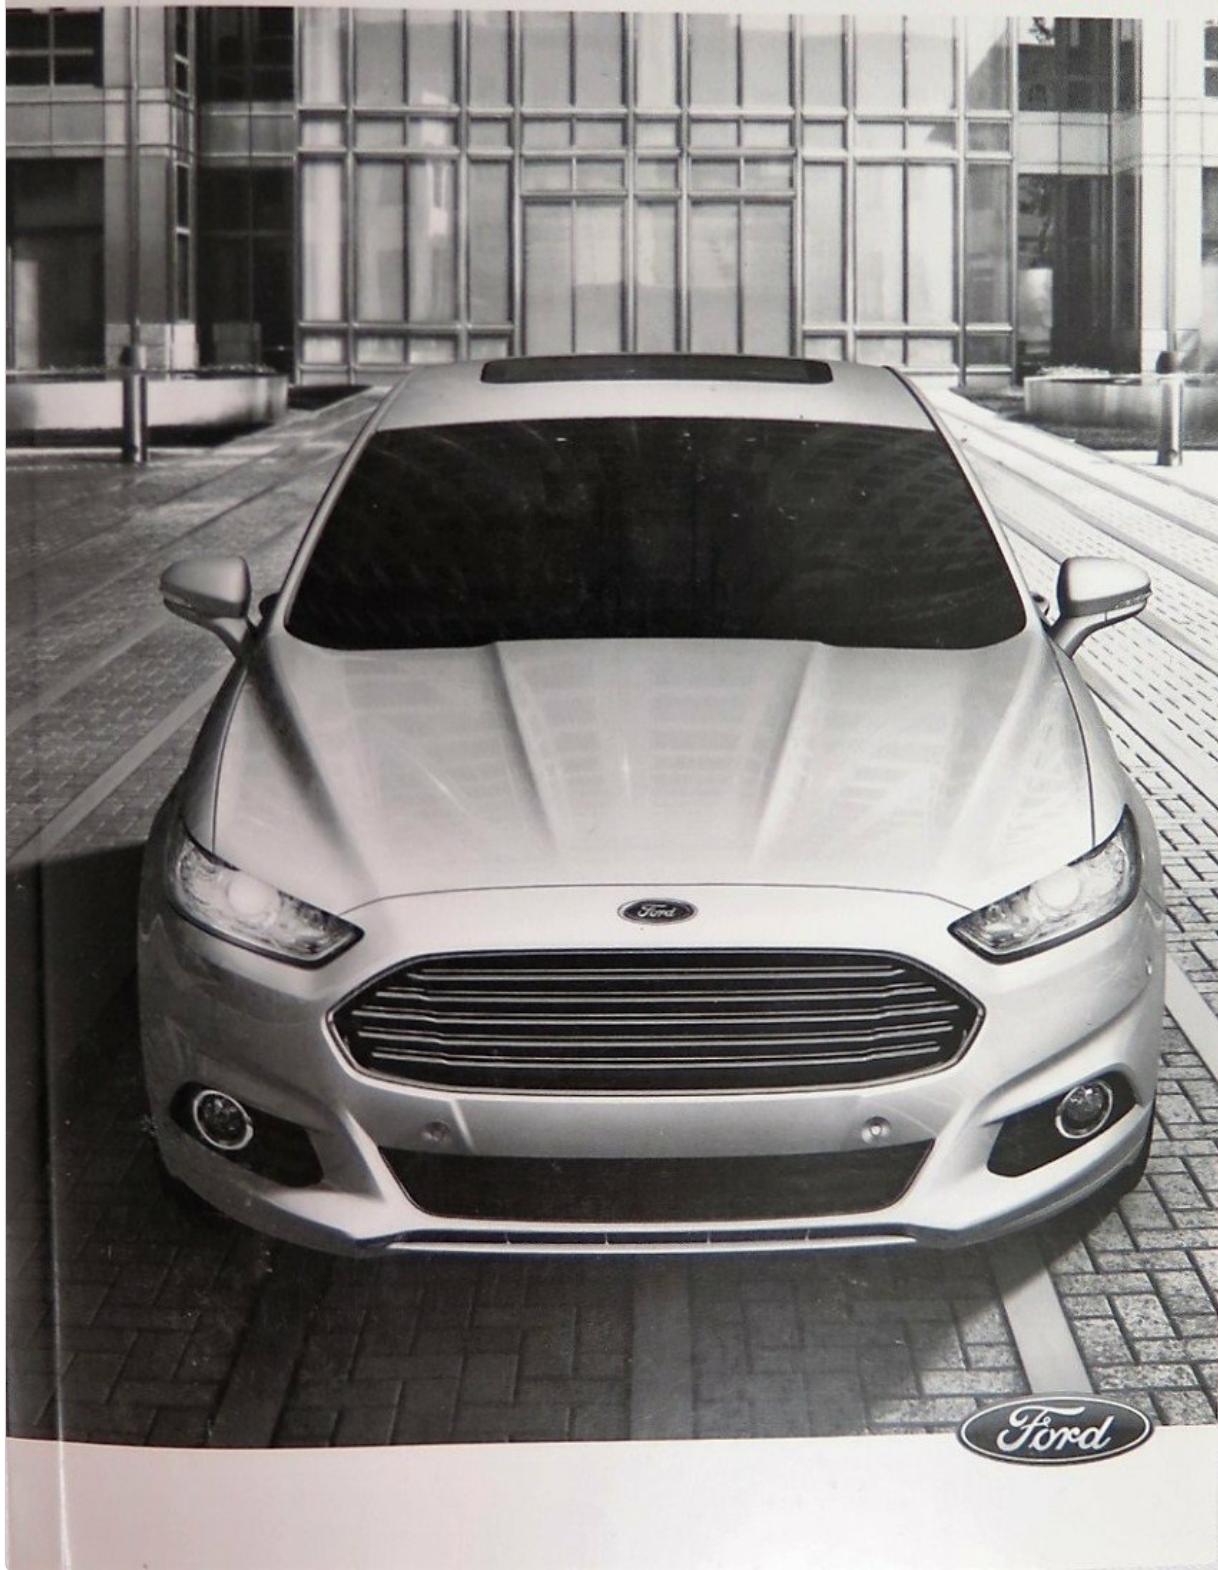


Image: Front cover of the 2016 Ford Fusion Owner's Manual. This image displays the official manual for the vehicle, indicating its year and model.

### INITIAL SETUP AND FAMILIARIZATION

Before driving your Ford Fusion, it is important to adjust the vehicle to your preferences and understand its basic controls.

## Seat and Steering Wheel Adjustment

- **Seat Position:** Locate the levers or buttons on the side of your seat to adjust its forward/backward position, height, and recline angle. Ensure you can comfortably reach the pedals and steering wheel.
- **Steering Wheel:** Use the lever located under the steering column to adjust the steering wheel's tilt and telescope position. Lock it in place once adjusted.

## Mirror Adjustment

- **Side Mirrors:** Use the control knob or joystick on the driver's door panel to adjust the left and right side mirrors. Position them to provide a clear view of the road behind and to the sides of your vehicle.
- **Rearview Mirror:** Manually adjust the interior rearview mirror for a clear view directly behind your vehicle.

## Infotainment System Basics

Your Ford Fusion is equipped with an advanced infotainment system. Refer to the dedicated section in the full manual for detailed instructions on connecting your smartphone, navigating media, and using voice commands.

# OPERATING YOUR FORD FUSION

---

This section covers the fundamental aspects of driving and utilizing your vehicle's features.

## Starting and Stopping the Engine

- **Key Start:** Insert the key into the ignition and turn it to the START position. Release the key once the engine starts.
- **Push-Button Start:** With the key fob inside the vehicle, press the brake pedal and then press the ENGINE START/STOP button.
- **Stopping:** Shift the transmission to Park (P) and turn the key to the OFF position or press the ENGINE START/STOP button.

## Transmission Operation

The automatic transmission features Park (P), Reverse (R), Neutral (N), Drive (D), and Low (L) or Sport (S) modes. Always ensure the vehicle is fully stopped before shifting between P, R, and D.

## Lighting Controls

The headlamp control knob is typically located on the dashboard to the left of the steering wheel. Settings include OFF, Parking Lamps, Headlamps (manual on), and Auto (automatic headlamp activation based on ambient light).

## Climate Control System

Adjust temperature, fan speed, and air distribution using the controls on the center console. The system may include automatic climate control for maintaining a set temperature.

# MAINTENANCE AND CARE

---

Regular maintenance is crucial for the longevity and performance of your 2016 Ford Fusion.

## Scheduled Maintenance

Refer to your vehicle's maintenance schedule for recommended service intervals, including oil changes, tire rotations, and filter replacements. Adhering to this schedule helps ensure optimal vehicle health.

### Fluid Checks

- **Engine Oil:** Check oil level regularly using the dipstick. Add oil if necessary, ensuring it meets Ford specifications.
- **Coolant:** Verify coolant level in the reservoir when the engine is cool.
- **Brake Fluid:** Ensure brake fluid is between MIN and MAX marks.
- **Windshield Washer Fluid:** Keep the reservoir filled for clear visibility.

### Tire Care

- **Tire Pressure:** Maintain correct tire pressure as specified on the driver's side door jamb placard. Check monthly.
- **Tire Rotation:** Rotate tires every 5,000 to 7,500 miles to promote even wear.
- **Tread Depth:** Inspect tire tread for wear indicators. Replace tires when tread depth is insufficient.

## TROUBLESHOOTING COMMON ISSUES

---

This section provides guidance for addressing minor issues you might encounter with your Ford Fusion.

### Warning Lights

If a warning light illuminates on your dashboard, consult the full owner's manual for its specific meaning and recommended action. Common lights include engine oil pressure, battery charge, brake system, and tire pressure monitoring system (TPMS).

### Engine Not Starting

- **Battery:** Check battery terminals for corrosion and ensure they are tight. A weak or dead battery is a common cause.
- **Fuel:** Verify there is sufficient fuel in the tank.
- **Immobilizer:** Ensure you are using the correct key or key fob.

### Flat Tire

If you experience a flat tire, safely pull over to a level area away from traffic. Refer to the manual for instructions on using the spare tire and jack, or contact roadside assistance.

## SPECIFICATIONS

---

Key technical specifications for the 2016 Ford Fusion (may vary by trim level and options).

Category	Detail
Model Year	2016
Vehicle Type	Mid-size Sedan

Category	Detail
<b>Engine Options</b>	2.5L I4, 1.5L EcoBoost I4, 2.0L EcoBoost I4, Hybrid, Energi Plug-in Hybrid
<b>Transmission</b>	6-speed automatic (most models), eCVT (Hybrid/Energi)
<b>Fuel Capacity</b>	Approximately 16.5 gallons (62.5 liters) for gasoline models
<b>Tire Size (Standard)</b>	Varies by trim (e.g., 215/60R16, 235/50R17, 235/45R18)
<b>Curb Weight</b>	Approximately 3,430 - 3,700 lbs (1,556 - 1,678 kg)

*Note: Specific specifications may vary based on trim level, engine, and optional equipment. Always refer to your vehicle's specific documentation for precise details.*

## **WARRANTY AND SUPPORT**

---

Your 2016 Ford Fusion is covered by a limited warranty. For detailed information regarding warranty coverage, terms, and conditions, please refer to your Warranty Guide provided with your vehicle or visit the official Ford owner website.

### **Official Ford Resources**

- **Ford Owner Website (USA):** For comprehensive vehicle information, service schedules, and support, visit [owner.ford.com](http://owner.ford.com).
- **Ford Canada Website:** For Canadian owners, visit [ford.ca](http://ford.ca) for local support and resources.


For immediate assistance or to locate an authorized Ford service center, please contact your local Ford dealership.



fordowner.com



ford.ca

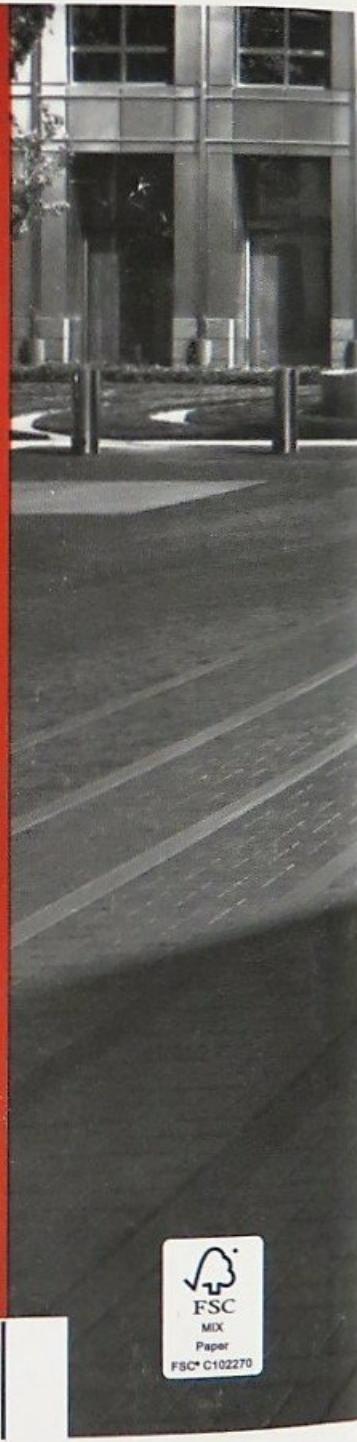

January 2016

Second Printing

Owner's Manual

Fusion

Litho in U.S.A.



GE5J19A321AA

Image: Back cover of the 2016 Ford Fusion Owner's Manual. This image displays QR codes and web addresses for Ford owner resources, along with the manual's publication details and part number GE5J 19A321 AA.

Publication Date: January 2016 (Second Printing)

Part Number: GE5J 19A321 AA

Litho in U.S.A.

