

PARADOX K32LCD+

Paradox K32LCD+ Alphanumeric LCD Keypad

USER MANUAL

1. Introduction

The Paradox K32LCD+ is an advanced alphanumeric LCD keypad designed for use with Paradox alarm systems. It features a high-visibility blue backlit display, providing clear information and easy interaction with your security system.

Key features include a 2-line, 16-character display, programmable key protection, adjustable brightness, contrast, and text scroll speed. It connects via a bus system, supporting up to 15 keypads, and includes one zone input. The K32LCD+ is compatible with Paradox SP4000 and SP65 control panels (version 4.90 or higher), as well as MAGELLAN MG5000/MG5050 alarm centers.

2. Setup and Installation

Before installation, ensure the control panel is powered off. Connect the K32LCD+ keypad to the system bus. The keypad supports a maximum of 15 keypads on the bus. It also features one dedicated zone input for connecting a security device directly to the keypad.

For optimal performance, the keypad's firmware can be upgraded locally using the 307USB interface and WinLoad software. Refer to the WinLoad software manual for detailed instructions on firmware updates.



Figure 2.1: Paradox K32LCD+ Keypad. This image displays the main K32LCD+ keypad with its blue alphanumeric LCD screen, showing "AREA 1 ARMED". A smaller, similar keypad is positioned to the right, illustrating the compact design.

3. Operating Instructions

The K32LCD+ keypad provides a user-friendly interface for managing your alarm system. Its menu-driven system simplifies programming and daily operations.

3.1 Display and Navigation

- **Alphanumeric LCD:** The 2-line, 16-character blue backlit display shows system status, prompts, and menu options.
- **Adjustable Display Settings:** Brightness, contrast, and text scroll speed can be adjusted to suit user preference.
- **Menu-Driven Interface:** Navigate through menus using the arrow keys to access programming and user functions.

3.2 Keypad Functions

- **Programmable Key Protection:** Configure settings to prevent unauthorized key presses.
- **StayD Mode LED Indicator:** A dedicated LED indicates the status of the StayD operating mode.
- **Audible Zone Notification:** Independent programming allows for distinct audible notifications for different zones.
- **Direct Access Keys:** Eight dedicated keys provide quick access to frequently used functions.
- **Alarm Trigger Keys:** Three dedicated keys are available for triggering emergency alarms (e.g., Panic, Fire, Medical).

4. Maintenance

To ensure the longevity and proper functioning of your Paradox K32LCD+ keypad, follow these simple maintenance guidelines:

- **Cleaning:** Gently wipe the keypad and display with a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays, as these can damage the surface or internal components.
- **Environment:** Keep the keypad in a dry environment, away from direct sunlight, extreme temperatures, and high humidity.

- **Power:** Do not attempt to open the keypad or perform any internal repairs. All servicing should be performed by qualified personnel.

5. Troubleshooting

This section provides solutions to common issues you might encounter with your K32LCD+ keypad. If the problem persists, contact technical support.

Problem	Possible Cause	Solution
Display is blank or dim.	No power, loose connection, brightness setting too low.	Check power supply to the control panel. Ensure bus wiring is secure. Adjust display brightness and contrast settings via the keypad menu.
Keypad not responding to key presses.	Keypad frozen, connection issue, programmable key protection active.	Try power cycling the control panel. Verify bus connections. Check if key protection settings are enabled and disable if necessary.
Incorrect system status displayed.	Communication error with control panel, outdated firmware.	Verify bus wiring integrity. Ensure the control panel is functioning correctly. Consider updating keypad firmware if available.

6. Specifications




- **Model:** K32LCD+
- **Display:** Alphanumeric LCD, 2 lines x 16 characters, blue backlight, high visibility
- **Connectivity:** Bus connection (max. 15 keypads), 1 zone input
- **Compatibility:**
 - Paradox SP4000 and SP65 control panels (version 4.90 or higher)
 - MAGELLAN MG5000/MG5050 alarm centers
- **Features:**
 - Firmware upgradeable locally via 307USB interface and WinLoad software
 - Menu-driven programming and user interface
 - LED indicator for StayD operating mode
 - Audible zone notification with independent programming
 - 8 direct access keys
 - 3 alarm trigger keys
- **Compliance:** EN50131 Level 2
- **Batteries:** Not required, not included
- **Manufacturer:** PARADOX
- **First Available Date:** July 25, 2017

7. Warranty and Support

Paradox products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your product or visit the official Paradox website. Keep your purchase receipt as proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact your authorized Paradox dealer or the Paradox customer support team. Contact details can typically be found on the manufacturer's website or through your point of purchase.

Related Documents - K32LCD+

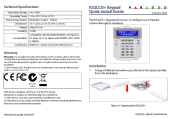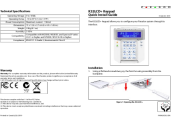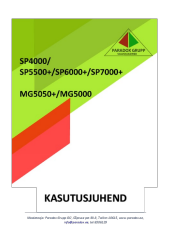
	Paradox K32LCD+ Keypad Quick Install Guide Installation and configuration guide for the Paradox K32LCD+ security keypad, covering technical specifications, warranty, FCC compliance, and step-by-step setup.
	Paradox K32LCD+ Keypad Quick Install Guide - Installation and Specifications Concise guide to installing and configuring the Paradox K32LCD+ Keypad, including technical specifications, warranty, and compatibility details for Paradox security systems.
	Paradox K32LCD+ and K10V Keypad User Manual Comprehensive user manual for Paradox K32LCD+ and K10V alarm system keypads, detailing arming, disarming, user code management, error codes, zone bypass, chime settings, and quick menu functions.
	Paradox Magellan and Spectra SP User Guide Comprehensive user guide for Paradox Magellan and Spectra SP alarm systems, covering setup, operation, features like StayD, remote controls, communication options, and troubleshooting.
	Paradox Spectra and Magellan Security System User Guide Comprehensive user guide for Paradox Spectra and Magellan alarm systems, covering operation, features, programming, and troubleshooting for models like MG5000, MG5050, SP65, SP4000, SP5500, SP6000, and SP7000.
	Paradox Magellan & Spectra SP Installation Guide Comprehensive installation guide for Paradox Magellan and Spectra SP series wireless and expandable security systems, covering models like MG5075, MG5050, SP4000, and SP7000. Includes setup, programming, and specifications.



[Paradox PCS250 GPRS/GSM Communicator Module: Reference and Installation Manual](#)

This comprehensive manual details the installation, configuration, and operation of the Paradox PCS250 GPRS/GSM Communicator Module. Learn about its features, connectivity options, SMS reporting capabilities, and compatibility with Paradox security systems.

 lang:en score:45 filesize: 692.04 K page_count: 44 document date: 2012-07-04

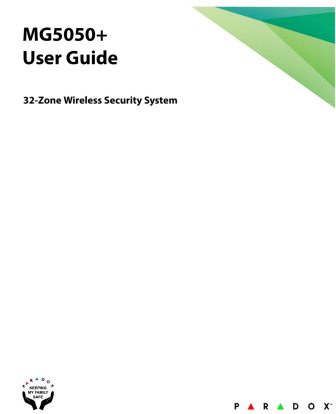


[\[pdf\] User Manual Guide Warranty](#)

MG5050 User Guide Paradox PDX Manualcsd au ts1690177961 attachments ProductAttachmentGroup 4 Manual |||

MG5050 User Guide 32-Zone Wireless Security System Warranty For complete warranty information on ... Overview

.....12 **K32LCD** Keypad Overview
.....

 
lang:en score:45 filesize: 1.91 M page_count: 28 document date: 2022-02-24

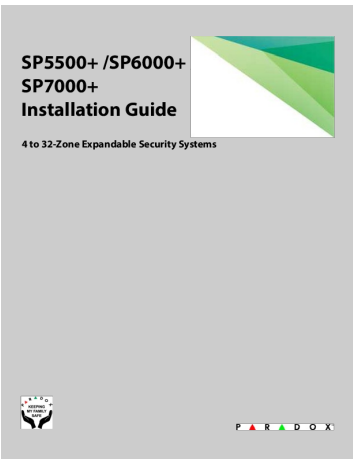

[Paradox SP5500+/SP6000+/SP7000+ Installation Guide for Expandable Security Systems](#)

Detailed installation guide for Paradox SP5500+, SP6000+, and SP7000+ expandable security systems. Covers features, specifications, wiring, programming, and user operation for reliable security system setup.

 lang:en score:44 filesize: 2.68 M page_count: 64 document date: 2022-08-09

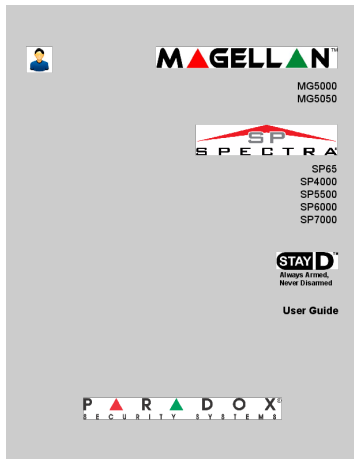


[\[pdf\] User Manual Guide Warranty](#)

MGSP User Guide English EU14 Paradox Magellan Spectra Manual wilsonsecurity ca themes WSL files

|||

 
MG5000 MG5050 SP65 SP4000 SP5500 SP6000 SP7000 Always Armed, Never Disarmed User Guide Warranty Fo ... display ON = Alarm s occurred page 17 BYP Bypass programming ON = Zone s bypassed page 17 **K32LCD** Keypad Overview Off Key: ON = Disarmed OFF = System armed Light AC : ON = Power on OFF = P... lang:en score:43 filesize: 700.72 K page_count: 32 document date: 2011-04-07

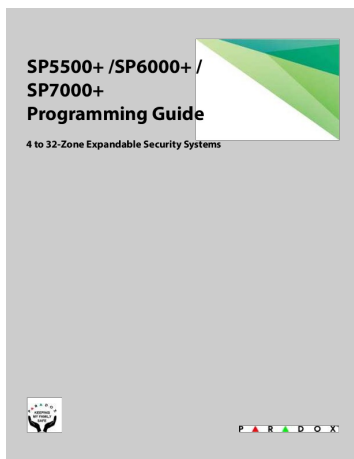

[SP5500+/SP6000+/SP7000+ Programming Guide](#)

A comprehensive programming guide for Paradox SP+ Series expandable security systems, covering setup, configuration, and advanced features for the SP5500+, SP6000+, and SP7000+ models.

 
lang:en score:43 filesize: 1.47 M page_count: 68 document date: 2022-08-09

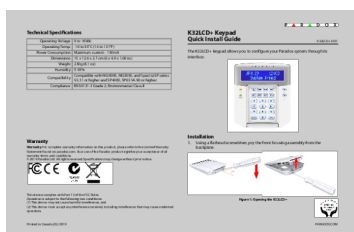

[Paradox K32LCD+ Keypad Quick Install Guide - Installation and Specifications](#)

Concise guide to installing and configuring the Paradox K32LCD+ Keypad, including technical specifications, warranty, and compatibility details for Paradox security systems.

 
lang:en score:43 filesize: 313.97 K page_count: 2 document date: 2019-02-20

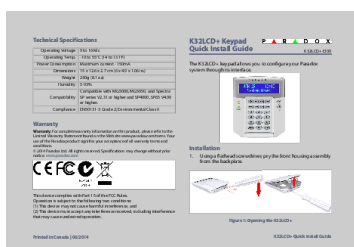

[Paradox K32LCD+ Keypad Quick Install Guide](#)

Installation and configuration guide for the Paradox K32LCD+ security keypad, covering technical specifications, warranty, FCC compliance, and step-by-step setup.

 
lang:en score:42 filesize: 213.54 K page_count: 2 document date: 2014-06-03

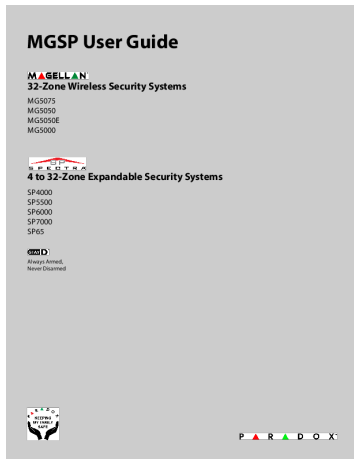

[MGSP User Guide - Magellan and Spectra Alarm Systems](#)

Comprehensive user guide for Paradox Magellan and Spectra series wireless security systems, detailing installation, configuration, operation, and advanced features.

 lang:en score:42 filesize: 2.22 M page_count: 32 document date: 2019-12-19

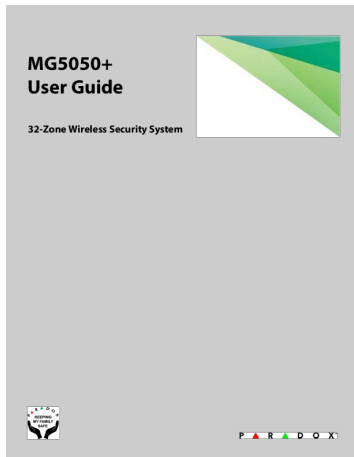

[Paradox MG5050+ User Guide: 32-Zone Wireless Security System](#)

Comprehensive user guide for the Paradox MG5050+ 32-Zone Wireless Security System. This guide covers system setup, user management, zone configuration, arming and disarming procedures, alarm handling, keypad and remote control operations, communication features via IP and SMS, and advanced system settings.

lang:en score:42 filesize: 1.93 M page_count: 28 document date: 2022-07-13




[\[pdf\] Guide Warranty](#)

MGSP EU15 fm User Guide paradox mg5050 bloemsec co za manuals Bloemsec Guide English

Magellan and Spectra are trademarks or registered of Paradox Your security system supports three types remote controls the REM1 REM2 REM3 and MG5050 32 Zone Wireless Alarm Panel TremTech Electrical Systems En store tremtech content |||

MG5000 MG5050 SP65 SP4000 SP5500 SP6000 SP7000 Always Armed, Never Disarmed User Guide Warranty Fo ... 0V, K10H and K636: Press hold the zone key 1 to 0 10 . Accept beep = chime on. For K32LCD, **K32LCD** : Press and hold the key. Press 1 to select which zone to chime or press 2 to configu...

 lang:en score:40 filesize: 608.88 K page_count: 30 document date: 2015-01-11

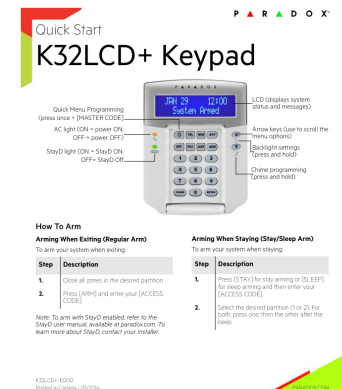


[\[pdf\]](#) User Manual Reference Guide Guide

K32LCD Quick Start Reference GuideParadox Keypad 32 Zone Hardwired LCD PDX

CustomLinkParadox Guidedcdn shopify s files 1 0646 0555 2846 Paradox Guide v 1737405401 |||

Quick Start **K32LCD** Keypad Quick Menu Programming press once MASTER CODE
AC light ON = power ON; OFF = power OFF StayD light ON = StayD ON; OFF= StayD Off LCD displays system status and messages Arrow keys use to scroll the menu options Backlight settings press and hold Chime program...

 lang:en **score:39** filesize: 121.88 K page_count: 2 document date: 2014-06-02

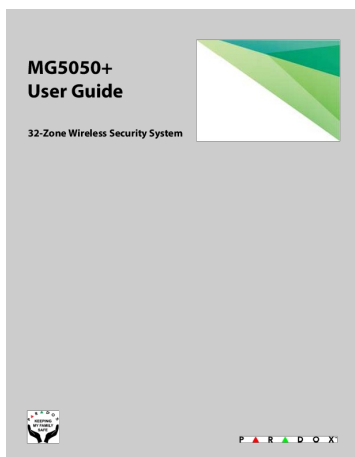

[\[pdf\]](#) User Manual Guide Warranty

MG5050 User Guide Paradox 30 giu 2022 — alarm equipment was designed to work effectively around traditional telephone systems For those customers who are using a panel powerbizt hu documents manual Optex |||

MG5050 User Guide 32-Zone Wireless Security System Warranty For complete warranty information on ... Overview

.....12 **K32LCD** Keypad Overview

 
lang:en **score:38** filesize: 1.91 M page_count: 28 document date: 2022-02-24



[Paradox K32LCD+ Keypad Quick Start Guide](#)

A concise guide to the Paradox K32LCD+ keypad, covering arming, disarming, panic buttons, alarm memory, and zone bypassing. Includes instructions for normal arming, stay arming, and system disarming.


lang:es **score:38** filesize: 193.67 K page_count: 2 document date: 2019-08-28

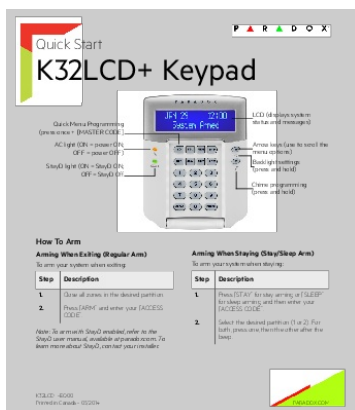

[Paradox K32LCD+ Keypad Quick Start Guide](#)

A quick start guide for the Paradox K32LCD+ Keypad, covering arming, disarming, panic keys, alarm memory, trouble display, and bypassing zones.

 
lang:en **score:37** filesize: 121.88 K page_count: 2 document date: 2014-06-02

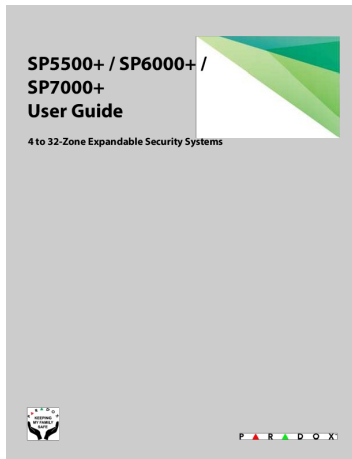

[SP5500+/SP6000+/SP7000+ User Guide: 4 to 32-Zone Expandable Security Systems](#)

Comprehensive user guide for Paradox SP+ Series security systems, covering installation, operation, features, and troubleshooting for models SP5500+, SP6000+, and SP7000+. Learn about zone settings, user codes, arming/disarming, remote controls, and advanced system features.

 
lang:en score:37 filesize: 1.49 M page_count: 28 document date: 2022-08-09

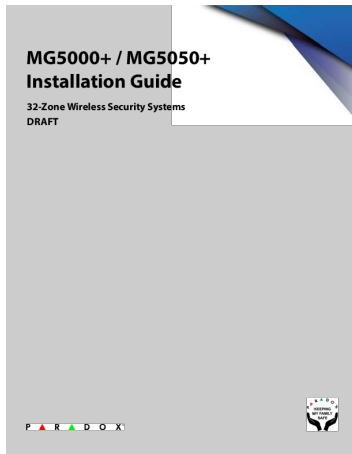

[Paradox MG5000+ / MG5050+ Installation Guide](#)

Comprehensive installation guide for Paradox MG5000+ and MG5050+ wireless security systems, detailing setup, programming, features, and troubleshooting for installers.

 
lang:en score:37 filesize: 2.13 M page_count: 55 document date: 2021-12-20

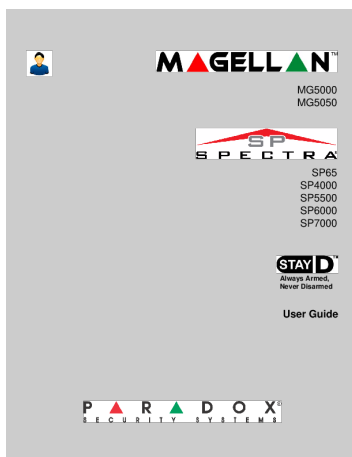

[Paradox Spectra and Magellan Security System User Guide](#)

Comprehensive user guide for Paradox Spectra and Magellan alarm systems, covering operation, features, programming, and troubleshooting for models like MG5000, MG5050, SP65, SP4000, SP5500, SP6000, and SP7000.

 lang:en score:37 filesize: 518.48 K page_count: 32 document date: 2014-09-22

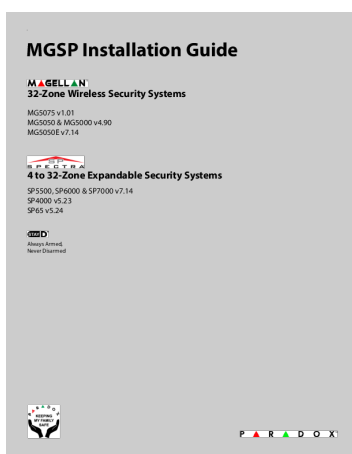

[Paradox Magellan & Spectra SP Installation Guide](#)

Comprehensive installation guide for Paradox Magellan and Spectra SP series wireless and expandable security systems, covering models like MG5075, MG5050, SP4000, and SP7000. Includes setup, programming, and specifications.

 
lang:en score:36 filesize: 4.39 M page_count: 71 document date: 2020-08-23



[Paradox Magellan and Spectra SP Security System Programming Guide](#)

Detailed programming guide for Paradox Magellan and Spectra SP security systems. Covers system setup, zone configuration, wireless devices, and advanced features for MG5000, MG5050, SP5500, SP6000, SP7000 models. Includes UL/ULC compliance information.

lang:en score:35 filesize: 2 M page_count: 76 document date: 2009-06-11

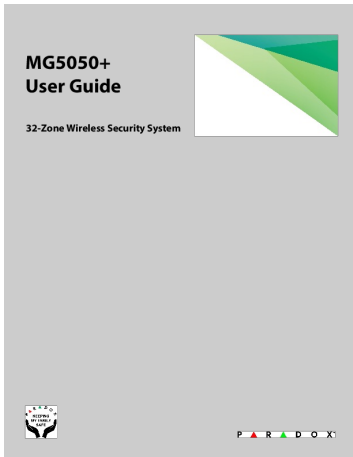


[\[pdf\] User Manual Guide Warranty](#)

MG5050 User Guide Paradox paradox mg 5050 pcb korisnicko upustvo engleskimasterbc co rs static documents engleski manual ENGMG5050 TurvasüsteemidMG5050 kasutusjuhendparadox engleskiparadox ee 2024 02 kasutusjuhendmasterbc TurvasüsteemidParadox Alarm Main Board 16 Hardwired on board with zone doubl CustomLinkMG5050 kasutusjuhendMain Guideparadox kasutusjuhendcdn shopify s files 1 0646 0555 2846 v 1756279891masterbc ||| ||| MG5050 User Guide 32-Zone Wireless Security System Warranty For complete warranty information on this product please refer to the Limited Warranty Statement found on the website www.paradox.com/terms. Your use of the Paradox product signifi ||| MG5050 User Guide 32-Zone Wireless Security System Warranty For complete warranty information on this product please refer to the Limited Warranty Statement found on the website www.paradox.com/terms. Your use of the Paradox product signifi MG5050 User Guide 32-Zone Wireless Security System Warranty For complete warranty information on ... Overview

.....12 **K32LCD** Keypad Overview
.....

 
lang:en score:35 filesize: 1.93 M page_count: 28 document date: 2022-07-13

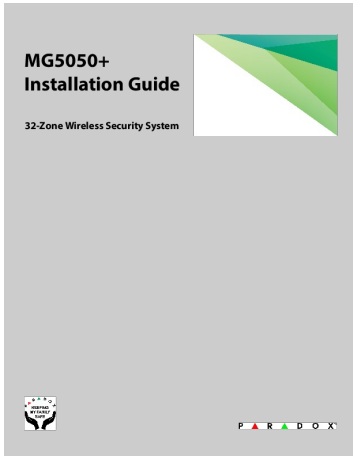

[\[pdf\] Installation Guide Specifications Guide](#)


MG5050 Installation Guide Paradox includes location mounting earth ground AC power backup battery PCB layout metal box auxiliary telephone line and alarm paradox mg5050 installation guideshop sotbg eu documents paradox guide srsItd AfmBOoqQapAnk a17QHpLubYmihMuldl2BMdYBE35v1iCcuevNCeBluc ||| MG5050 Installation Guide 32-Zone Wireless Security System Table of Contents Introduction43 Display Entry Delay on LCD keypad **K32LCD**44 Display Exit Delay on LCD keypad K...

 lang:en score:34 filesize: 1.8 M page_count: 52 document date: 2022-02-24

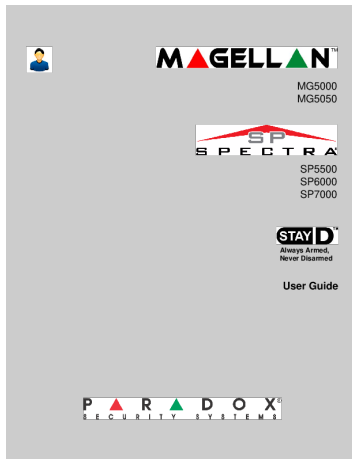


[\[pdf\] User Manual Guide Warranty](#)

 MG SP User Guide English MGSP EU12 Paradox Spectra Series The Monitoring Center functionalities of a keypad refer to the REM3 Manual for more information following table describes visual and auditory feedback REM2 2 Settings For security reasons write only user s name not their code 4 Digit Codes N 6 *Programmed by your installer is most advanced remote control as it has all themonitoringcenter manuals MG5000 MG5050 SP5500 SP6000 SP7000 Always Armed, Never Disarmed User Guide Warranty For complete w ... display ON = Alarm s occurred page 17 BYP Bypass programming ON = Zone s bypassed page 17 **K32LCD** Keypad Overview Off Key: ON = Disarmed OFF = System armed Light AC : ON = Power on OFF = P... lang:en **score:34** filesize: 506.59 K page_count: 32 document date: 2008-08-29

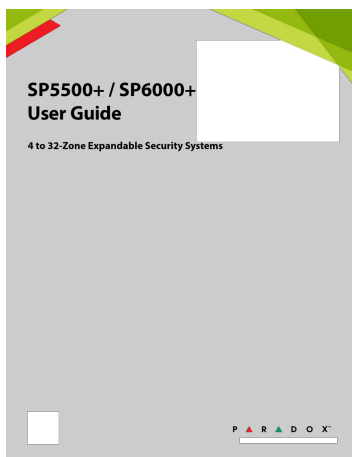

[Paradox SP5500+/SP6000+ User Guide: Expandable Security Systems](#)

 Comprehensive user guide for Paradox SP5500+ and SP6000+ expandable security systems. Learn about installation, operation, features like StayD, arming/disarming, remote controls, and communication options. lang:en **score:33** filesize: 1.65 M page_count: 28 document date: 2003-04-02

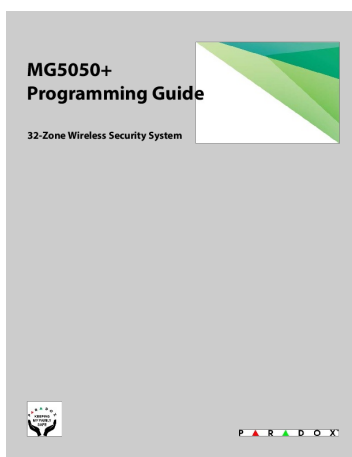

[MG5050+ Programming Guide for 32-Zone Wireless Security System](#)

A comprehensive programming guide for the Paradox MG5050+ 32-Zone Wireless Security System, detailing installation, configuration, and operational settings. lang:en **score:33** filesize: 1.2 M page_count: 64 document date: 2022-02-24




[pdf] Datasheet

Pyronix Paradox kit KIT LCD MG5050 PYRONIX By Demes PAR258 data sheet en backend bydemes Admin Productos q name type datasheet size null productIdiomald 0 FromSupport false icon src support center MANUALES GUIDES INTRUSION PARADOX MAGELLAN SP TECHNICAL |||

PAR-258 KIT LCD MG5050 PYRONIX KIT COMPOSED BY: 1X PAR-7 CENTRAL PCBMG5050 HYBRID OF 5 ZONES 10 W ... : High quality big box with 2,2 transformer, Amp included. 7Ah battery capacity.1x PAR-6N keyboard **K32LCD** : LCD keyboard with 2 partitions.3x PYRO-7 detectors KX15DT : Double technology Pyronix det...

 lang:es score:33 filesize: 171.92 K page_count: 1 document date: 2018-12-04

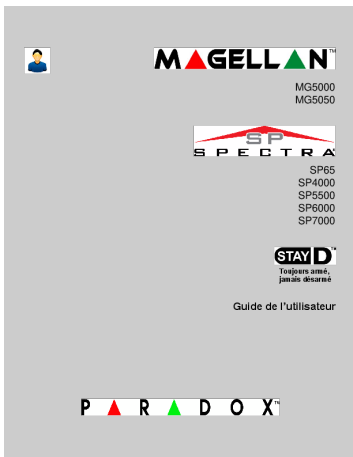

[pdf] Guide

MGSP Guide de l'utilisateur Français FU14 User French norelcosafecam site files Paradox MG5000 MG5050 SP65 SP4000 SP5500 SP6000 SP7000 Toujours arm, jamais dsarm Guide de l'utilisateur G ... de la zone 1 0 10 et la maintenir enfonce. Tonalit d acceptation = Carillon activ Pour le **K32LCD** : Appuyer sur la touche et la maintenir enfonce. Appuyer sur 1 pour slectionner les zon...

 
lang:fr score:32 filesize: 640.6 K page_count: 32 document date: 2011-01-19



[pdf] Guide

MG SP Programming Guide English MGSP EP17 bkgrupe It 80 docs Apsauga Centrales Paradox 32-Zone Wireless Transceiver Security Systems MG5000 V3.2 MG5050 V3.2 5- to 32-Zone Expandable Secur52 Daylight Savings Programming 21 LCD Keypad Labels **K32LCD**54 Keypad Programming

lang:en score:32 filesize: 2.14 M page_count: 76 document date: 2008-07-10

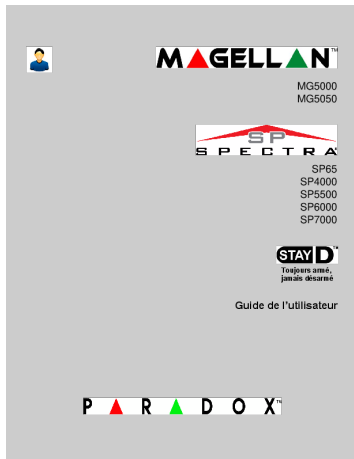

[pdf] Guide

MGSP Guide de l'utilisateur Français FU14 Télécharger Paradox Clavier LCD 2 Grado K32LCD User frances Spectra tienda24hs WebRoot StoreES Shops 62148069 541F C39B FBCB CF2C B2EC C0A8 2ABA 48CE ||| MG5000 MG5050 SP65 SP4000 SP5500 SP6000 SP7000 Toujours arm, jamais dsarm Guide de l'utilisateur G ... de la zone 1 0 10 et la maintenir enfoncée. Tonalité d'acceptation = Carillon activé Pour le **K32LCD** : Appuyer sur la touche et la maintenir enfoncée. Appuyer sur 1 pour sélectionner les zones... lang:fr score:32 filesize: 621.37 K page_count: 32 document date: 2014-09-22



[pdf] User Manual Installation Guide Guide

PARADOX SR230 Outdoor Wireless Siren with Built-in Strobe Light Installation Guide KDYSR230 ekavouris Ficha TécnicaSirena inalámbrica para equipo de alarma 30W SR130cdn shopify s files 1 0269 1088 3897 v 1678401238 ||| SR230 Outdoor Wireless Siren with Built-in Strobe Light Installation Manual Introduction The SR230 ... entering the section to display the siren signal strength that the panel receives. Requires keypad **K32LCD** V1.3 or higher. Label Siren 0811 - 0814 691 - 694 - Labels identify sirens when ... lang:en score:32 filesize: 157.6 K page_count: 2 document date: 2022-03-16



[pdf] Guide Warranty


SP Series User Guide Paradox SPplus GuideSP5500 Express Alarmspplus series user guideexpressalarm.cz documents sp5500 cs v spplus guide GuideSPplus GuideSP7000 AlarmSP5500 guidespplus sp7000 AlarmSP6000 sp6000 ||| ||| SP5500 / SP6000 / SP7000 User Guide 4 to 32-Zone Expandable Security Systems Warranty For complete warranty information on this product please refer to the Limited Warranty Statement found on the website www.paradox.com/terms. Your use of t ||| SP5500 / SP6000 / SP7000 User Guide 4 to 32-Zone Expandable Security Systems Warranty For complete warranty information on this product please refer to the Limited Warranty Statement found on the website www.paradox.com/terms. Your use of t SP5500 / SP6000 / SP7000 User Guide 4 to 32-Zone Expandable Security Systems Warranty For compl ...

.....12 **K32LCD** Keypad

Overview

 lang:en score:32 filesize: 1.59 M page_count: 28 document date: 2022-06-30



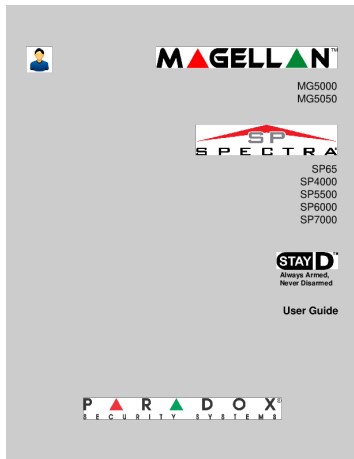


[\[pdf\]](#) Guide Warranty

MGSP User Guide English EU14 Paradox K35 32 Character Hardwired Fixed Icon LCD Keypad Module

TremTech Electrical SystemsK35 Guidestore tremtech content |||

 MG5000 MG5050 SP65 SP4000 SP5500 SP6000 SP7000 Always Armed, Never Disarmed User Guide Warranty Fo ... display ON = Alarm s occurred page 17 BYP Bypass programming ON = Zone s bypassed page 17 **K32LCD** Keypad Overview Off Key: ON = Disarmed OFF = System armed Light AC : ON = Power on OFF = P... lang:en **score:32** filesize: 522.75 K page_count: 32 document date: 2010-03-30

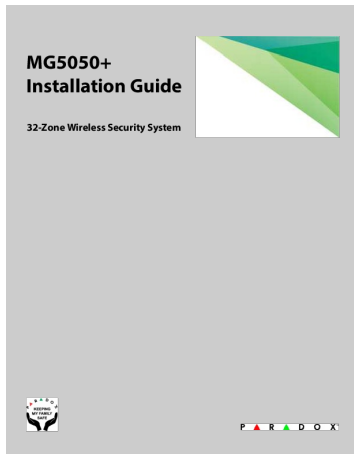

[MG5050+ Installation Guide: 32-Zone Wireless Security System](#)

Comprehensive installation guide for the Paradox MG5050+ 32-Zone Wireless Security System. Covers features, specifications, programming methods, wiring, and compliance.

lang:en **score:31** filesize: 1.82 M page_count: 52 document date: 2022-08-30



[\[pdf\]](#) User Manual Guide Warranty

MGSP EU16 Paradox User Manual Castle Security castlesecurity au 2020 07 |||

MG5000 MG5050 SP65 SP4000 SP5500 SP6000 SP7000 Always Armed, Never Disarmed User Guide Warranty Fo ... 0V, K10H and K636: Press hold the zone key 1 to 0 10 . Accept beep = chime on. For K32LCD, **K32LCD** : Press and hold the key. Press 1 to select which zone to chime or press 2 to configu...

lang:en **score:31** filesize: 792.93 K page_count: 32 document date: 2022-06-22




[\[pdf\]](#) Decleration of Conformity

Ludovico Gullifa Certificate K32LCD KITSP 11 PARADOX 213176 true securimport web content |||

Certificate of Conformity Product Certification Scheme 5 Certificate No. 30063-03-19-INT This certificate applies to the product Control and indicating equipment with name and/or type designation **K32LCD** Placed on the market by Paradox Security Systems Ltd 6 Milton Street, Freeport, Grand Bahama, 5 ...

 
lang:en **score:30** filesize: 285.45 K page_count: 3 document date: 2019-05-07

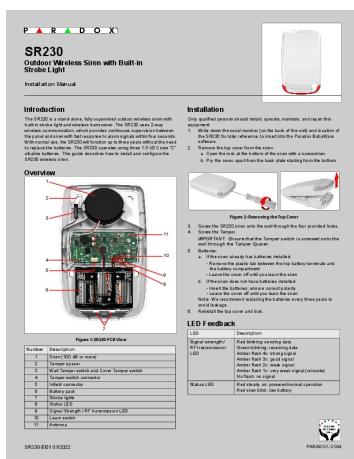

[Paradox SR230 Wireless Siren Installation Guide | Outdoor Strobe Security](#)

This manual provides installation, programming, and specification details for the Paradox SR230 Outdoor Wireless Siren with Built-in Strobe Light. Learn how to set up and integrate the SR230 with Paradox security systems.

 lang:en **score:30** filesize: 452.91 K page_count: 2 document date: 2022-12-07

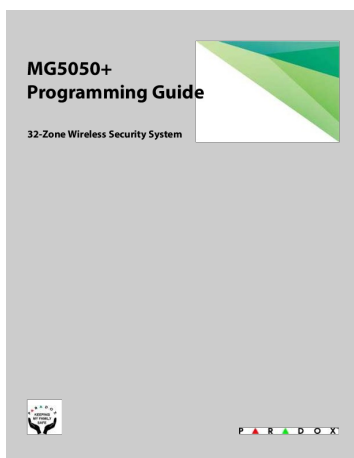

[\[pdf\]](#) Guide Warranty

MG5050 Programming Guide Paradox Ghid programare Centrala alarma antifractie wireless Magellan spy shop ro media custom upload |||


MG5050 Programming Guide 32-Zone Wireless Security System Warranty For complete warranty informat ... so be used 2 Press and hold three seconds for ARM STAY = ON 3 Zone number ENTER K35, K32 , **K32LCD** = two digits: 01 to 32; K636, K10V/H = one digit: 1 to 0 10 NOTE: To erase a keypad zone ...

lang:en **score:30** filesize: 1.13 M page_count: 64 document date: 2022-07-18



[\[pdf\]](#) User Manual Guide

MGSP Reference and Installation Manual Français FI11 PARADOX SP6000 GUIDE D INSTALLATION
alarmeprovinciale upload fichiers Alarme Provinciale Magellan Spectra SP 6 2 Schéma de la carte circuits
imprimés du MG5050 Paradox ou visitez notre site Web au paradox Pour utiliser le French 32 Zone
Wireless Alarm Panel TremTech Electrical Systems Fr store tremtech content |||
MG5000 V2.40 MG5050 V2.40 SP5500 V2.40 SP6000 V2.40 SP7000 V2.40 Rfrence
et Installation Nous espron ... tgr optionnel Porte maximale Gnralement 9-16 Vc.c.
K32 : 170 mA, K10V/H : 95 mA, K32RF : 40 mA, **K32LCD** : 110 mA Longueur
maximale de filage de 230 m 750 pi Les spcifications sont sujettes chan...
lang:fr **score:30** filesize: 1.79 M page_count: 72 document date: 2008-10-14

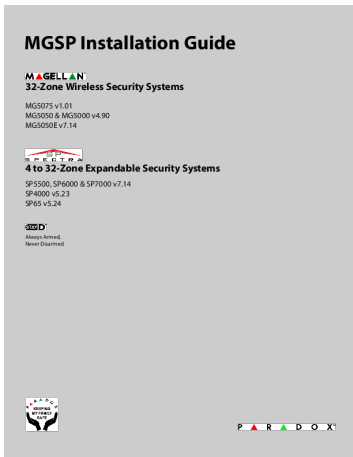 

[\[pdf\]](#) User Manual Installation Guide Specifications Guide

MGSP Installation Guide Rev 16 Paradox spy shop ro Always Armed Never Disarmed SP5500 SP6000
SP7000 v7 14 SP4000 v5 23 SP65 24 MG5075 v1 01 MG5050 MG5000 v4 90 MG5050E Manual de
instalare Centrala alarma antifracție wireless Magellan 32 zone coduri utilizatori 512 evenimente p
fileuploader d 0 file custom upload |||
MGSP Installation Guide 32-Zone Wireless Security Systems MG5075 v1.01
MG5050 MG5000 v4.90 MG5050E 59
Display Entry Delay on LCD keypad **K32LCD** 60
Display Exit Delay on LCD keypad K32...
lang:en **score:30** filesize: 4.57 M page_count: 68 document date: 2019-12-19