

[Manuals.plus](#) /

› [ABAC](#) /

› ABAC B26B/200 Air Compressor User Manual

ABAC B26B/200

ABAC B26B/200 Air Compressor

INSTRUCTION MANUAL

Introduction

This manual provides essential information for the safe and efficient operation, setup, maintenance, and troubleshooting of your ABAC B26B/200 air compressor. Please read these instructions carefully before using the product and retain them for future reference. Understanding this manual will help ensure the longevity and optimal performance of your compressor.

1. Setup

Before initial use, ensure all components are present and undamaged. The ABAC B26B/200 compressor is designed for easy setup and mobility.

- **Unpacking:** Carefully remove the compressor from its packaging. Inspect for any shipping damage.
- **Component Check:** Verify that the included 5-piece kit and all other accessories are present.
- **Positioning:** Place the compressor on a stable, level surface in a well-ventilated area. The rubber wheels facilitate easy movement.
- **Power Connection:** Connect the compressor to a standard 230 Volt power supply. Ensure the power outlet is properly grounded and capable of handling the compressor's electrical requirements.
- **Initial Inspection:** Before starting, check all connections and ensure the air tank drain valve is closed.



Image 1: The ABAC B26B/200 air compressor, showcasing its robust design and 200-liter air tank. The compressor is equipped with wheels for mobility and a control panel for operation.

2. Operating Instructions

Follow these steps for safe and effective operation of your ABAC B26B/200 air compressor.

1. **Power On:** Plug the compressor into the 230 Volt power supply and switch it on. The compressor will begin to build pressure in the 200-liter tank.
2. **Monitor Pressure:** Utilize the dual pressure gauges to monitor both the tank pressure and the regulated output pressure.
3. **Adjust Output Pressure:** Use the air outlet with pressure regulation to set the desired working pressure for your tools.
4. **Connect Tools:** Attach your pneumatic tools to the quick coupling for a secure and efficient connection.
5. **Applications:** The compressor is suitable for various tasks, including:
 - Blowing and cleaning tasks.
 - Inflating tires for cars, bicycles, and balls.
 - Painting with airbrushes or spray guns.

- Stapling and nailing with pneumatic tools.
- Using impact wrenches.
- Pressure washing with an air/water gun.

6. **Power Off:** After use, switch off the compressor and unplug it from the power supply.
7. **Depressurize:** Always depressurize the tank after use by opening the drain valve or using an air tool until the pressure drops to zero.

Safety Note: Always wear appropriate personal protective equipment (PPE) such as safety glasses and hearing protection when operating the compressor and pneumatic tools. Ensure adequate ventilation to prevent the buildup of fumes from painting or other applications.

3. Maintenance

Regular maintenance is crucial for the longevity and safe operation of your ABAC B26B/200 air compressor. Always disconnect the compressor from the power supply before performing any maintenance.

- **Drain Condensate:** Daily or after each use, drain the condensate from the air tank. Moisture can accumulate and lead to rust, compromising tank integrity. Locate the drain valve at the bottom of the tank and open it until all water is expelled.
- **Check Air Filter:** Periodically inspect and clean or replace the air filter. A clogged filter reduces efficiency and can damage the pump.
- **Inspect Belts:** For belt-driven compressors, regularly check the tension and condition of the drive belt. Adjust or replace if necessary.
- **Check Oil Level:** If your compressor is oil-lubricated (which is typical for a belt-driven unit with a cast iron cylinder), check the oil level regularly and top up with the recommended compressor oil as needed. Refer to the oil sight glass or dipstick.
- **General Cleaning:** Keep the compressor clean and free of dust and debris, especially around the motor and pump cooling fins, to ensure proper heat dissipation.
- **Component Integrity:** Periodically inspect hoses, fittings, and gauges for signs of wear, damage, or leaks. The cast iron cylinder and aluminum piston are designed for durability, but regular checks are still important.

4. Troubleshooting

This section provides solutions to common issues you might encounter with your ABAC B26B/200 air compressor. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Compressor does not start	No power supply; tripped circuit breaker; faulty switch.	Check power connection and outlet; reset circuit breaker; contact service if switch is faulty.
Low air pressure or slow pressure build-up	Air leaks in hoses or fittings; clogged air filter; worn piston rings or valves.	Check all connections for leaks and tighten; clean or replace air filter; contact service for internal component issues.
Excessive noise or vibration	Loose components; worn bearings; improper belt tension.	Inspect and tighten all fasteners; check belt tension; contact service for internal mechanical issues.

Problem	Possible Cause	Solution
Moisture in air output	Condensate not drained from tank; high humidity.	Drain the air tank regularly; consider an air dryer for sensitive applications.

5. Specifications

Key technical specifications for the ABAC B26B/200 air compressor.

Feature	Detail
Brand	ABAC
Model Name	B26B/200
Voltage	230 Volt
Power Source	Air-powered (ad_aria)
Tank Capacity	200 Liters
Item Weight	147 Kilograms
Components Included	Kit 5 pieces
Recommended Uses	Airbrushing, Inflation
Country of Origin	Italy

6. Warranty Information

Specific warranty terms and conditions for the ABAC B26B/200 air compressor are typically provided at the point of purchase or within separate documentation from the manufacturer. Please refer to your purchase receipt or contact the seller directly for detailed warranty information, including coverage period and claim procedures.

7. Customer Support

For technical assistance, spare parts, or any inquiries regarding your ABAC B26B/200 air compressor, please contact the retailer from whom you purchased the product. You may also visit the official ABAC website for further support resources or to locate an authorized service center.