

Girmi MP2000

Girmi MP2000 Bread Maker Instruction Manual

Model: MP2000

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Girmi MP2000 bread maker. Keep this manual for future reference.

- Always ensure the appliance is unplugged from the power outlet before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Do not use outdoors.
- Do not use the appliance for other than intended use.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not let cord hang over edge of table or counter or touch hot surfaces.

2. PRODUCT OVERVIEW

The Girmi MP2000 is an automatic bread maker designed to simplify the process of baking fresh bread at home. It features multiple programs, adjustable loaf sizes, and crust settings.

Components

- Main Unit with Control Panel and LCD Display
- Removable Non-Stick Bread Pan
- Kneading Paddle

- Measuring Cup
- Measuring Spoon
- Hook (for removing kneading paddle)





Image: Girmi MP2000 Bread Maker with the lid open, revealing the interior bread pan and the kneading paddle. The control panel is visible at the front.



Image: A detailed view of the interior of the bread pan, showing the non-stick coating and the kneading paddle securely in place at the bottom.



Image: The removable bread pan with its handle, designed for easy insertion and removal from the bread maker.



Image: A close-up of the electronic control panel, featuring the LCD screen, 'MENU', 'WEIGHT', 'COLOR SETTING', 'TIMER', and 'START/STOP' buttons, along with a list of programs.

3. SETUP AND FIRST USE

Unpacking

Carefully remove the bread maker and all accessories from the packaging. Remove any protective films or stickers.

Initial Cleaning

1. Wash the bread pan and kneading paddle with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
3. Ensure all parts are dry before assembly.

Placement

Place the bread maker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the appliance.

4. OPERATING INSTRUCTIONS

Adding Ingredients

Always add ingredients in the order specified by your recipe, typically liquids first, then dry ingredients, and finally yeast. Ensure the kneading paddle is correctly installed in the bread pan before adding ingredients.

Control Panel Functions

- **MENU:** Press to select one of the 19 pre-programmed cycles.
- **WEIGHT:** Press to select the desired loaf size (500g, 750g, or 1000g).
- **COLOR SETTING:** Press to choose your preferred crust darkness (Light, Medium, Dark).
- **TIMER (+/-):** Use these buttons to set the delay timer for deferred baking, up to 15 hours.
- **START/STOP:** Press once to start a program. Press and hold for a few seconds to stop a program.

Program Selection

The Girmi MP2000 offers 19 pre-programmed settings for various types of bread and dough. Refer to the control panel for the full list:

1. SOFT
2. FRENCH
3. WHOLE WHEAT
4. QUICK
5. SWEET
6. ULTRAFAST
7. GLUTEN FREE
8. DOUGH
9. KNEAD
10. CAKE
11. SANDWICH
12. BUTTERMILK BREAD
13. RICE BREAD
14. CORN BREAD
15. YOGURT
16. JAM
17. BAKE
18. FERMENT
19. CUSTOM

For specific recipes and ingredient quantities, consult a dedicated bread maker recipe book or online resources.



Image: The Girmi MP2000 bread maker positioned on a kitchen counter, showcasing its compact design. A cutting board with freshly sliced bread is placed beside it.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your bread maker.

After Each Use

1. Unplug the appliance and allow it to cool completely before cleaning.
2. Remove the bread pan. If the kneading paddle is stuck in the bread, use the provided hook to carefully remove it.
3. Wash the bread pan and kneading paddle with warm, soapy water. Do not use metal utensils or abrasive cleaners as they can damage the non-stick coating.
4. Rinse and dry all parts thoroughly.

Exterior Cleaning

Wipe the exterior of the bread maker with a soft, damp cloth. Do not use harsh chemicals or abrasive materials. Never immerse the main unit in water.

6. TROUBLESHOOTING

If you encounter issues with your Girmi MP2000 bread maker, refer to the following common problems and solutions:

- **Bread does not rise:**
 - Check yeast freshness and quantity.
 - Ensure water temperature is correct (not too hot or cold).
 - Verify that the correct program was selected.
- **Bread is too dense:**
 - Too much flour or not enough liquid.
 - Incorrect yeast amount.
 - Program cycle interrupted.
- **Kneading paddle stuck in bread:**
 - Allow bread to cool slightly before attempting to remove.
 - Use the provided hook tool to carefully extract the paddle.
- **Machine not starting:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check if the bread pan is correctly inserted.
 - Press the START/STOP button firmly.
- **Uneven crust color:**
 - Ensure ingredients are measured accurately.
 - Check the 'COLOR SETTING' to ensure your desired crust level is selected.

If problems persist, please contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Girmi
Model Number	MP2000
Power	600 Watts

Voltage	AC 220-240 V, 50/60 Hz
Product Dimensions	25 x 33 x 29.5 cm
Product Weight	4 kg
Configurable Loaf Sizes	500g / 750g / 1000g (1 kg max)
Pre-configured Programs	19
Crust Levels	3 (Light, Medium, Dark)
Delay Timer	Up to 15 hours
Automatic Shut-off	Yes
Main Material	Non-stick coated metal pan, plastic housing, glass viewing window



Image: A diagram illustrating the dimensions of the Girmi MP2000 bread maker, showing a width of 35cm, a depth of 28cm, and a height of 40cm.

8. WARRANTY AND SUPPORT

Warranty Information

This product comes with a warranty certificate. Please refer to the certificate for detailed terms and conditions, including the warranty period and coverage.

Customer Support

For technical assistance, spare parts, or any questions regarding your Girmi MP2000 bread maker, please contact Girmi customer service. Contact details can typically be found on the manufacturer's official website or on the warranty certificate.

© 2024 Girmi. All rights reserved.