

## XIAOMI XMZP601YM

# Xiaomi Selfie Stick Tripod User Manual

Model: XMZP601YM

## INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Xiaomi Selfie Stick Tripod. Please read this manual thoroughly before operating the device and retain it for future reference.

The Xiaomi Selfie Stick Tripod is a versatile accessory designed for mobile photography and videography. It functions as both an extendable selfie stick and a stable tripod, featuring a wireless Bluetooth shutter for convenient remote control.

## PRODUCT OVERVIEW



**Figure 1:** Xiaomi Selfie Stick Tripod (Folded). This image shows the compact design of the selfie stick when not in use, highlighting the integrated phone holder and remote button.



**Figure 2:** Xiaomi Selfie Stick Tripod in use as a tripod with a smartphone, alongside the detachable Bluetooth remote. This illustrates the product's dual functionality and wireless control.



**Figure 3:** Various dimensions of the Xiaomi Selfie Stick Tripod, including folded length, extended length, and phone holder size. This provides a clear understanding of the product's physical measurements.



**Figure 4:** Close-up views of key components, including the phone clamp, Bluetooth remote, and the extendable monopod section. This highlights the design and functionality of individual parts.

## SETUP

### Package Contents

- Xiaomi Selfie Stick Tripod (Model: XMZP601YM)
- Wireless Bluetooth Shutter Remote

- User Manual (this document)

## Battery Installation (Bluetooth Remote)

The Bluetooth remote requires 1 Lithium Ion battery. Ensure correct polarity when inserting the battery.

1. Locate the battery compartment on the back of the Bluetooth remote.
2. Open the battery cover.
3. Insert the Lithium Ion battery, observing the positive (+) and negative (-) markings.
4. Close the battery cover securely.

## Pairing the Bluetooth Remote

To use the wireless shutter function, you must pair the remote with your smartphone.

1. Ensure the Bluetooth remote is powered on.
2. On your smartphone, navigate to the Bluetooth settings.
3. Enable Bluetooth.
4. Search for available devices. The remote should appear as "XMZP601YM" or similar.
5. Select the remote to pair. Once paired, the indicator light on the remote will change (e.g., stop blinking).

*Note: The remote is compatible with iOS 5.0 and above, and Android 4.2 and above.*

## OPERATING INSTRUCTIONS

---

### Using as a Selfie Stick

1. Gently pull the phone holder upwards to extend the monopod arm.
2. Place your smartphone securely into the adjustable phone holder. Ensure the phone is centered and stable.
3. Adjust the length of the monopod arm to your desired distance (up to 850 mm).
4. Angle the phone holder for optimal shot composition. The holder supports multi-angle shooting, including 90-degree vertical shots.
5. Use the paired Bluetooth remote to trigger the camera shutter.

### Using as a Tripod

1. From the folded position, gently pull the bottom section downwards to reveal the tripod legs.
2. Spread the three tripod legs outwards until they lock into a stable position.
3. Place the tripod on a flat, stable surface.
4. Extend the monopod arm to the desired height (up to 850 mm).
5. Secure your smartphone in the phone holder.
6. Use the paired Bluetooth remote to trigger the camera shutter from a distance (up to 10 meters).

*Note: The tripod function is suitable for both table-top and floor use.*

## MAINTENANCE

---

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the selfie stick tripod in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the Bluetooth remote will not be used for an extended period, remove the battery to prevent leakage.

- **Handling:** Avoid dropping the device or subjecting it to strong impacts, as this may damage internal components.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Bluetooth remote not pairing.	Remote battery is low or dead. Bluetooth on phone is off. Remote is too far from phone.	Replace the battery in the remote. Ensure Bluetooth is enabled on your smartphone. Move the remote closer to your phone (within 10m).
Shutter button not working.	Remote not paired. Camera app not open or not configured for volume button shutter.	Re-pair the Bluetooth remote. Ensure your camera application is open and that its settings allow for volume button control of the shutter.
Tripod unstable.	Legs not fully extended or locked. Uneven surface.	Ensure all three tripod legs are fully extended and locked into position. Place the tripod on a flat, stable surface.
Monopod arm not extending/retracting smoothly.	Dust or debris in the telescopic mechanism.	Gently clean the telescopic sections with a soft, dry cloth. Avoid forcing the mechanism.

## SPECIFICATIONS

- **Model:** XMZP601YM
- **Brand:** Xiaomi
- **Product Dimensions:** 1.97 x 1.97 x 9.45 inches (folded)
- **Item Weight:** 5.6 ounces (160 grams)
- **Extendable Height:** 180 mm to 850 mm (7 inches to 33.5 inches approx.)
- **Bluetooth Version:** 3.0
- **Bluetooth Range:** Up to 10 meters
- **Compatible OS:** iOS 5.0 and above, Android 4.2 and above
- **Compatible Devices:** Smartphones, GoPro cameras
- **Battery Type (Remote):** 1 Lithium Ion battery (required)
- **Color:** Black

## WARRANTY INFORMATION

This Xiaomi Selfie Stick Tripod (Model: XMZP601YM) comes with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or natural disasters. Please retain your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Xiaomi customer support through their official website or the retailer where the product was purchased.

For more information, visit the [Xiaomi Store on Amazon](#).

