

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MANGROOMER](#) /
- › [MANGROOMER™ Ultimate PRO Self-Haircut Kit User Manual](#)

## MANGROOMER 1999-6

# MANGROOMER™ Ultimate PRO Self-Haircut Kit User Manual

Model: 1999-6

## INTRODUCTION

---

The MANGROOMER™ Ultimate PRO Self-Haircut Kit is a comprehensive 14-piece set designed for convenient at-home hair cutting. This kit features Lithium MAX™ power, an ergonomic design, and self-sharpening stainless steel blades, offering precise control and easy maintenance for various hair lengths and styles. This manual provides detailed instructions for safe and effective use, setup, operation, and maintenance of your new self-haircut kit.

## IMPORTANT SAFETY INFORMATION

---

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, injury, or damage to the product.

- **CAUTION: Risk of electric shock. Always read the user manual before use.**
- Do not immerse the appliance in water or use it in a shower or bath.
- Keep the appliance away from children.
- Ensure the power cord is not damaged before use.
- Unplug the appliance before cleaning or maintenance.
- Use only the charger supplied with the appliance.

## WHAT'S IN THE BOX

---

Your MANGROOMER™ Ultimate PRO Self-Haircut Kit includes the following components:

- MANGROOMER™ Ultimate PRO Self-Haircut Trimmer
- 9 Length Guide Combs (1.5mm, 2.0mm, 2.5mm, 3.0mm, 4.5mm, 6mm, 9mm, 12mm, 15mm)
- Power Adapter/Charger
- Cleaning Brush
- Blade Oil

- Convenient Storage and Travel Case
- Instruction Manual



Figure 1: All components included in the MANGROOMER Ultimate PRO Self-Haircut Kit.

## SETUP AND CHARGING

---

Before first use, ensure your MANGROOMER™ Ultimate PRO Self-Haircut Kit is fully charged.

1. **Initial Charge:** Connect the power adapter to the trimmer and plug it into a wall outlet. The charging indicator light will illuminate (red during charging, green when fully charged). Allow approximately 8-12 hours for the initial full charge.
2. **Battery Life:** The new LITHIUM MAX™ battery allows for fast recharging and extended cordless use. A fully charged unit provides ample operating time.
3. **Corded and Cordless Use:** The trimmer can be used both corded (while plugged in) and cordless for maximum versatility.



Figure 2: Charging indicator light on the trimmer.

## OPERATING INSTRUCTIONS

---

The MANGROOMER™ Ultimate PRO Self-Haircut Kit is designed for easy and effective self-haircuts. Follow these steps for optimal results:

### 1. Selecting a Guide Comb

- Choose one of the 9 length guide combs (1.5mm, 2.0mm, 2.5mm, 3.0mm, 4.5mm, 6mm, 9mm, 12mm, 15mm) based on your desired hair length.
- Attach the selected comb securely to the trimmer head. Ensure it clicks into place.



Figure 3: Selection of guide combs for different hair lengths.

## 2. Ergonomic Handling

- The trimmer features an ergonomic rubberized design that fits comfortably in your hand, providing maximum control.
- Hold the trimmer firmly but comfortably, ensuring a secure grip during use.



Figure 4: Proper ergonomic grip for the trimmer.

### 3. Cutting Your Hair

- Turn on the trimmer by pressing the power button.
- Start with a longer guide comb if you are unsure of the desired length, and gradually switch to shorter combs if needed.
- Move the trimmer slowly and evenly against the direction of hair growth.
- For the top of your head, use smooth, overlapping strokes.
- For the back of your head and around the ears, the ergonomic design allows for easy maneuvering.
- The self-sharpening stainless steel blades will precisely cut to the contour of your head.



MANGROOMER® ULTIMATE PRO Self-Haircut Kit

Introducing the New MANGROMER® ULTIMATE PRO Do-It-Yourself Hair Cut Kit! Give yourself the ULTIMATE CUT and never pay for a haircut again!

The MANGROOMER ULTIMATE PRO Hair Cut Kit comes with 9 length guide combs to get you the exact length and style – Including fades, crews and buzz cuts. The ergonomic rubberized clipper fits easily in your hand for maximum control to effectively cut and trim the back, front, sides, around the ear, neckline, and sideburns.

Start with a longer guard and then adjust to a smaller guard to get that exact length you want. Remember, you can always cut more hair off but not add any back. For best results, cut against the grain of your hair from the front to the top of your head and from the back of the neck to the top of your head. Use smooth and slow passes over your head to ensure an even cut.

The self-sharpening stainless steel, hypoallergenic extra-wide blade, allows you to follow the contour of your head and easily cut large portions of your hair with each stroke. You can easily maneuver the trimmer around your ear and the back portion of your head.

To trim around your neck and sideburns, just remove the guard, expose the blade, and turn the trimmer over so the flat edge of the blade is in contact with the skin.



New LITHIUM MAX® battery allows for easy and fast re-charging, plus a Charge Light Indicator alerts you when charging (red) and fully charged (green)



Hypoallergenic extra-wide self-sharpening stainless steel blades that precisely cut to the contour of your head

### ULTIMATE PRO SELF-HAIRCUT KIT

**MANGROOMER® ULTIMATE PRO Self-Haircut Kit**  
SKU 1999-6 quick reference

- 9 Length guide combs let you cut the exact length and style – sizes include 1.5 / 2.0 / 2.5 / 3.0 / 4.5 / 6 / 9 / 12 / 15mm
- Ergonomic rubberized trimmer fits easily in your hand for maximum control to effectively cut the back, front, side of your head, neckline, sideburns and around your ears
- Hypoallergenic extra-wide self-sharpening stainless steel blades that precisely cut to the contour of your head
- New LITHIUM MAX® battery allows for easy and fast re-charging, plus a Charge Light Indicator alerts you when charging (red) and fully charged (green)
- Can be used corded and cordless for maximum versatility and convenience
- Cleans easily by rinsing with water
- Convenient storage and travel case
- Universal voltage



9 Length guide combs let you cut the exact length and style – sizes include 1.5 / 2.0 / 2.5 / 3.0 / 4.5 / 6 / 9 / 12 / 15mm

With the new Lithium Max® Power, the lithium ion battery lasts up to 3X longer than a standard NiHD/NiCad battery and enables super fast and easy recharges.

The clipper can also be used corded or cordless for maximum versatility and convenience.

Clean up is a breeze. The clipper is completely waterproof and can be cleaned by rinsing the blades and unit under the faucet. For a more thorough cleaning, just pop of the blade head by pressing the opposing side buttons and clean it separately. Also, rinse off the inside of the unit.

After cleaning the clipper, turn on the unit and apply a small amount of blade oil to the blade. This will extend and increase performance of the clipper. A small brush has been included to brush away loose hair clippings when rinsing is not available.

Never pay for a haircut again with the MANGROOMER ULTIMATE PRO Do-It-Yourself Hair Cut Kit.



Unit and blade clean easily by rinsing with water



can be used corded or cordless



What's in the Box:

ULTIMATE PRO self-haircut unit, 9 attachment combs, power adapter, blade oil, cleaning brush, safety and operating instruction manual written in English, Spanish, French and German

Figure 5: Trimming the back of the head.



Figure 6: Trimming hair around the ear.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your trimmer.

1. **Cleaning the Blades:** The trimmer is waterproof. After each use, turn off the trimmer and rinse the blades under running water to remove hair clippings.
2. For a more thorough cleaning, detach the blade assembly from the trimmer body. Use the included cleaning brush to remove any trapped hair.
3. **Oiling the Blades:** Apply a small amount of the included blade oil to the blades after cleaning, especially if rinsing with water. This helps maintain blade sharpness and prevents rust.
4. **Storage:** Store the trimmer and all accessories in the provided storage and travel case when not in use.



Figure 7: Rinsing the trimmer under water for easy cleaning.

## TROUBLESHOOTING

---

If you encounter any issues with your MANGROOMER™ Ultimate PRO Self-Haircut Kit, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is not charged or power cord is not connected properly.	Ensure the trimmer is fully charged. Check power cord connection if using corded.
Blades are pulling hair or cutting unevenly.	Blades are dull, dirty, or not properly oiled. Hair is too long for the selected comb.	Clean and oil the blades. Ensure the guide comb is securely attached. Consider using a longer comb for initial trimming if hair is very long.
Trimmer gets hot during use.	Blades may need lubrication or there's excessive friction.	Turn off the trimmer and allow it to cool. Apply blade oil. Ensure blades are clean and free of debris.

## PRODUCT SPECIFICATIONS

---

- **Model Number:** 1999-6
- **Power Source:** Lithium MAX™ Battery (rechargeable, included)
- **Blade Material:** Hypoallergenic Self-Sharpening Stainless Steel
- **Guide Combs:** 9 (1.5mm, 2.0mm, 2.5mm, 3.0mm, 4.5mm, 6mm, 9mm, 12mm, 15mm)
- **Waterproof:** Yes, for easy rinsing
- **Dimensions:** 5.25 x 4 x 8.25 inches
- **Weight:** 1 Pound
- **UPC:** 853496003990

## WARRANTY AND SUPPORT

---

MANGROOMER™ stands behind the quality of its products. For warranty information and customer support, please refer to the following:

- **Warranty:** A detailed warranty document is available for download. [Download Warranty \(PDF\)](#)
- **User Guide:** For additional details and illustrations, you can download the full user guide. [Download User Guide \(PDF\)](#)
- **Customer Support:** For further assistance or inquiries, please visit the official MANGROOMER™ store or contact their customer service.

