



[Manuals.plus](#) /

> [Greaval](#) /

> Greaval GV-8S Walkie Talkies User Manual - 16-Channel UHF Two-Way Radios

Greaval GV-8S

Greaval GV-8S Walkie Talkies Instruction Manual

Model: GV-8S

Brand: Greaval

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Greaval GV-8S 16-Channel UHF Two-Way Radios. Please read this manual thoroughly before using the devices to ensure optimal performance and safety. These radios are designed for reliable communication across various environments, offering features like VOX hands-free operation, squelch adjustment, and a built-in LED flashlight.

2. PACKAGE CONTENTS

Upon unpacking, please verify that all items listed below are present and in good condition. If any items are missing or damaged, contact customer support.



Description: This image displays the complete contents of the Greaval GV-8S walkie talkie package, including six walkie talkie units, six antennas, six batteries, six belt clips, six hand straps, six charging adapters, six earpieces, and three user manuals.

- Greaval GV-8S Walkie Talkie Unit (x6)
- Antenna (x6)
- Rechargeable Lithium-Ion Battery (x6)
- Belt Clip (x6)
- Hand Strap (x6)
- Charging Adapter (x6)
- Earpiece (x6)
- User Manual (x3)

3. PRODUCT OVERVIEW

Familiarize yourself with the various parts of your Greaval GV-8S walkie talkie:



Description: This diagram labels the key components of the Greaval GV-8S walkie talkie, including the Antenna, Channel Switch, Power/Volume knob, LED Indicator, Headphone Jack, Loud Speaker, Microphone, Flashlight, Monitor button, Push To Talk (PTT) button, and LED Torch.

- **Antenna:** For transmitting and receiving signals.
- **Channel Switch:** Rotary knob to select one of the 16 available channels.
- **Power/Volume Knob:** Turn clockwise to power on and increase volume; turn counter-clockwise to decrease volume and power off.
- **LED Indicator:** Illuminates red during transmission, green during reception.
- **Headphone Jack:** For connecting the included earpiece or other compatible audio accessories.
- **Loud Speaker:** Outputs received audio.
- **Microphone:** For speaking during transmission.
- **Flashlight (LED Torch):** Activates a small LED light for illumination.
- **Monitor Button:** Press to temporarily disable squelch and listen for weak signals.
- **Push To Talk (PTT) Button:** Press and hold to transmit your voice.



Durable Rugged Shell

Description: This image highlights the durable and rugged construction of the Greaval GV-8S walkie talkie casing, designed for resilience in various environments.

4. SETUP

4.1 Battery Installation

1. Ensure the walkie talkie is powered off.
2. Locate the battery compartment on the back of the unit.
3. Slide the battery cover latch to unlock and remove the cover.
4. Insert the Lithium-Ion battery, aligning the contacts correctly.
5. Replace the battery cover and slide the latch to lock it securely.

4.2 Charging the Battery

Before first use, fully charge the battery. A full charge typically takes 4-5 hours.



Description: This image illustrates the charging process for the Greaval GV-8S walkie talkie. The radio unit is placed in its charging dock, and a separate battery is shown in its own charging slot, indicating individual charging capability.

1. Connect the charging adapter to a power outlet.
2. Place the walkie talkie (with battery installed) into the charging cradle. The LED indicator on the charger will typically show red while charging and green when fully charged.
3. Alternatively, you can charge the battery separately by placing it directly into the charging slot on the cradle.

4.3 Attaching Accessories

- **Antenna:** Screw the antenna clockwise into the connector on top of the radio until it is finger-tight.
- **Belt Clip:** Align the belt clip with the screw holes on the back of the radio and secure it with the provided screws.
- **Hand Strap:** Thread the hand strap through the loop on the top side of the radio.
- **Earpiece:** Insert the earpiece plug into the headphone jack on the side of the radio.

Walkie Talkie

× 6



Belt Clips

× 6



Antenna

× 6



Hand Strap

× 6

User
Manual
× 3



Battery
× 6



Charger
× 6



Earpiece
× 6



Description: This image shows the Greaval GV-8S walkie talkie with an earpiece securely connected to its side port, demonstrating hands-free communication. The integrated LED flashlight is also shown emitting light, highlighting its utility feature.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Volume Adjustment

To power on the radio, rotate the Power/Volume knob clockwise. You will hear a voice prompt indicating the current channel. Continue rotating clockwise to increase the volume. To power off, rotate the knob counter-clockwise until it clicks.

5.2 Channel Selection

Rotate the Channel Switch knob on top of the radio to select one of the 16 available channels. A voice prompt will announce the selected channel number.

5.3 Transmitting and Receiving

- **To Transmit:** Press and hold the PTT (Push To Talk) button on the side of the radio. Speak clearly into the microphone. The LED indicator will glow red. Release the PTT button to stop transmitting.

- **To Receive:** Ensure the PTT button is not pressed. The radio will automatically receive signals on the selected channel. The LED indicator will glow green when a signal is received.

5.4 VOX (Voice Operated Transmission) Function

The VOX function allows for hands-free transmission. When activated, the radio will automatically transmit when it detects your voice, without needing to press the PTT button. Refer to the detailed user manual for specific instructions on activating and adjusting VOX sensitivity.

5.5 Squelch Adjustment

Squelch suppresses weak background noise when no signal is present. The GV-8S features adjustable squelch. Consult the full user manual for instructions on how to modify squelch levels to optimize reception clarity.

5.6 Scanning Function

The scanning feature allows the radio to automatically scan through active channels. This helps in finding ongoing conversations. Refer to the comprehensive user manual for details on activating and managing the scanning function.

5.7 LED Flashlight

To activate the built-in LED flashlight, press the dedicated flashlight button (often located on the side or front of the radio). Press it again to turn it off.

6. MAINTENANCE

6.1 Battery Care

- Always use the original Greaval charger and battery.
- Avoid overcharging or completely draining the battery for extended periods.
- Store batteries in a cool, dry place when not in use.
- If the radio will not be used for a long time, remove the battery.

6.2 Cleaning

- Wipe the radio's surface with a soft, damp cloth.
- Do not use harsh chemicals or abrasive cleaners.
- Ensure the radio is dry before use or charging.

7. TROUBLESHOOTING

If you encounter issues with your Greaval GV-8S walkie talkie, refer to the following common problems and solutions:

- **No Power:**
 - Ensure the battery is properly installed and fully charged.
 - Check if the Power/Volume knob is turned on.
- **Cannot Transmit or Receive:**

- Verify that all radios are on the same channel.
 - Check if the antenna is securely attached.
 - Ensure the battery has sufficient charge.
 - Confirm you are within the effective communication range.
- **Poor Audio Quality or Static:**
 - Adjust the squelch level.
 - Move to an area with fewer obstructions or electromagnetic interference.
 - Check the earpiece connection if in use.
- **Short Communication Range:**
 - Obstructions like buildings, hills, or dense foliage can significantly reduce range.
 - Ensure the antenna is correctly installed.
 - Low battery can affect transmission power.

8. SPECIFICATIONS

Feature	Specification
Model Number	GV-8S
Number of Channels	16
Frequency Range	UHF 400-470 MHz
Talking Range Maximum	1-10 Miles (environment dependent)
Battery Type	Lithium Ion (included)
Voltage	3.7 Volts
Charging Time	Approximately 4-5 hours
Item Weight	14.1 ounces (per unit)
Product Dimensions	1.3 x 2.36 x 4.53 inches
Water Resistance Level	Water Repellent
Special Features	Lightweight, Long Range, Noise Reduction, Rechargeable, VOX (Voice Operated Transmission)

9. WARRANTY AND SUPPORT

Greaval provides the following warranty coverage for your GV-8S walkie talkies:

- **Main Unit:** 18-month warranty
- **Parts:** 12-month warranty
- **Battery Pack:** 6-month free replacement

- **Returns:** 30-day hassle-free return policy

For any issues, questions, or warranty claims, please contact Greaval customer support through the Amazon message system. Our support team is available to assist you.