

Mixpresso 8541895238

Mixpresso 12-Cup Drip Coffee Maker Instruction Manual

Model: 8541895238

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. The carafe is designed for use with this appliance. It must never be used on a range top.
14. Do not place a hot carafe on a wet or cold surface.
15. Do not use a cracked carafe or a carafe having a loose or weakened handle.
16. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
17. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

2. PRODUCT OVERVIEW

The Mixpresso 12-Cup Drip Coffee Maker is designed for ease of use and consistent coffee brewing. It features a durable borosilicate glass carafe, a reusable filter, and an illuminated one-touch on/off switch.



Figure 2.1: Mixpresso 12-Cup Drip Coffee Maker

3. SETUP AND FIRST USE

Before first use, clean all removable parts according to the 'Cleaning and Maintenance' section. Run two full cycles with water only to clean the internal components.

3.1 Components

KEEP WARM FUNCTION



Figure 3.1: Key components including reusable filter, removable brew funnel, and glass carafe.

3.2 Adding Water

Open the top lid of the coffee maker. Fill the glass carafe with the desired amount of fresh, cold water. Pour the water into the water reservoir, ensuring it does not exceed the '12 MAX' mark on the water level indicator.



Figure 3.2: Water being poured into the reservoir, visible water level indicator.

3.3 Inserting Filter and Coffee Grounds

Place the reusable basket filter into the brew funnel. Add your preferred amount of ground coffee into the filter. For optimal taste, follow recommended coffee-to-water ratios.

Watch this video for a visual guide on setting up and brewing with your Mixpresso coffee maker:

Your browser does not support the video tag.

Video 3.1: Official Mixpresso guide to setting up and brewing coffee.

4. OPERATING INSTRUCTIONS

4.1 Brewing Coffee

1. Ensure the coffee maker is plugged into a standard electrical outlet.
2. Confirm water and coffee grounds are loaded as described in the 'Setup' section.
3. Place the empty glass carafe on the warming plate.
4. Press the illuminated one-touch ON/OFF switch to begin brewing. The light will indicate the unit is active.
5. The brewing process will start automatically.

4.2 Keep Warm Function

The coffee maker includes a nonstick warming plate that keeps your brewed coffee hot and flavorful after the brewing cycle is complete. The warming plate will remain active until the unit is manually turned off.



Figure 4.1: The warming plate keeps coffee at an ideal temperature.

4.3 Auto-Off Safety Function

For safety, the coffee maker is equipped with an auto-off safety function. The unit will automatically shut off after a period of inactivity to prevent overheating and save energy. Always ensure the unit is turned off when not in use.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

5.1 Daily Cleaning

1. Always unplug the appliance from the electrical outlet before cleaning.
2. Remove the reusable filter and brew funnel. Discard used coffee grounds.
3. Wash the glass carafe, reusable filter, and brew funnel in warm, soapy water. Rinse thoroughly. These parts are not dishwasher safe.
4. Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
5. Do not immerse the coffee maker base in water or any other liquid.

5.2 Descaling (Monthly or as needed)

Mineral deposits from water can build up in your coffee maker and affect its performance. Descale your coffee maker regularly:

1. Fill the water reservoir with a mixture of 1 part white vinegar and 2 parts water.
2. Place the empty carafe on the warming plate.
3. Turn on the coffee maker and let it complete half of a brewing cycle.
4. Turn off the coffee maker and let it soak for at least 15 minutes.
5. Turn the coffee maker back on and let it complete the brewing cycle.
6. Discard the vinegar solution and rinse the carafe.
7. Run 2-3 full cycles with fresh, cold water to flush out any remaining vinegar taste.

6. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	No power, no water, or brew cycle not initiated.	Check power connection. Ensure water reservoir is filled. Press the ON/OFF switch.
Coffee tastes weak.	Insufficient coffee grounds, coarse grind, or too much water.	Increase coffee grounds, use a finer grind, or reduce water.
Coffee overflows from filter basket.	Too much coffee grounds, filter clogged, or carafe not properly placed.	Reduce coffee grounds. Clean filter. Ensure carafe is centered on warming plate.
Brewing is slow.	Mineral buildup in the system.	Perform descaling procedure as described in 'Cleaning and Maintenance'.
Unit leaks water.	Water reservoir overfilled, or components not assembled correctly.	Do not overfill water reservoir. Ensure brew funnel and carafe are correctly seated.

7. SPECIFICATIONS

- **Brand:** Mixpresso
- **Model Name:** 12 Cup Drip Coffee Maker
- **Item Model Number:** 8541895238
- **Capacity:** 12 Cups
- **Color:** Black
- **Product Dimensions:** 9"D x 7"W x 12"H
- **Item Weight:** 3.68 pounds
- **Power Source:** AC adapter
- **Operation Mode:** One-Touch Automatic, Manual Fill
- **Special Features:** Auto-Off Safety Function, Reusable Removable Basket Filter, Borosilicate Glass Carafe, Easy One-Touch On/Off Switch, Nonstick Warming Plate, Transparent Water Window, Pour Spout to Prevent Spills
- **Included Components:** 12 Cup Coffee Maker Machine, Borosilicate Glass Carafe, Nonstick Warming Plate (built-in), Reusable Basket Filter, User Manual
- **Is Dishwasher Safe:** No (for removable parts)

8. WARRANTY AND SUPPORT

Mixpresso products are designed for reliability and performance. For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Mixpresso website. Please retain your proof of purchase for warranty claims.

© 2026 Mixpresso. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question